

INSTRUCTION MANUAL

2 PORT MOTER VALVE

MSB1D-10~50

MSB1DF-15~40

- Please read this instruction manual carefully before using this product, particularly the section describing safety.
- Retain this instruction manual with the product for further consultation whenever necessary.

Introduction

Thank you for choosing CKD's type MSB1D/MSB1DF motor valve.

1. Description

A motor-driven ball valve used for general industrial machines and tools.

2. Intended use

This valve is suitably used for an automatic or central control system for pipelines conveying steam, hot water.

3. General precautions

- This operation manual describes the basic matters concerning the handling of the product, including unpackaging, installation, use, and maintenance.
- The description about the installation in this manual is intended for qualified mechanics and electricians.

This should be thoroughly read before designing and installation to ensure the safety of the machine or tool and the proper handling of this product.

4. Safety precautions

- Warnings are shown in this manual as required to avoid injury, fire, and damage to your properties. They must be strictly observed.
- Warnings should be shown under different headings, i.e. Danger, Warning, and Caution, according to the degree of risk. However, they are all shown under the heading of Caution in this manual because this product is used as a component of a machine or tool.

Example of warning



【 Contents 】

1. Unpackaging	3
2. Installation	3~5
2. 1 Conditions for installation	3~4
2. 2 Piping work	4
2. 3 Wiring work	5
3. Checking before use (after installation)	6
3. 1 Appearance check	6
3. 2 Electrical check	6
3. 3 Leak check	6
4. For correct use	7
5. Overhaul and assembly	7~8
5. 1 Replacement of the actuator	7~8
5. 2 Replacement of the ball valve	8
6. Maintenance	8
6. 1 Maintenance and inspection	8
6. 2 Service parts	8
7. Troubleshooting	9~10
8. Internal construction	11
9. Circuit diagrams and description of operational mechanism	12~14
9. 1 Circuit diagrams	12
9. 2 Description of operational mechanism	13~14
10. Specifications for the product	15~16
10. 1 Model numbering system	15
10. 2 Specifications for the product	16

1. Unpackaging


- Check that the model No. indicated on the nameplate of the product is the same with that you ordered.
- Check that the rated voltage and frequency are satisfied.
- Check that the product is free of external damage.
- When the product is not used, put a seal plug in place to prevent foreign matter from entering the valve.
Remove the seal plug before piping the valve.

2. Installation

2. 1 Conditions for installation


2. 1. 1 Attitude of the valve

- The valve shall be installed at an angle within ± 90 degrees with the actuator facing upward (see Figure 1).

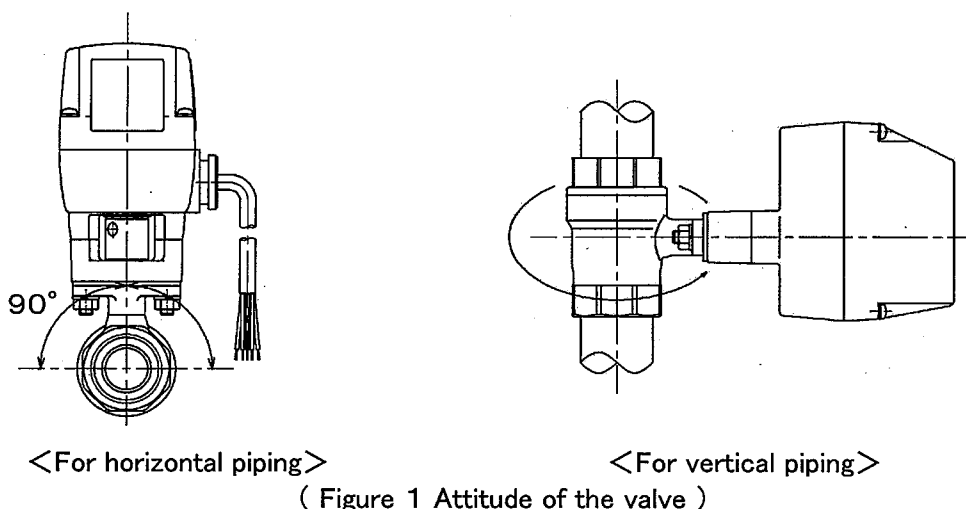

2. 1. 2 Space for maintenance

- An adequate space shall be provided to ensure the operator's safety in maintenance and troubleshooting work (see Figure 2).

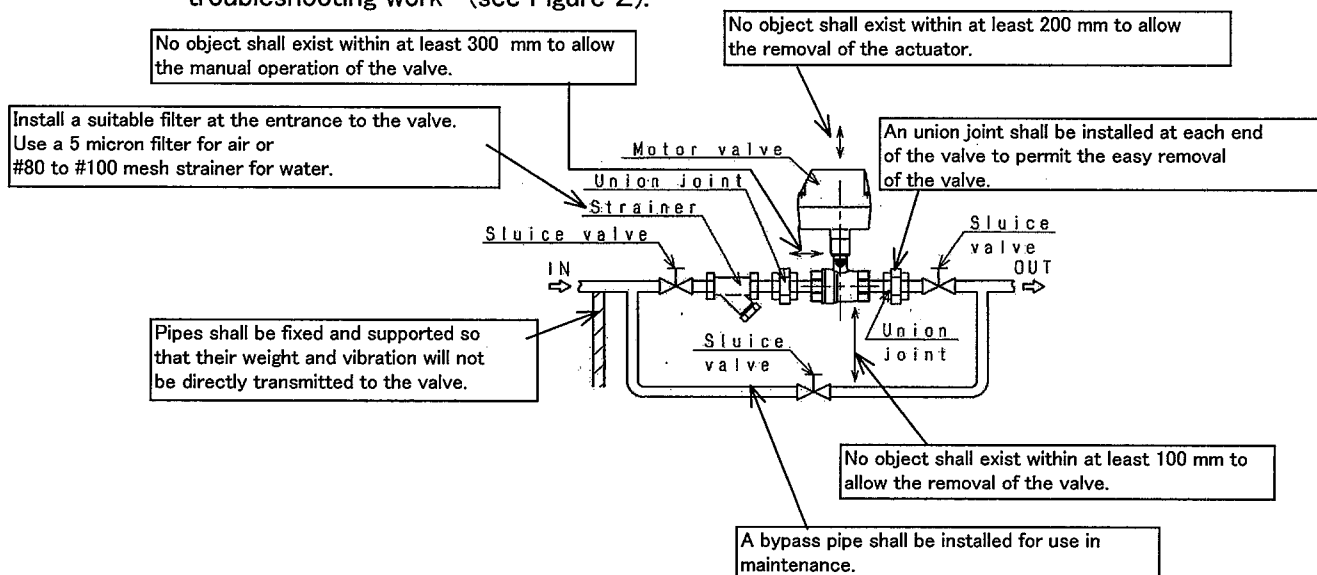

2. 1. 3 Protection of the product

- When the product is used outdoor or in a cold district, it shall be properly protected against freezing temperatures.
- When it is used for a machine or tool to be cleaned with a water jet (hose), it shall be covered or housed so that no water will enter it.


This product is dust- and water-proof as specified by IPX3, IEC-529 standard.

2. 2 Piping work

- There is no specification concerning the fluid flowing direction to be considered in piping this product.
- When piping to the cap side, screw in a pipe with the cap held with a wrench or another tool.
- When piping to the body side, screw in a pipe with the body held with a wrench or another tool.
- For the torque used for tightening pipes, see Table 2 – 1.


Table 2 – 1 Recommended pipe tightening torque

Nominal pipe diameter	Recommended pipe tightening torque
Rc3/8	31.6 [N · m] ±10%
Rc1/2	42.4 [N · m] ±10%
Rc3/4	63.3 [N · m] ±10%
Rc1	84.8 [N · m] ±10%
Rc1 ¹ / ₄	98.9 [N · m] ±10%
Rc1 ¹ / ₂	106.0 [N · m] ±10%
Rc2	134.0 [N · m] ±10%

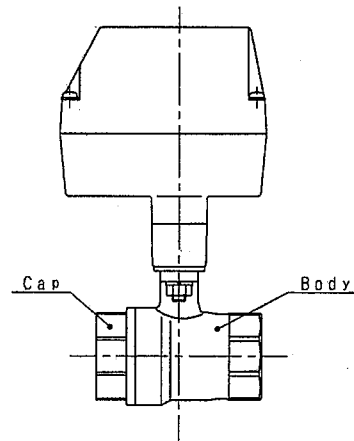

(Figure 3 Outside view)

- Before piping, check that pipes are free of sticking foreign matter, swarf, and burrs .
If necessary, deburr or clean the inside of each pipe using compressed air at 0.3 MPa or higher.
- When using sealer, special care is required to prevent it from entering the pipe or leaking outside.
When seal-taping the threaded portion, two or three threads from the end of the threaded portion shall remain exposed (see Figure 4).
When using liquid sealer, do not apply it excessively. Two or three thread from the end of the threaded portion shall remain exposed.
Do not apply liquid sealer to internal threads on the machine.

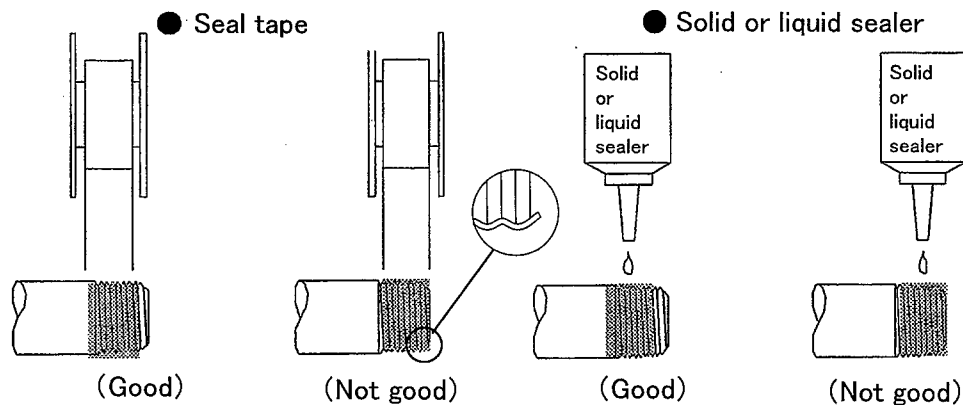


(Figure 4)

2. 3 Wiring work



Caution : The valve shall be correctly connected with a power supply according to the motor valve wiring diagram (shown on the product).
A wrong connection may short the circuit.

- Leads shall be fixed with wire bands or such so that no tensile force will be applied to them. Where wires may be damaged, they should be passed through conduits or otherwise protected for safety.
- When the yellow and green cables are not used for checking signals, cut away exposed wires and adequately protect the cables using insulating tape (see Figure 5).

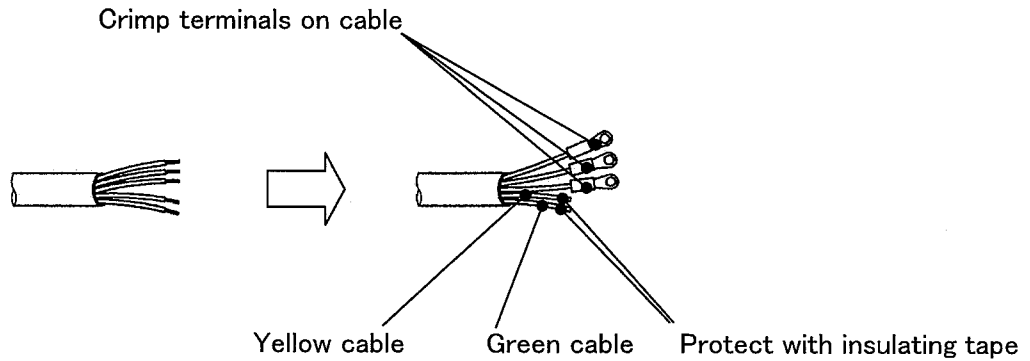

(Figure 5 Terminating cables)

- Also see the circuit diagram and the description of operating mechanism in page 12.
- The operation time required for opening and closing the valve is shown in Table 2-2 .
When the valve is withdrawn from service for a day or longer, the initial operation time may be one to five seconds longer.

Table 2-2 Operation time

Series	AC models (50Hz/60Hz)
MSB1D - 10 ~ 25	10/8 seconds
MSB1DF-15 ~ 20	
MSB1D - 32 ~ 50	13/11 seconds
MSB1DF-25 ~ 40	

- The valve opening/closing signals shall be turned on/off after the valve completes a movement.

3. Checking before use (after installation)

3. 1 Appearance check



Caution : Stop the fluid supply (close the supply valve) and power off the system.

- Check by pushing with hand that the ball valve body is firmly fixed to each pipe.
- Check that the hexagonal bolt and other fittings are not loose.

3. 2 Electrical check



Caution : Power off the system.

- Check that the valve is correctly wired as indicated by the motor valve wiring diagram shown on the product.
- Check the dielectric resistance.
Check the dielectric resistance between the ball valve body and the charger (see Table 3-1).

Table 3-1 Dielectric resistance


Voltage used	Measuring instrument	Dielectric resistance
AC voltage	1000 VDC Megger	100 Mohms or higher

3. 3 Leak check

- Power on the system.
- Compress the fluid and check the connections for leak.
For leak check, it is recommended to apply soapy water to the connections and check for air bubbles while supplying compressed air at 0.3 to 0.5 MPa.

< Procedure >

- a) Close motor valve ② and open sluice valves ① and ③ in this order.
No fluid shall leak outside or into the secondary side.
- b) Close sluice valve ③ with sluice valve ① left open.
Open motor valve ②.
No fluid shall leak outside.

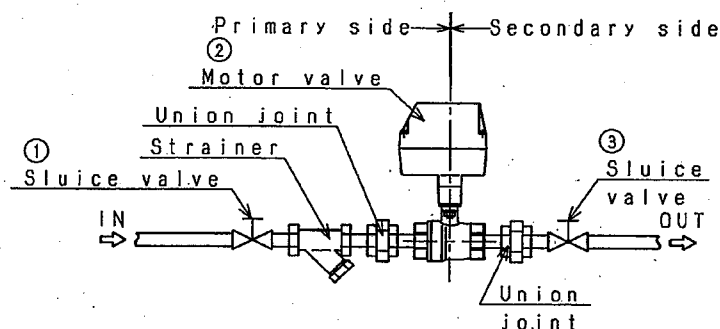

(Figure 6 Piping diagram)

4. For correct use



Caution : Never remove the bonnet.
If you touch an internal electric part, you may have an electric shock.

- For the operation time required for opening/closing the valve, see Table 2-2 in page 5.
When the valve is withdrawn from service for a day or longer, the initial operation time may be one to five seconds longer.
- If the valve does not complete a movement when the operation time shown in Table 2-2 is elapsed, the following failures are suspected.
 - ① Valve being locked due to entangled foreign matter
 - ② Disorder of an electric part
 See section 7 'Troubleshooting.'
- Do not apply an external force exceeding 0.5 N·m to the actuator.
- If any unusual condition is found, see section 7 'Troubleshooting.'
- The voltage variation shall not exceed $\pm 10\%$ of the rated voltage.
- The operating frequency shall not exceed 1cycle/minute.
- The valve shall be operated through the entire stroke from the fully closed position to the fully open position or vice versa.
If the valve is used at an intermediate position, it may cause a malfunction and/or internal leak.
- In case of power failure, the valve is kept as it was before the power failure.
Operate the sluice valves shown in the piping model in page 3 (Figure 2) or manually operate the valve as described in page 9.


5. Overhaul and assembly

- 5. 1 Replacement of the actuator
- 5. 1. 1 Overhaul procedure



Caution : Power off the system and stop the fluid supply before overhauling.

- Disconnect cables .
- Loosen the hexagonal nut using a wrench.
- Raise the actuator to separate it from the yoke and the ball valve body.

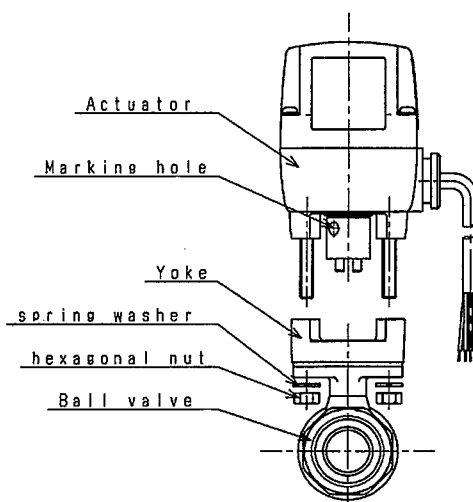

(Figure 7)

5. 1. 2 Assembly procedure

- Align the fully open and closed positions of the ball valve body with the marking hole on a new actuator.
- Tighten the hexagonal nut to a torque between 5 and 7.5 N·m.
- Crimp terminals on leads.
- Wire the valve according to the wiring diagram.
- Check the dielectric resistance between the ball valve body and charger.
For AC models, 100 Mohms or higher as measured with a 1000 VDC Megger.
- Power on the system to make the fluid circuit ready for use.

5. 2 Replacement of the ball valve

5. 2. 1 Overhaul procedure



Caution : Power off the system and stop the fluid supply before overhauling.

- Loosen the hexagonal nut and separate the actuator and the yoke from the ball valve.
At this time, no tensile force shall be applied to any lead.
- Loosen the pipes to the ball valve.

5. 2. 2 Assembly procedure

- Pipe a new ball valve.
Pipe the cap side with the cap held with a wrench and pipe the body side with the body held with a wrench.
- Assemble the yoke and the actuator to the ball valve.
Tighten the hexagonal nut to a torque between 5 and 7.5 N·m.
- Apply a fluid pressure to check that the fluid is not leaking outside.
- Power on the system to make the fluid circuit ready for use.

6. Maintenance

6. 1 Maintenance and inspection

- To maintain an efficient operation of this product, it should be checked on a regular basis (usually every six months).
- For the inspection items, see section 3 'Checking before use.'

6. 2 Service parts

- Actuator
It shall be replaced if it is found to have an electrical failure or unusual condition. As a guideline, it needs replacement every 100 thousand cycles.
- Ball valve body
It shall be replaced if it is found to leak or stick during the use. As a guideline, it needs replacement every 50 thousand cycles.


7. Troubleshooting

- Manually operate the valve in case of power failure or malfunction.
- Manual operation procedure



Caution : The type MSB1D-32~50 and MSB1DF-25~40 cannot be manually operated except when optionally equipped for manual operation.
 If it is manually operated, the motor gear inside the actuator may be damaged.
 This procedure applies to the models that are optionally equipped for manual operation.

- Power off the system.
- Insert the edge of a cross-ended screw driver (type H2, No. 2) to the marking hole. Apply a gradually increasing force and slowly turn. Rotate from S to O or vice versa within about 20 seconds.

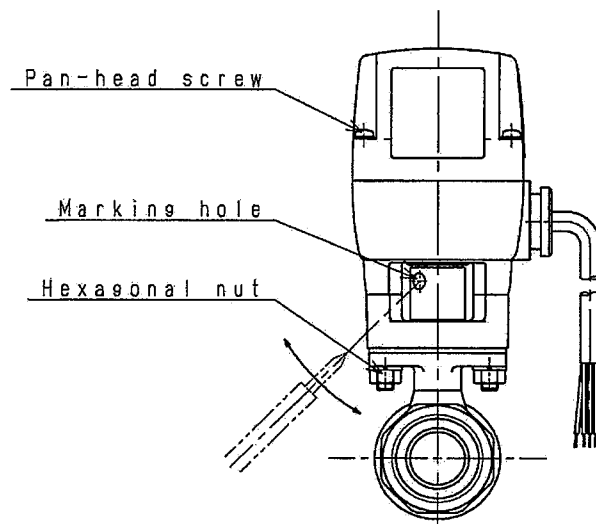

(Figure 8 Outside view)


- When the motor valve does not operate as intended, check it according to the following table.

Table 7—1 Troubleshooting

Symptom	Cause	Action
Valve does not operate.	Valve is not energized.	Check wiring and fuses and turn on power again.
	Rated voltage is not reached.	Check power supply and apply rated voltage.
	Foreign matter is entangled within ball valve. Valve seat sticks.	Overhaul and clean valve or replace ball valve.
	Both opening and closing signals have turned on.	Check switch and relays.
	Actuator is faulty.	Replace actuator.
Valve operates but not properly. (Actuator vibrates or stops halfway.)	Valve operates in a reverse way.	Opening and closing wires are reversely connected. Correct wiring .
	Foreign matter is entangled within ball valve. Valve seat sticks.	Overhaul and clean valve or replace ball valve.
Motor operates but valve does not.	Gear head is damaged or has reached the end of its life.	Overhaul and clean valve. Replace actuator if no unusual condition is observed within valve. If both are faulty, replace the whole product with a new one.
Valve leaks.	Foreign matter is entangled within ball valve.	Replace ball valve.
	Valve seat is worn.	
	Valve is energized too shortly to be fully closed.	Extend operation time over the level shown in Table 2—2

- If you have any questions, contact us or one of our agents.

8. Internal construction

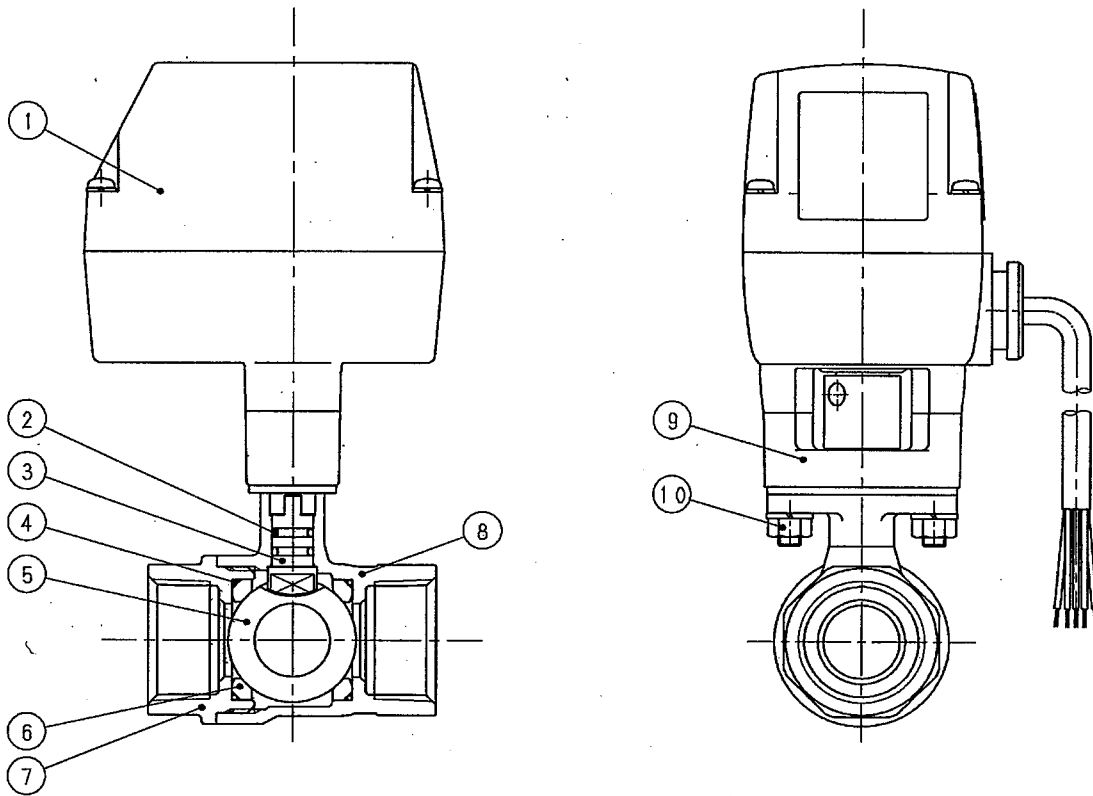

(Figure 9)


Table 8-1 Part list

Part No.	Part name	Quantity	Note
1	Actuator	1	
2	O ring	2	FKM
3	Shaft	1	
4	O ring	2	FKM
5	Valve ball	1	
6	Valve seat	2	
7	Cap	1	
8	Body	1	
9	Yoke	1	
10	Hexagonal nut	2	


9. Circuit diagrams and description of operational mechanism

9. 1 Circuit diagrams

● Standard type

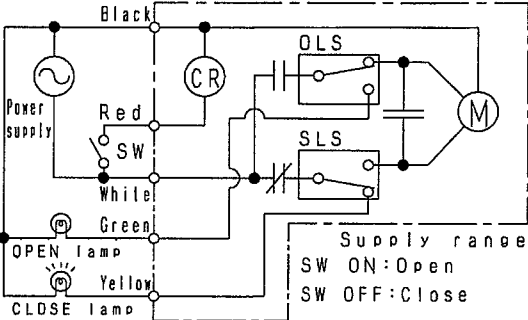

● Optional (3-wire cable)

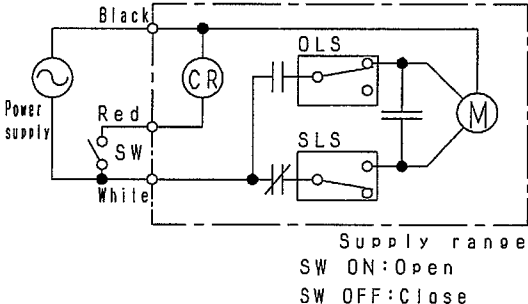


(Figure 10)

9. 2 Description of operational mechanism


9. 2. 1 Standard type (including option B)

(1) Opening movement (fully closed to fully open position)

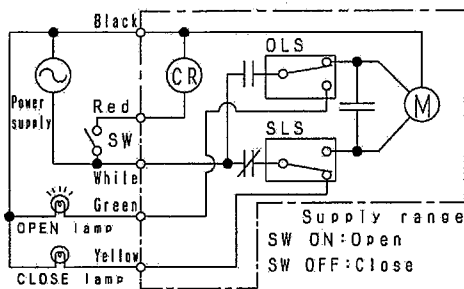


(Figure 11 When valve completes closing movement)

(2) Closing movement (from fully open to fully closed position)

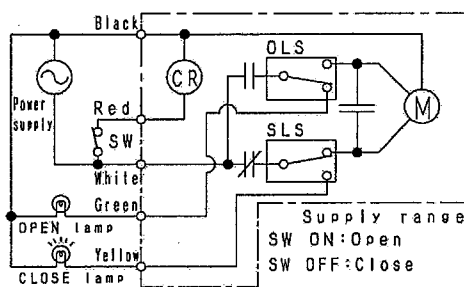

(Figure 12 When valve completes opening movement)

(3) During opening/closing movement

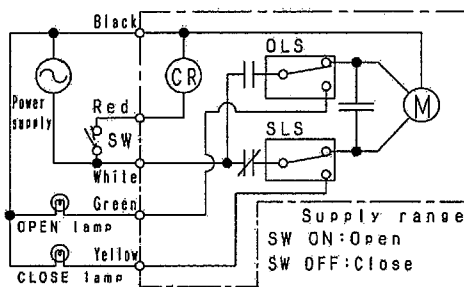

(Figure 13 During opening/closing movement)

If the operating switch "SW" is set to position ON when the circuit is as shown in Figure 11, a current is applied between black and red with white leads .

Then, the motor starts revolving and the output shaft rotates counterclockwise as viewed from the top face of the actuator toward the valve.

As the valve is fully opened, the OLS contacts open to stop the motor and light the OPEN lamp.

Connecting a relay or equivalent instead of the OPEN lamp will move another device.

(see Figure 12)

If the operating switch "SW" is set to position OFF when the circuit is as shown in Figure 12, a current is applied between black and white leads .

Then, the motor starts revolving and the output shaft rotates clockwise as viewed from the top face of the actuator toward the valve.

As the valve is fully closed, the SLS contacts open to stop the motor and light the CLOSED lamp.

Connecting a relay or equivalent instead of the CLOSED lamp will move another device.


(see Figure 11)

During the movement described in ON or OFF, the circuit is as shown to the left and the output shaft rotates in either direction according to the position of the operating switch.

It should be noted, however, that operating the valve in a reverse way before it completes another movement may damage the valve and should be avoided.

(see Figure 13)

9. 2. 2 Option T (3-wire cable)

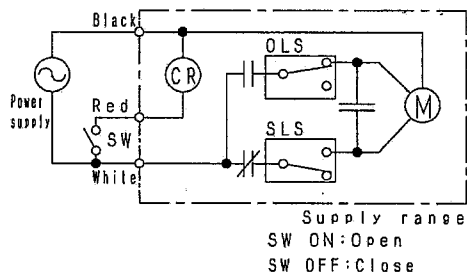

(Figure 14)

(1).Opening movement

(fully closed to fully open position)

If the operating switch is set to position ON to apply a current between black and red with white leads, the motor starts revolving. As the valve is fully opened, the cam opens the OLS contacts to stop the motor.

(2).Closing movement

(from fully open to fully closed position)

If the operating switch is set to position OFF to apply a current between black and white leads, the motor starts revolving. As the valve is fully closed, the cam opens the SLS contacts to stop the motor.

9. 2. 3 Option L (w/OPEN lamp)


The OPEN lamp shown in Figure 11 is contained in the terminal box to light when the opening movement (from fully closed to fully open position) of (1) is completed. This lamp does not light during the movement. (The wiring circuit for this lamp is the same as for option T.)

9. 2. 4 Option R (w/CLOSED lamp)

The CLOSED lamp shown in Figure 12 is contained in the terminal box to light when the closing movement (from fully open to fully closed position) of (2) is completed. This lamp does not light during the movement. (The wiring circuit for this lamp is the same as for option T.)

10. Specifications for the product

10.1 Model numbering system

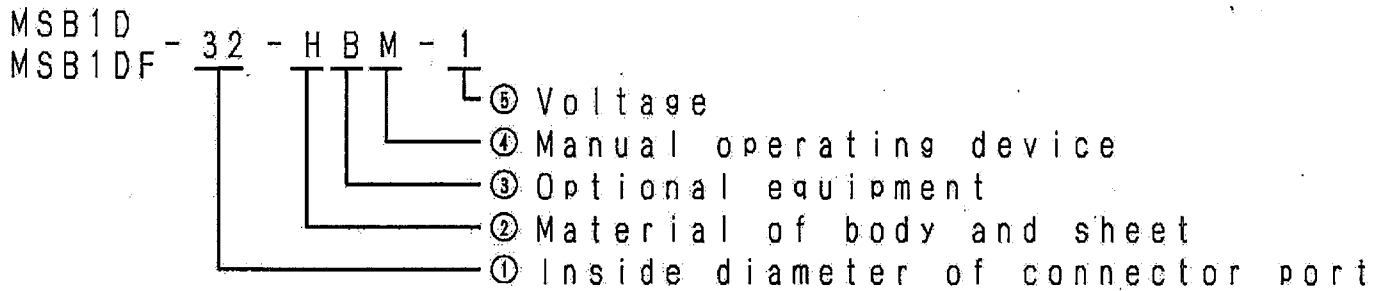

① Inside diameter of connector port

Symbol	Meaning	MSB1D (Standard bore)	MSB1DF (Full bore)
10	Rc3/8	●	—
15	Rc1/2	●	●
20	Rc3/4	●	●
25	Rc1	●	●
32	Rc1 ¹ /4	●	●
40	Rc1 ¹ /2	●	●
50	Rc2	●	—

② Materials of body and sheet

Symbol	Meaning	
	Body	Sheet
H	Bronze	Reinforced PTEE

Note1. The MSB1D is standard bore type, but only the MSB1D-10 is full bore.

Note2. The ones with manual operating device are offered with the MSB1D-32, 40, or 50, MSB1DF-25, 32, or 40.

③ Optional equipment

Symbol	Meaning
No symbol	5-wire cable (w/signal pick-up)
T	3-wire cable
B	W/terminal box
L	W/lamp (lights when valve is open)
R	W/lamp (lights when valve is closed)

④ Manual

Symbol	Meaning
No symbol	W/o manual operating device (standard)
M	W/manual operating device

⑤ Voltage

Symbol	Meaning
1	100 VAC (50/60Hz)
2	200 VAC (50/60Hz)

10. 2 Specifications for the product

Table 10-1 Specifications for the product

Designation	MSB1DF-15		MSB1DF-20		MSB1DF-25	MSB1DF-32	MSB1DF-40
	MSB1D-10	MSB1D-15	MSB1D-20	MSB1D-25	MSB1D-32	MSB1D-40	MSB1D-50
Withstanding pressure MPa	2 (water pressure)						
Fluid used	Steam, hot water						
Fluid pressure MPa	0 to 0. 6						0 to 0. 5
Fluid temperature °C	0 to 164 (No condensation allowed.)						0 to 158
Ambient temperature °C	- 10 to 50						
Ambient humidity %	95 or less						
Power consumption W	8				16		
Operating frequency	1 cycle/minute or less						
Permissible voltage variation	± 10% of rated voltage						