

FLCR-G Series Electric Actuator

Table Type

INSTRUCTION MANUAL

Read this Instruction Manual before using the product.
In particular, read the safety notes carefully.
Keep this Instruction Manual safe for use at any time.



PREFACE

Thank you for purchasing CKD's "FLCR-G Series" electric actuator.

The FLCR series (table type) is ideal for workpiece transfer and multi-point positioning under short-stroke conditions. A motor built in the actuator allows acceleration and deceleration to be adjusted as desired, eliminating the need of a shock absorber and saving space.

This Instruction Manual describes basic matters related to the operation of this product in order to fully demonstrate its performance. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device and the electric system that controls such mechanism is ensured.




Ensure to observe organization's standards, laws and regulations etc. for safety related to design and management of the equipment.

In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. Thoroughly read and understand this Instruction Manual before using the product.









To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.




Precautions classified as "CAUTION" may still lead to serious results depending on the situation.

All precautions are equally important and must be observed.

< Warning symbol type >

	A general purpose mark indicating prohibited (not allowed) actions.		A mark that prohibits touching equipment.
	A mark that prohibits the act of putting a finger.		A general purpose mark indicating the danger such as electric shock and burn.
	A mark indicating the danger that occurs when an automatic equipment is started.		A general purpose mark indicating what you must do.
	A mark instructing you to carefully read the Instruction Manual.		A mark instructing the connection of the ground wire.

In addition, the following icons indicate general precautions, usage tips, or technical information or glossary.

	● Contains useful information such as general precautions, supplementary information, and reference information.
	● Contains detailed information and tips on how to use it in a practical way.
	● Contains technical information and glossary that you should know when using the function.

Precautions on Product Use

DANGER



Do not use this product for the following applications.

- Medical equipment pertaining to sustainment and management of human life and body
- Mechanism and mechanical device for transferring and transporting people
- Critical parts for securing safety in a mechanical device

WARNING



Never modify or implement additional processing to the product.

- Modification or additional processing may not only pose a risk of fire or electric shock, but may not satisfy the specifications described in this Instruction Manual.

Never handle the product, install or remove the equipment until safety is confirmed.

- Check and maintain the machinery and equipment only after confirming that all systems related to the product are safe. In addition, be careful not to get an electric shock by turning off the power of the device or the power of the corresponding equipment.
- Even after the operation is stopped, as there may be high-temperature parts or charging parts, carefully handle the product, and install or remove the equipment.



The product must be handled by the person who has sufficient knowledge and experience.

- This product is designed and manufactured as general industrial machinery equipment and parts, so please handle with care.

Use the product within the specifications.

- It cannot be used outside of product-specific specifications.
 - Since this product is used in general industrial machinery equipment and parts, it is not applicable when used in the following conditions. If you consult with our company and understand the specifications of our company product, it will apply. However, even in such a case, take safety measures to avoid danger in case of failure.
- ◎ Use under conditions and environments other than those specified, and outdoor use.
 - ◎ Use in equipment and applications that come into direct contact with nuclear power, railways, aviation, ships, vehicles, medical equipment, beverages and food.
 - ◎ Use in applications requiring safety, such as recreational equipment, emergency shut off circuits, press machines, brake circuits, and safety measures.
 - ◎ Use in applications that are expected to have a significant impact on people and property and require special safety.

CONTENTS

PREFACE	2
SAFETY INFORMATION	3
Precautions on Product Use.....	5
CONTENTS	6
1. PRODUCT OVERVIEW	8
1.1.System Structure	8
1.1.1. System structure	8
1.2.Instruction Manuals Related to This Product.....	12
1.3.Part Name	13
1.4.Model Number Indication	14
1.4.1. Actuator	14
1.4.2. Motor/encoder relay cable (fixed/movable)	17
1.4.3. Brake release unit.....	18
2. INSTALLATION	19
2.1.Installation Environment	25
2.2.Unpacking	26
2.2.1. Parts of the product	26
2.3.Installing	27
2.3.1. Actuator	27
2.3.2. Objects transferred (mounting on the slide table upper surface)	28
2.3.3. Objects transferred (mounting on the end plate)	29
2.3.4. Brake release unit.....	30
3. USAGE	31
3.1.Using the Controller	34
3.2.Manual Operation.....	36
4. MAINTENANCE AND INSPECTION	37
4.1.Periodic Inspection	38
4.1.1. Inspection item	38
4.2.Precautions on Product Disposal.....	39
5. TROUBLESHOOTING	40
5.1.Problems, Causes, and Solutions	40
5.1.1. Items to Check When a Problem Occurs	43
6. WARRANTY PROVISIONS	44

6.1.Warranty Conditions.....	44
6.2.Warranty Period.....	44
7. Reference Information	45
7.1.Specifications	45
7.2.Cable specifications	47
Index	48
Glossary.....	49

1. PRODUCT OVERVIEW


1.1. System Structure



- Connect this product to an ECG-B Series controller. It does not work when connected to other controllers such as ECG-A and ECR Series controllers.

1.1.1. System structure

■ ECG-B Series

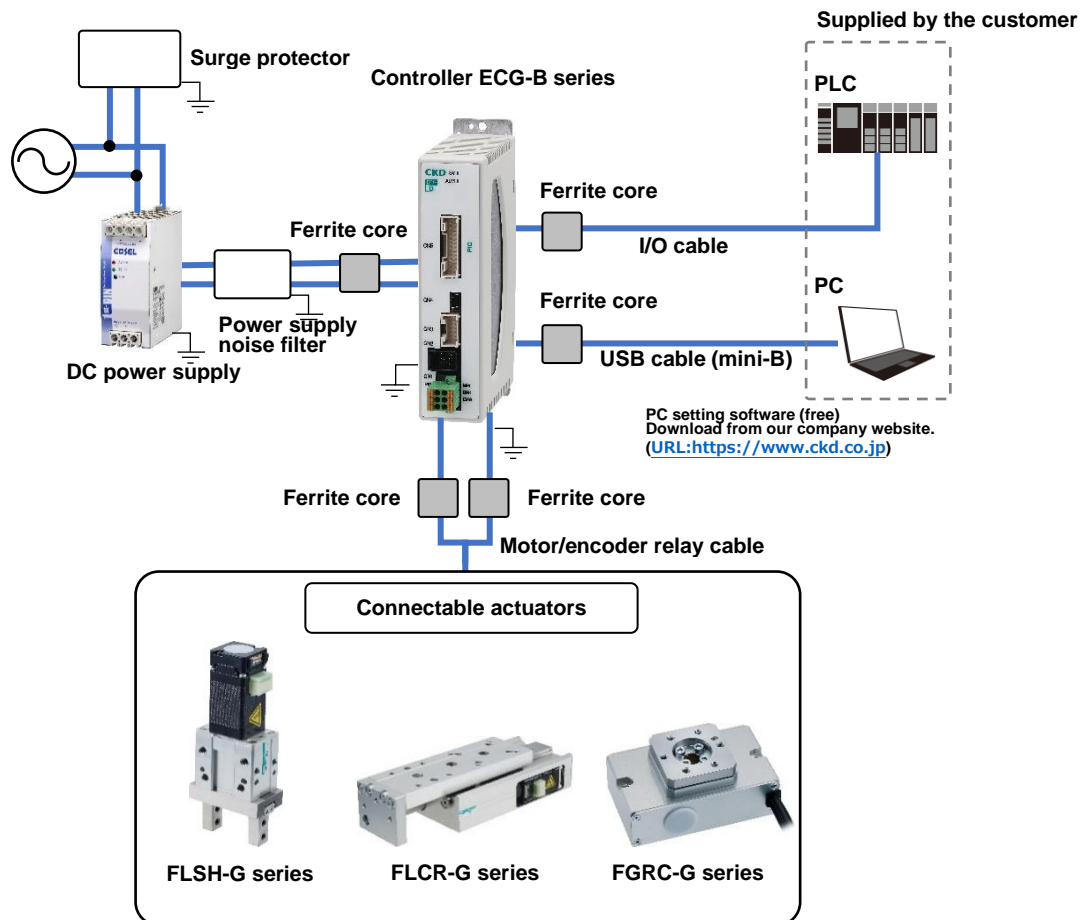


※ The above diagram is a configuration diagram for the parallel I/O specification. For other interface specifications, refer to the instruction manual for each interface specification.

The following items can be purchased from us in the system configuration.


	Component	Product name/Model no.
This product	Actuator	FLCR-G series
Accessories	Motor/encoder relay cable	EA-CBLME4-□□□ Note 1
Sold separately	Controller	ECG-B Series
	Power supply connector	DFMC1,5/3-STF-3,5(PHOENIX CONTACT)
	I/O cable	EA-CBLNP2-□□
	24 VDC power supply	EA-PWR-KHNA240F-24
	Noise filter	AX-NSF-NF2015A-OD
	Brake release unit Note 2	EA-BRK-UNIT
Provided for free	PC setting software	S-Tools

Note 1: The actuators shipped on or before September 2022 include the relay cable of which model number is "EA-CBLME2-□□□". Refer to "7.2 Cable specifications" for details.

Note 2: Used only when the actuator and a controller are not connected during installation or maintenance of the actuator (equipped with a brake).

	<ul style="list-style-type: none"> ● A "ferrite core" is a magnetic material that uses a ferrite material. It is used to attenuate high frequency noise. ● A "surge protector" is a device that protects equipment and communication equipment from transient abnormal high voltages such as lightning. ● A "noise filter" is an electric or electronic circuit for removing noise and a device that contains it.
---	--

■ ECMG Series

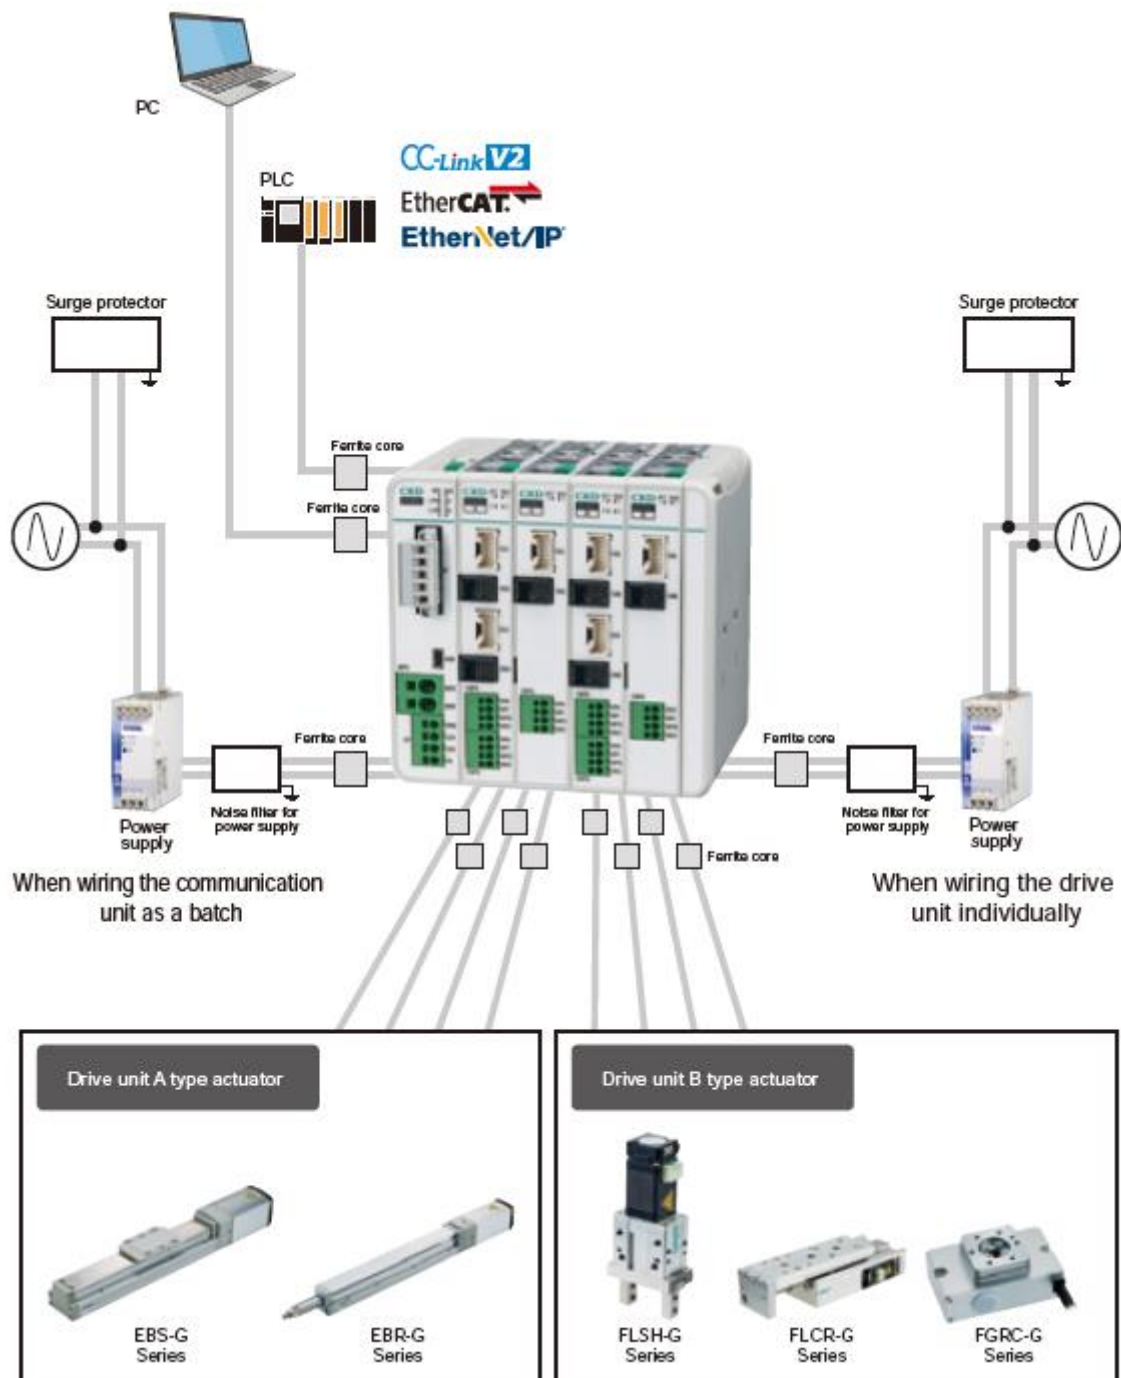

The following items can be purchased from us in the system configuration.

	Component	Product name/Model no.
This product	Actuator	FLCR-G series
Accessories	Motor/encoder relay cable	EA-CBLME4-□□□ Note 1
Sold separately	Communication unit	ECMG-C series
	Drive unit	ECMG-D series
	End unit	ECMG-P series
	Communication connector (CC-Link)	1 port: MSTB 2,5/5-STF-5,08 ABGYAU (PHOENIX CONTACT) 2 ports: TFKC2,5/5-STF-5,08AU (PHOENIX CONTACT)
	24 VDC power supply	EA-PWR-KHNA240F-24
	Noise filter	AX-NSF-NF2015A-OD
	Brake release unit Note 2	EA-BRK-UNIT
Provided for free	PC setting software	S-Tools

Note 1: The actuators shipped on or before September 2022 include the relay cable of which model number is "EA-CBLME2-□□□". Refer to "7.2 Cable specifications" for details.

Note 2: Used only when the actuator and a controller are not connected during installation or maintenance of the actuator (equipped with a brake).




- A "ferrite core" is a magnetic material that uses a ferrite material. It is used to attenuate high frequency noise.
- A "surge protector" is a device that protects equipment and communication equipment from transient abnormal high voltages such as lightning.
- A "noise filter" is an electric or electronic circuit for removing noise and a device that contains it.

1.2. Instruction Manuals Related to This Product


This Instruction Manual is “SM-A40842-A.”

The instruction manuals related to this product are as follows.

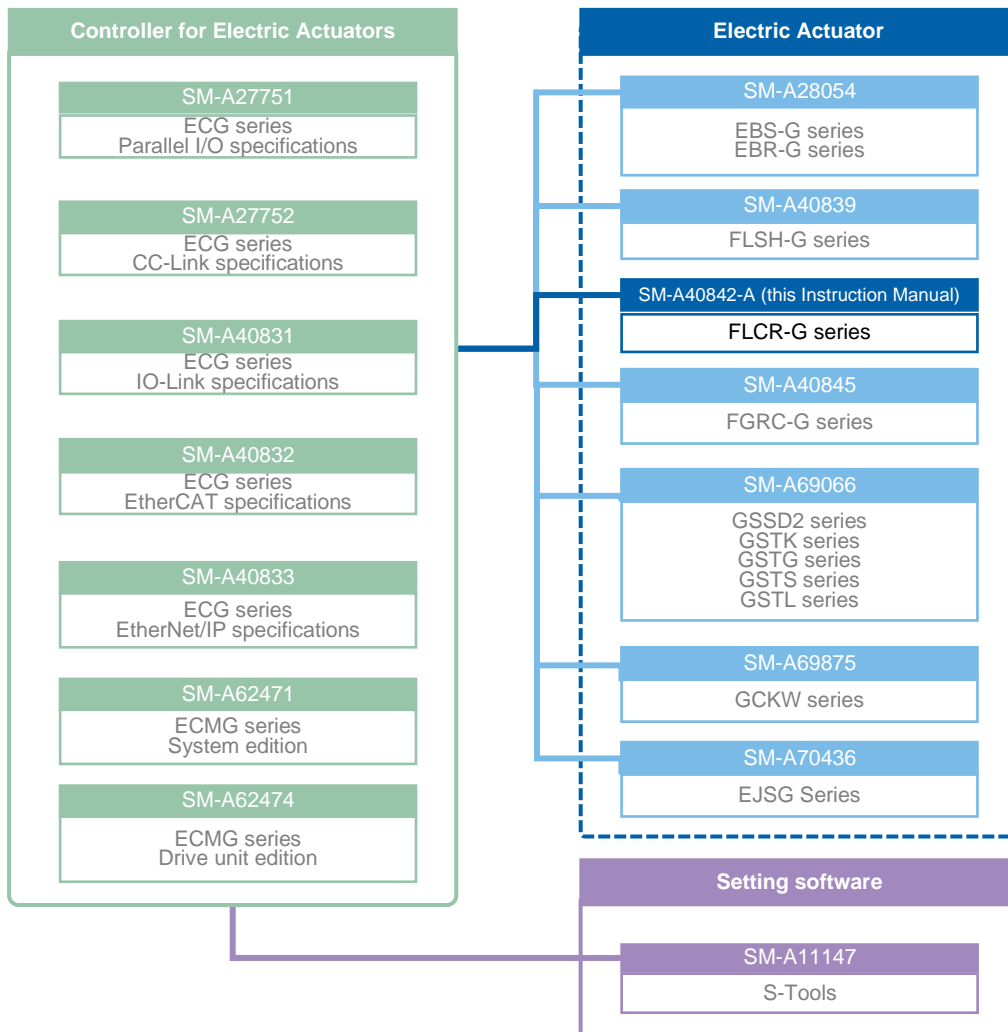


1.3. Part Name

■ Direct outlet

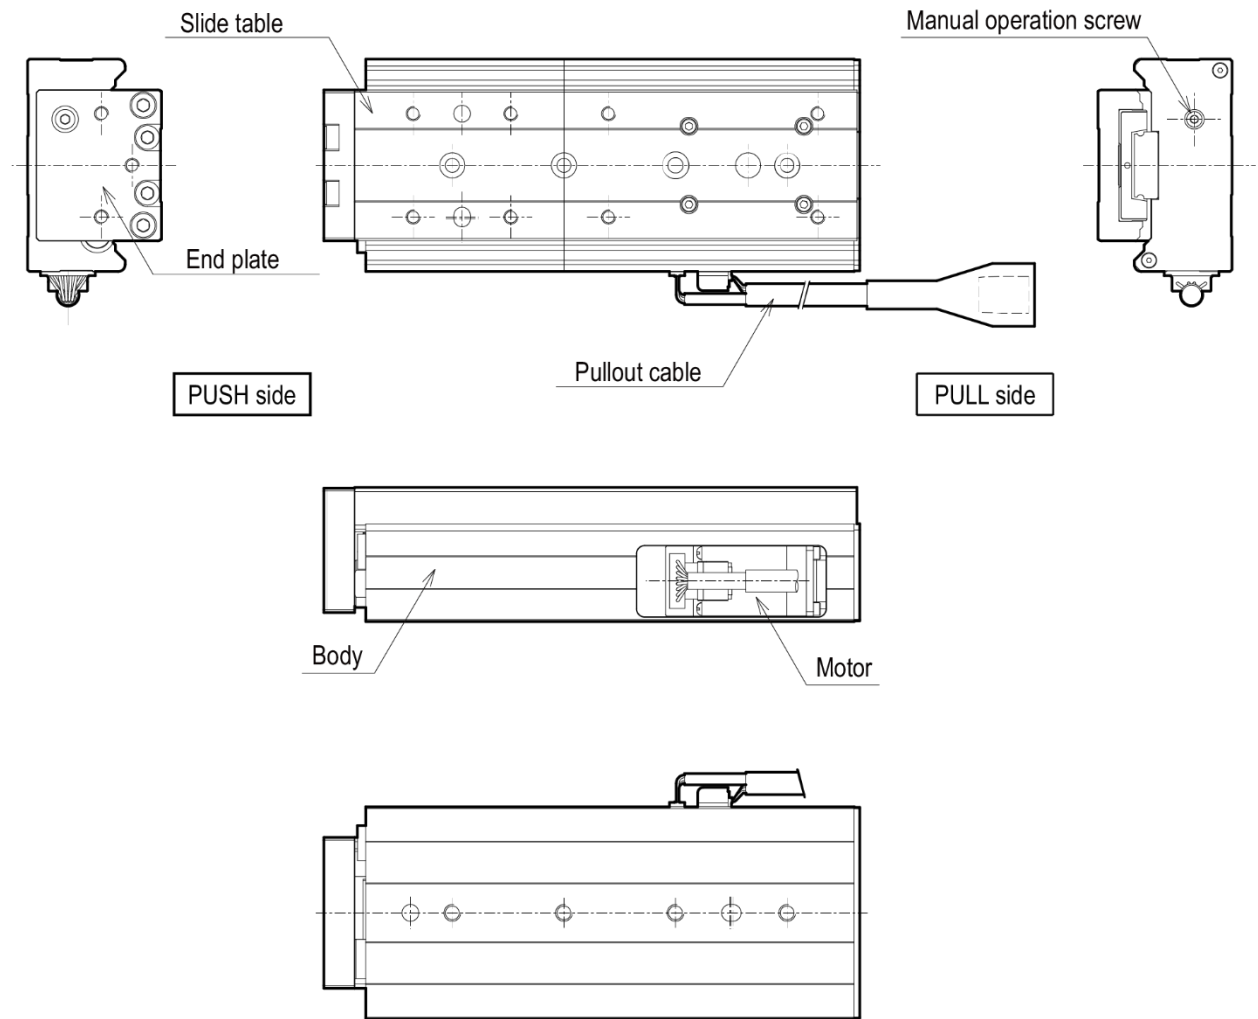


■ Case ejection, P4 Series

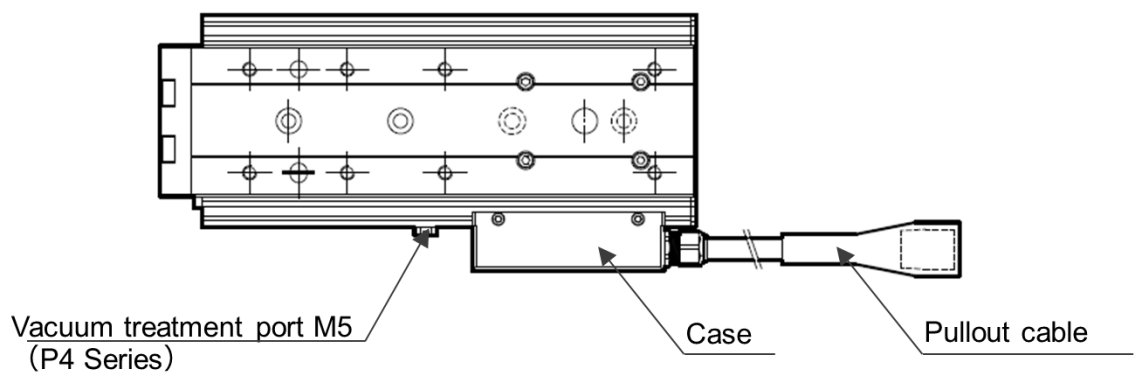


1.4. Model Number Indication

1.4.1. Actuator


■ Standard series

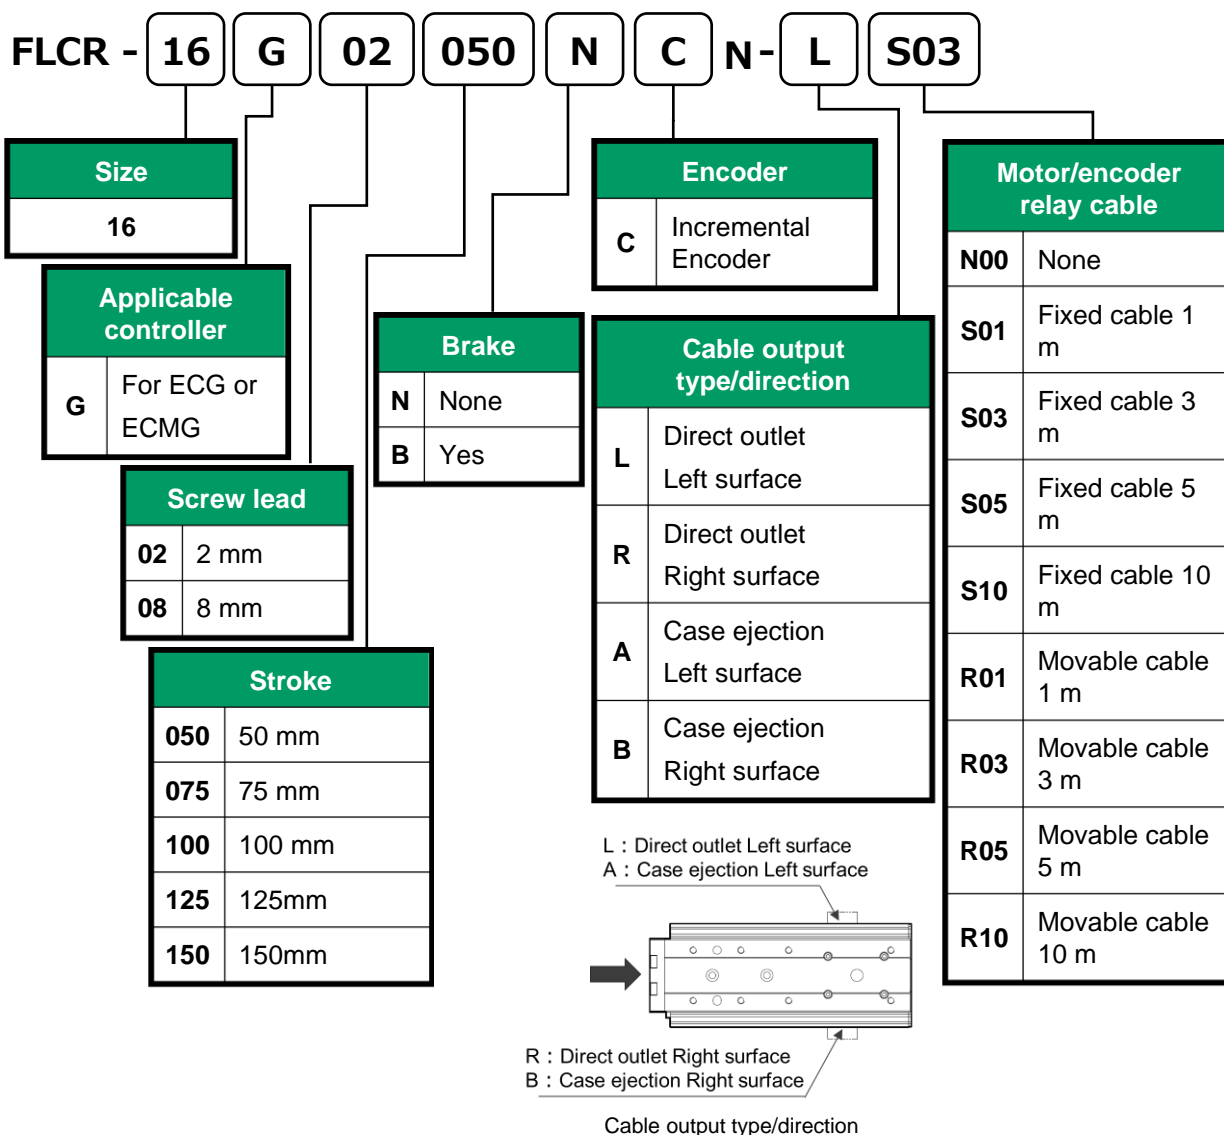

- ※ If you select other than "N00" for "Motor/encoder relay cable", a motor/encoder relay cable is included as an accessory.
For the dimensions of motor/encoder relay cables, refer to "1.4.2 Motor/encoder relay cable (fixed/movable)."

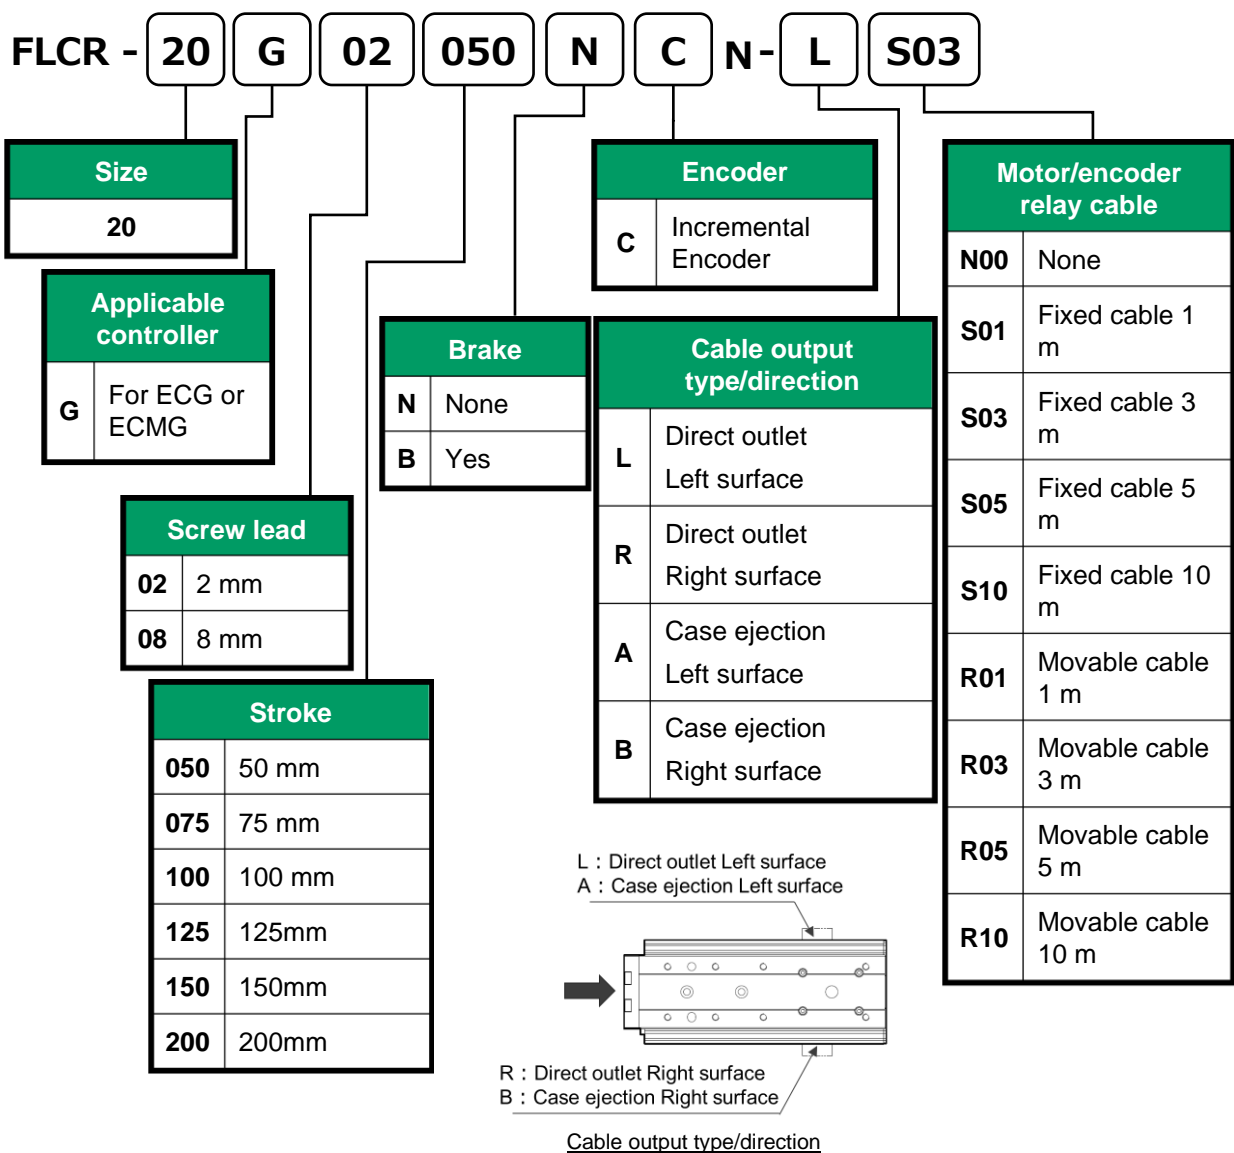


※ If you select other than “N00” for “Motor/encoder relay cable,” a motor/encoder relay cable is included as an accessory.
For the dimensions of motor/encoder relay cables, refer to “1.4.2 Motor/encoder relay cable (fixed/movable).”

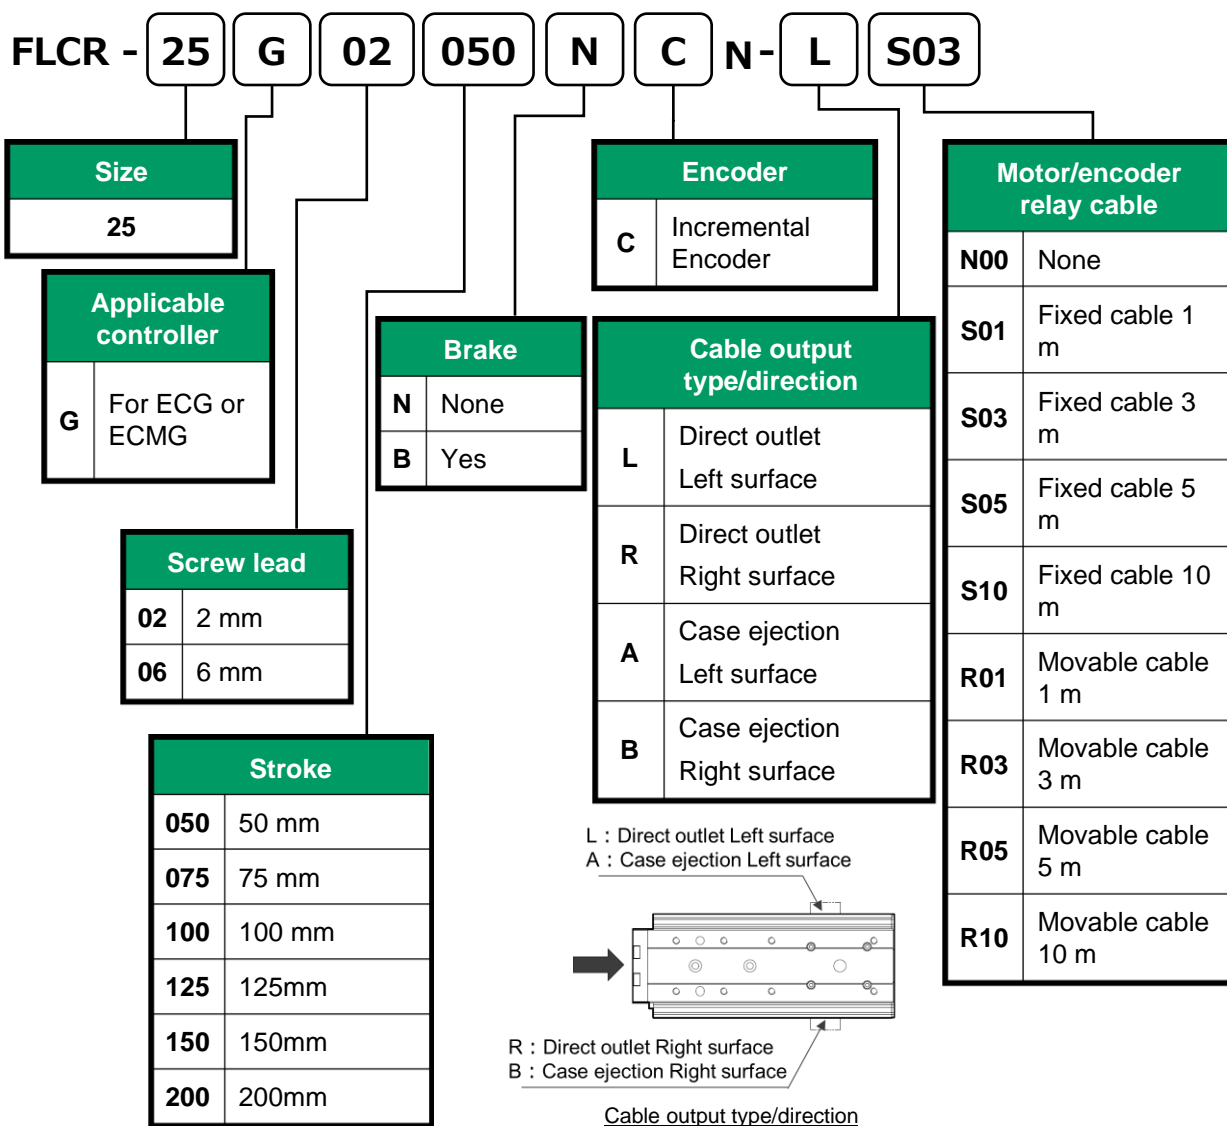

※ If you select other than "N00" for "Motor/encoder relay cable," a motor/encoder relay cable is included as an accessory.
For the dimensions of motor/encoder relay cables, refer to "1.4.2 Motor/encoder relay cable (fixed/movable)."

■ P4 series

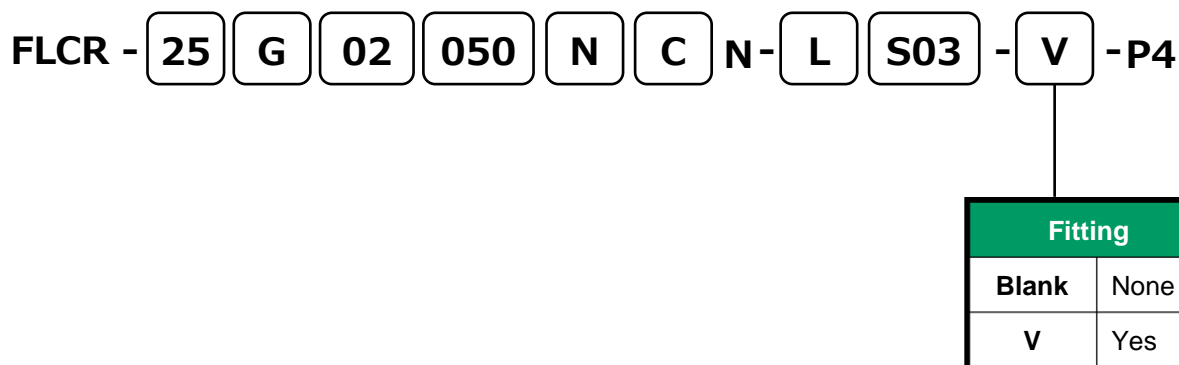

※ Refer to the standard series for selected Items other than "Fitting".

1.4.2. Motor/encoder relay cable (fixed/movable)


■ Motor/encoder relay cable model number system (ECG-B series)

EA-CBLME4- S 01

Cable type	
S	Fixed cable
R	Movable cable

Cable length	
01	1 m
03	3 m
05	5 m
10	10 m

■ Motor/encoder relay cable external dimensions (ECG-B Series)

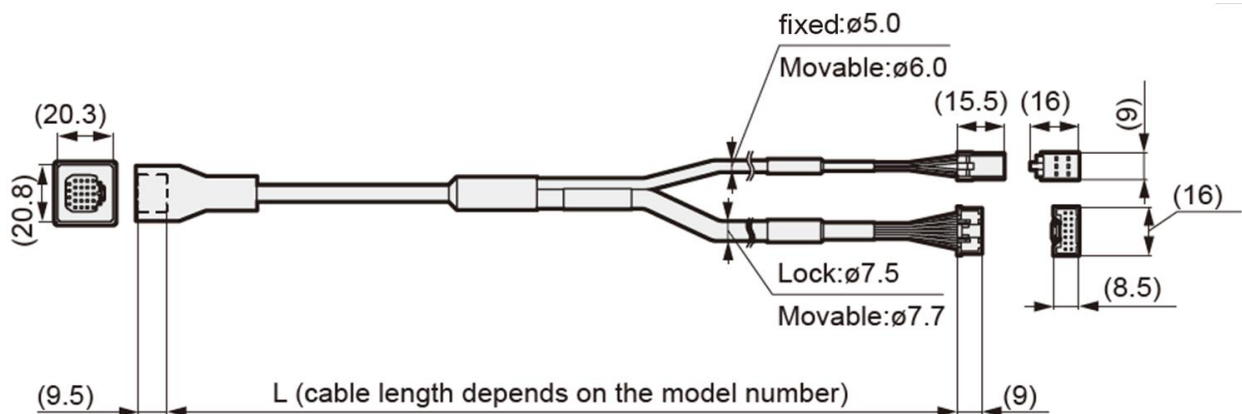


※ The actuators shipped on or before September 2022 include the relay cable of which model number is "EA-CBLME2-□□□". Refer to "7.2 Cable specifications" for details.

1.4.3. Brake release unit

- Brake release unit model number system

EA-BRK-UNIT

- Brake release unit dimensions

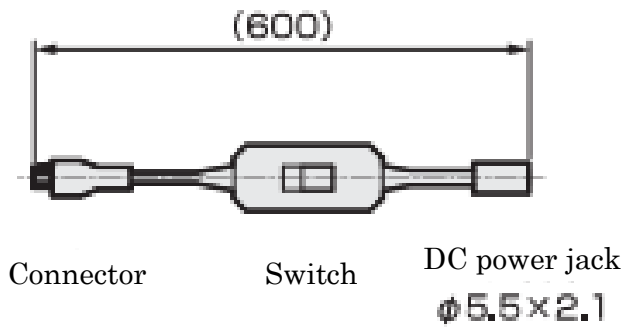

2. INSTALLATION



DANGER



Do not use the product in a place where dangerous substances such as ignitable, inflammable, or explosive materials are present.

- A fire, ignition, or explosion may occur.

Do not work with wet hands.

- Doing so may cause electric shock.



Prevent water and oil from splashing onto the product.

- A fire, electric leakage, or failure may occur. Even oil drops and oil mists are prohibited.

When connecting a PC, make sure that the frame ground of the computer is not grounded.

- If a plus terminal of the product is grounded, connecting the product to a PC and peripheral equipment with a USB cable may cause short-circuit in the DC power supply.



When installing the product, fix the workpiece while surely holding the product and the workpiece.

- An injury may occur if the product falls down, falls off, or malfunctions.

For the controller power supply (control power supply and motor power supply) and the input/output circuit power supply, use a DC stabilized power supply (24 VDC \pm 10%) with sufficient capacity.

- If the product is directly connected to an AC power supply, a fire, burst or damage may occur.

Install overcurrent protective equipment (such as a breaker for wiring and a circuit protector) on the primary side of the power supply when wiring in accordance with “JIS B 9960-1:2019 (IEC 60204-1:2016) Safety of machinery—Electrical equipment of machines—Part 1: General requirements.”

Reference: Excerpt from JIS B 9960-1:2019 "7.2.1 General matters".

Overcurrent protection shall be provided if the circuit current may exceed the rated value of the component or the allowable current of the conductor, whichever is less. The details of the selected rated value or setting value are specified in 7.2.10.



WARNING



Do not install the product to a combustible material.

- Installing it on combustible materials or near combustible materials may cause a fire.

Do not place heavy objects on cables or pinch them.

- If the cable sheath is torn or excessive stress is applied, it may cause poor continuity or deterioration of insulation.

Do not connect the communication connector used for the product to other equipment.

- A failure or damage may occur.

Do not use or store in areas exposed to strong electromagnetic or radiation.

- A malfunction or failure may occur.

Because precision equipment is built in, do not lay it on its side or subject it to vibration or impact during transportation.

- Component damage may occur.

Do not disassemble or modify the product not specified in this Instruction Manual.

- In addition to causing injuries, accidents, malfunctions, or failures, it may not meet the specifications such as this Instruction Manual.



Provide a safety guard fence so as not to enter the operating area of the actuator.



Insulate unused wires.

- A malfunction, failure, or electric shock may occur.



When restarting after emergency stop or irregular stop, make sure that the actuator is safe to operate.



WARNING



Design a safety circuit or safety device to prevent damage to the device or an accident resulting in injury or death if the machine stops in the event of a system malfunction such as an emergency stop or power failure.

Check the wiring of the product with this Instruction Manual or the related instruction manual to ensure that there are no wiring errors or loose connectors.

- There is a possibility of a malfunction or overcurrent flowing in. Overcurrent may cause a malfunction, damage, or fire.

Make sure that the wiring is insulated.

- There is a possibility of a malfunction or overcurrent flowing in. Overcurrent may cause a malfunction, damage, or fire.

Make sure that the wires do not contact other circuits and there is no ground fault and insulation failure between terminals.

- There is a possibility of a malfunction or overcurrent flowing in. Overcurrent may cause a malfunction, damage, or fire.

Make sure to install the emergency stop button in a location where operation is easy.

- Make sure that the emergency stop button has a structure that cannot be automatically reset, and that no one can reset it inadvertently.
- It may take several seconds to stop the actuator after the emergency stop, depending on the speed and load when the actuator moves.

Consider the possibility of motor or power source failure.

- If a motor or power source failure occurs, take appropriate measures to prevent personal injury or equipment failure.

When there is a need for resetting the actuator to the starting position, design a safe control unit.

Install the product indoors and in a dry place.

- It may cause an electric leakage or a fire accident in a place exposed to water or a place with high humidity (place with humidity of 80% or more, or with condensation).

If the actuator is used for other than horizontal mounting, braked actuator shall be used.

- If it is not equipped with a brake, the moving part may drop at the time of servo OFF (including an emergency stop and alarm) or power OFF, resulting in injury or damage to a workpiece.



Provide a mechanical locking mechanism other than the brake in the case where a load that exceeds the holding power of the brake may be applied, if temporary, for example, an application for moving a table with an unbalanced load.

- The brakes are not sufficient to completely retain the actuator in all situations.

When it is necessary to ensure the safety of workers and equipment, such as when performing maintenance and when stopping machinery for a long period of time, keep the actuator in a balanced state or provide a mechanical locking mechanism other than the brake.

- The brake cannot fully hold the actuator in all cases, including when a force exceeding the holding power is applied during suspension.



WARNING



Perform class D grounding (grounding resistance: 100 Ω or less) for the product.

- Electric leakage may cause a fire, electric shock or malfunction.



CAUTION



Do not use the product in an environment where a strong magnetic field occurs.

- A malfunction may occur.

Do not perform a withstand voltage test or an insulation resistance test on a device with the product installed.

- Due to the circuit design, the product may be damaged if a withstand voltage test or an insulation resistance test is performed on the device with the product installed. If a withstand voltage test or insulation resistance test is required, remove the product before performing the test.

Do not store or use the product in a place exposed to ultraviolet rays or in an atmosphere where corrosive gas or salt are present.

- It may cause performance deterioration and strength deterioration due to rust.

Do not install the product in a place subjected to strong vibrations or shocks.

- If the product is subjected to strong vibrations or shocks, a malfunction may occur.

Do not use the product in a place where condensation occurs due to a sudden change in the ambient temperature.

- It may cause a malfunction of the product or deteriorate of strength.

Connect only cables designed for the product.


- A failure of the product or unexpected accident may occur.

When transporting or mounting, do not have the moving part or cable part of the product.

- An injury or cable disconnection may occur.

Do not move the lead cable from the actuator.

- Secure the connector to the same part using a cable clamp, etc. so as to prevent it from moving. Use the lead cable with a bending radius of 40 mm or more (For the P4 Series and Case ejection, with a bending radius of 47mm or more).

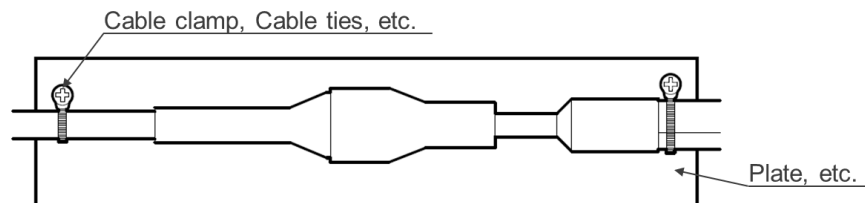



CAUTION



Do not bend the relay cable up to 200 mm from the end of the connector.

- Poor continuity may occur.

Do not hold the controller case tightly.

Do not bend the fixed cable repeatedly.

- If repetitive bending is unavoidable, use a movable cable.

Do not put dents and scratches on the body mounting surface and slide table surface that impair their flatness.

Make sure that the flatness of the side of the mating object which is installed to the body or the slide table is 0.02 mm or less.



When performing electric welding to the equipment to which the product is installed, remove all the frame ground connections of the product.

- If electric welding is performed with the frame ground connected, the product may be damaged due to welding current, excessive high voltage during welding, or surge voltage.



When installing an external stopper or a holding mechanism (such as a brake), arrange it so as not to affect the detection of the home position.

- Unintended position may be recognized as the home position due to the influence of external stopper or holding mechanism at the time of home position return.

Install the wiring so that no induction noise is applied.

- Avoid a place where a large current or strong magnetic field occurs.
- Do not use the same piping or wiring (with multi-core cables) as the power line of a large motor other than the product.
- Do not use the same piping or wiring as the power supplies and wires for inverters used for robots. Apply frame ground to the power supply and insert a filter into the output section.

Use a stabilized power supply (24 VDC \pm 10%) as the power supply, and select one with sufficient capacity for the number of installed products.

- If the capacity is not sufficient, a malfunction may occur.

Use cables with a bending radius of 63 mm or more. In addition, fix the fixed cable so as not to move easily.

- Since the bending radius cannot be applied to the bending of the connector part, it is recommended to fix near the connector.

Secure sufficient space for maintenance and inspection.

- Otherwise, maintenance and inspection cannot be performed, which may cause equipment stop or damage, or injuries.



CAUTION



It is the responsibility of the customer to confirm compatibility of the product with the any system, machinery, or device used by the customer.

When holding the product, hold its bottom surface.

When transporting and installing the product, ensure the safety of the workers by securely supporting the product using a lift or supporting gear and by assigning more than one worker.

Install the product in a way that it is not subjected to twisting or bending force.

Before adjusting the gain, firmly fix the actuator body to the rigid equipment.

When using positioning holes, make sure to use pins having the size that does not require press-fitting.

- Press fitting pins may cause damage or distortion in the guide section, resulting in reduced accuracy. The recommended tolerance of the pin is JIS tolerance of 6 μm or less.


Separate the power for the output section of the product from the power for inductive loads such as solenoid valves and relays that generate surges.

- If the power is shared, a surge current will flow into the output section and cause damage.





If the power cannot be separated, connect the surge absorption elements in parallel directly to all the inductive loads.

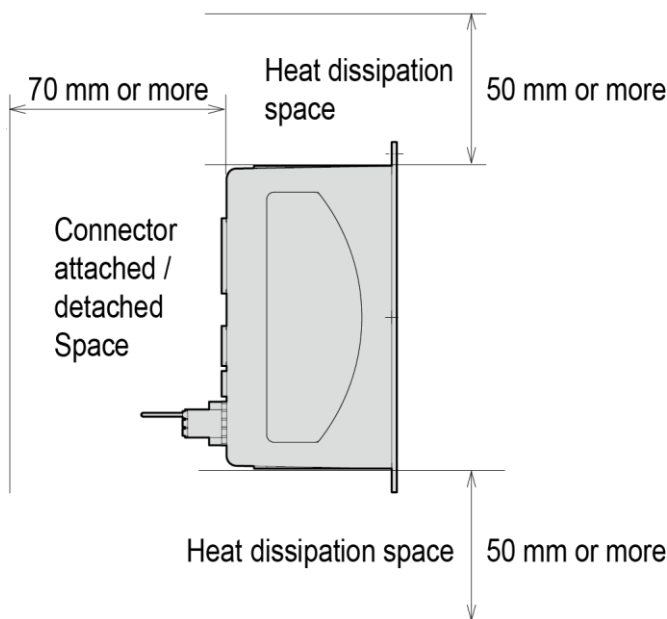2.1. Installation Environment

- Before storing or using the product, check the ambient temperature and atmosphere specified in the product specifications.
- Use the product at an ambient temperature between 0°C and 40°C. Ventilate if can become trapped.
- Use the product at an ambient humidity between 35% and 80% RH. Do not use the product in a place where condensation occurs.
- Store in a place with an ambient temperature of -10 to 50°C and an ambient humidity of 35 to 80% RH, and avoid condensation and freezing.
- Avoiding places exposed to direct sunlight or near heating elements, install in a place free from dust, corrosive gas, explosive gas, flammable gas, and flammable materials. Chemical resistance has not been considered for the product.
- Install the actuator on a smooth and flat surface.
- Installing the actuator on a smooth surface with dents may cause the actuator to malfunction or be damaged.
- Install the controller so that the exhaust port faces up and down and the power supply connector on the front panel faces down. Secure a space of 50 mm or more on both the top and bottom surfaces in consideration of natural convection as a heat dissipation space.
- Since the controller uses S-Tools, secure a space of 70 mm or more in front of the controller so that the connector of the connection cable to the PC can be attached and detached.



2.2. Unpacking

 CAUTION	
	<p>Heavy products shall not be carried by a worker alone.</p> <p>Never ride on the packaging.</p> <p>Do not place heavy items or items with concentrated loads that may deform the packaging.</p> <p>Do not apply excessive force to any part of the product.</p>
	<p>Pay sufficient attention to avoid an impact such as dropping during transportation and handling.</p>
	<p>When taking out the product from the packaging, hold the product body.</p> <p>Keep it level when standing still.</p>

Check that the model number ordered and the model number indicated on the product are the same.

Check the exterior of the product for any damage.

2.2.1. Parts of the product

Parts of the product	Quantity
Actuator	1
Motor/encoder relay cable	1

- ※ If "N00" is selected as the actuator model number at the time of purchase, a motor/encoder relay cable is not included. Purchase them as needed.
For the indication of model numbers of motor/encoder relay cables, refer to "1.4.2Motor/encoder relay cable (fixed/movable)."

2.3. Installing

2.3.1. Actuator



CAUTION




Do not allow excessive shock or moment to act on the slide table.

- A malfunction or damage may occur.

The flatness of the workpiece mounting surface should be 0.02 mm or less. Do not apply twisting or bending force to the product.

- An operation fault or damage may occur.

For the screw-in depth and the tightening torque of bolts for installing the body, refer to the following table.

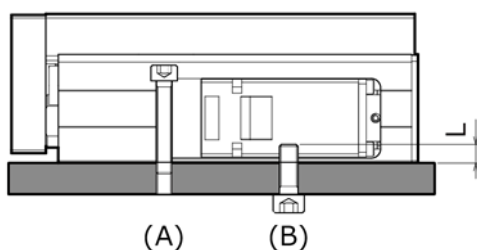

Item	(A) Mounting from top		(B) Mounting from bottom		
	Bolt	Tightening torque (N·m)	Bolt	Tightening torque (N·m)	Max. screw-in depth L (mm)
FLCR-16	M5 × 0.8	2.9 to 5.1	M6 × 1.0	4.8 to 8.6	9
FLCR-20	M5 × 0.8	2.9 to 5.1	M6 × 1.0	4.8 to 8.6	9
FLCR-25	M6 × 1.0	4.8 to 8.6	M8 × 1.5	12.0 to 21.6	12

2.3.2. Objects transferred (mounting on the slide table upper surface)




CAUTION



The flatness of the workpiece attached to the slide table should be 0.02 mm or less. Do not apply twisting or bending force to the product.

- An operation fault or damage may occur.

When attaching a jig to the slide table, use the following bolt screw-in depth and tightening torque.

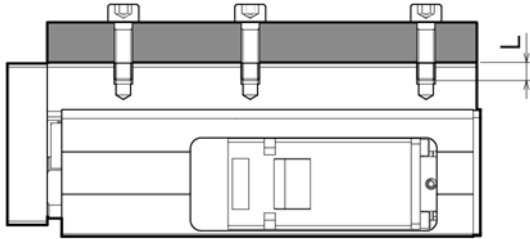

Item	Bolt	Tightening torque (N·m)	Max. screw-in depth L (mm)
FLCR-16	M5 × 0.8	2.9	7.5 to 9
FLCR-20	M5 × 0.8	2.9	7.5 to 11
FLCR-25	M6 × 1.0	4.8	9 to 11

When attaching a workpiece to the slide table surface, consider the moment load. For details, refer to the “Selection guide” page in the catalog.

2.3.3. Objects transferred (mounting on the end plate)




CAUTION



The flatness of the workpiece attached to the end plate should be 0.02 mm or less. Do not apply twisting or bending force to the product.

- An operation fault or damage may occur.

When attaching a jig to the end plate, observe the following values for the bolt screw-in depth and the tightening torque.

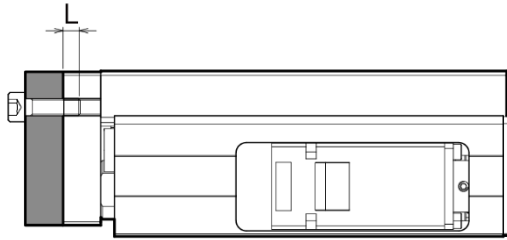


Item	Bolt	Tightening torque (N·m)	Max. screw-in depth L (mm)
FLCR-16	M5 × 0.8	2.9	7.5 to 9
FLCR-20	M5 × 0.8	2.9	7.5 to 11
FLCR-25	M6 × 1.0	4.8	9 to 11

When attaching a workpiece to the end plate surface, consider the moment load. For details, refer to the “Selection guide” page in the catalog.

2.3.4. Brake release unit

Refer to the images below for the connection of the brake release unit and the specifications of an AC-DC adapter.

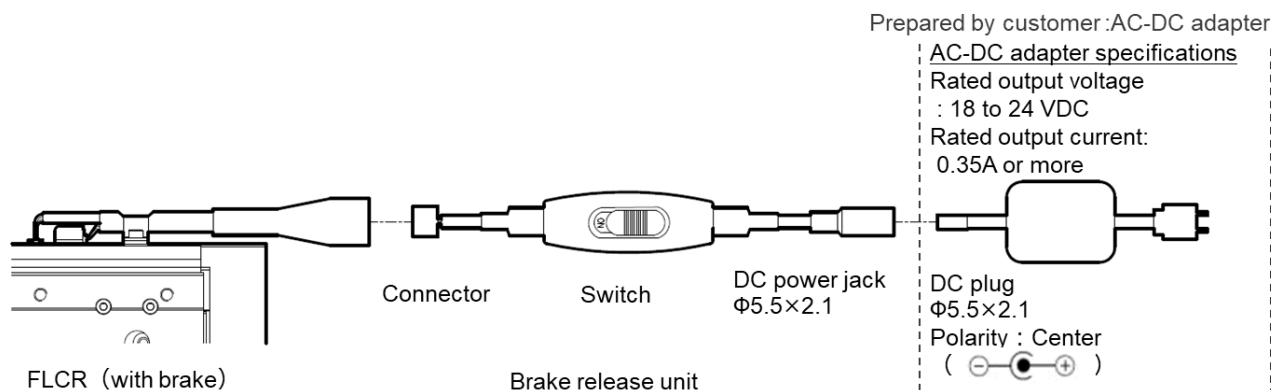

3. USAGE



DANGER



Do not enter the operating range while the actuator can operate.

- An injury may occur.

Do not work with wet hands.

- Doing so may cause electric shock.



WARNING



Do not climb on the product or put things on it.

- A fall accident, injury due to the product falling down or off, etc., or malfunction and runaway due to the product damage may occur.

Do not issue a command with a set value smaller than the positioning repeatability.

- The positioning control may not be performed properly.

Do not apply a load greater than the allowable value to the product.

- Details of the allowable value are provided on the model selection page of the catalog.



Do not touch the main unit with hands or body during operation or immediately after stopping.

- There is a risk of contact with hot areas and burns.



Confirm the wiring with peripheral devices and that equipment is safe to operate before supplying electricity to the product.

- If electricity is supplied inadvertently, an electric shock or injury may occur.

Turn off the power immediately if the LED indicator on the controller does not blink even when the power is turned ON.



Before controlling the actuator from a position where it cannot be seen, check that it is safe for the actuator to operate.



When a power failure occurs, turn off the power to the controller.

- The product can suddenly start moving when the power is restored and it can lead to an accident.

Before moving the movable section of the product manually, make sure that the servo is turned off.

- When setting the servo OFF, operate with sufficient safety so that there is no danger of the moving part falling.

Take measures to prevent damage to the human body and the device in case of power failures.

- An unexpected accident may occur.



CAUTION



When the controller and actuator are connected with a cable, do not move the actuator moving part by external force except for manual operation.

- A malfunction or damage may occur due to regenerative currents.

Do not apply external force to the actuator during the home position return operation.

- The home position may be misrecognized.

Do not dent or scratch the moving part of the actuator.

- An operation fault may occur.

Do not set the servo OFF while gravity or force of inertia is applied.

- The movable section may continue to move or fall off if the servo is turned off. For safety reasons, perform the servo OFF operation in a balanced state, or be careful not to drop the workpiece by its own weight in the case of vertical installation.

Do not issue the stop command during acceleration or deceleration.

- There is a risk of danger due to speed change.

Do not turn the power on and off frequently.

- Elements in the controller may become damaged.

Except during home position return operation and pressing operation, do not allow the slide table to hit parts such as the mechanical stopper and the stroke end.

- The feed screw may become damaged due to impacts and an operation fault may occur.

Do not operate the product with the slide table fixed.



Do not insert fingers or objects into the opening of the product.

- An injury or product damage may occur.



To prevent vibration from occurring by adjusting speed or gain when an operation accompanying vibration is performed.

- Depending on the conditions of use, it may operate with vibration even within the operation speed range.



CAUTION



When changing the combination of the actuator and controller, be sure to check the program and parameters before operating them.

- An accident may occur.

Use the actuator so that no impact is applied to the moving part.

Since the product life varies depending on the transfer load, etc., set it with sufficient margin.

Provide the required pressing force with a sufficient margin to ensure operation.

- The pressing force and the maximum current values given in “7.1 Specifications” are provided as a guide. Variation in the motor torque may cause errors even when the setting values are the same.

Do not use a load that does not fall within the specified range.

- If the specified range is exceeded, the unbalanced load applied to the guide section becomes excessive. This may cause play in the guide section, make the accuracy worse, and adversely affect the service life.

When operating the product without supplying power, make sure to use the manual operation screw.

When performing pressing operation, be sure to use “pressing operation.”

Provide the desired stop position with a sufficient margin to ensure operation when setting the target position for the pressing operation.

- Set the position considering the backlash amount.



- “Regenerative current” is the current that is generated by the motor operating like a generator when the moving part of the actuator is moved by an external force. Reverse current flows from the motor to the controller, causing malfunction or damage.
- Backlash is a mechanical play in gears, etc. The lower the backlash, the less rattling.

3.1. Using the Controller

For how to use the controller and S-Tools, refer to the instruction manual for each product.

Refer to “1.2 Instruction Manuals Related to This Product” for the instruction manual numbers

■ With brake



CAUTION



Do not use a controller with an old software version.

- An operation fault may occur.

Software Ver. of the controller must be 1.01.00 or later. Software Ver. of the controller can be checked from the controller information in the Model Information view of S-Tools.

Read

Actuator information

Information of actuator connected last time

Model number

<<

Information of actuator being connected

Model number

Software ver.

When actuator information does not match

Reconnect it to the actuator connected last time or overwrite the actuator information and cycle the power.

After performing overwriting, reset the point data and parameter.

Overwriting

Controller information

Model number

Serial number

Software ver.

Interface information

Interface specifications

Software ver.

■ Stroke 125 or more



CAUTION



Do not use a controller with an old software version.

- An operation fault may occur.

Software Ver. of the controller, must use following version or later. Software Ver. of the controller can be checked from the controller information in the Model Information view of S-Tools.

Controller	Interface specifications	Software Ver.
ECG-B	Parallel I/O, CC-Link, EtherCAT, EtherNet/IP	V1.05.00 or later
	IO-Link	V1.06.00 or later
ECMG	CC-Link, EtherCAT, EtherNet/IP	V1.03.00 or later

Read

Actuator information

Information of actuator connected last time

Model number

<<

Information of actuator being connected

Model number

Software ver.

When actuator information does not match

Reconnect it to the actuator connected last time or overwrite the actuator information and cycle the power.

After performing overwriting, reset the point data and parameter.

Overwriting

Controller information

Model number

Serial number

Software ver.

Interface information

Interface specifications

Software ver.

3.2. Manual Operation



CAUTION



Do not apply excessive torque to the manual operation plate.

- An operation fault or damage may occur.




Before performing manual operation, make sure that the servo is turned off.

- A malfunction or damage may occur with the product.

Manual operation is mainly used during startup, maintenance, and inspection.


- Frequent use may cause the actuator to operate in an unexpected way.

When using the manual operation screw, make sure to use a hex key that is suitable for the screws listed below.

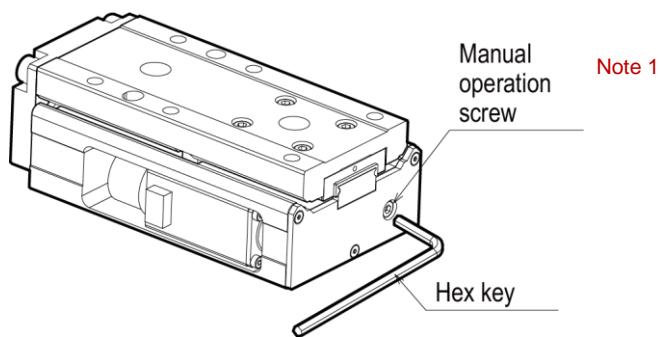


Note 1: FLCR (with brake) does not have it.

	Manual operation screw size	Tool
FLCR-16	M3	Hex key for M3 (across flats: 2.5 mm)
FLCR-20	M3	Hex key for M3 (across flats: 2.5 mm)
FLCR-25	M4	Hex key for M4 (across flats: 3 mm)

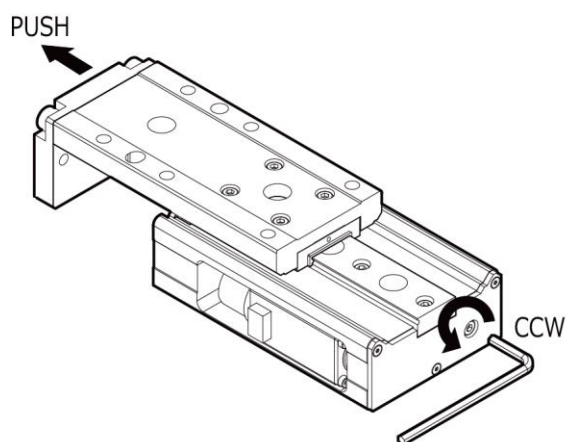

CCW (counterclockwise): Advances in the PUSH direction.

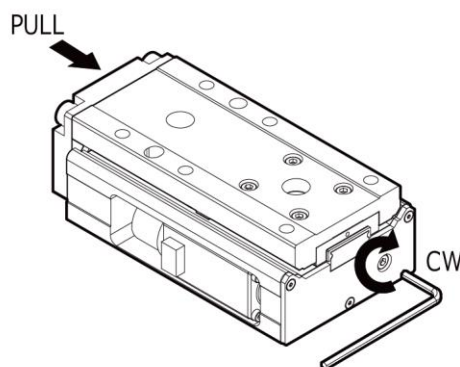

CW (clockwise): Advances in the PULL direction.

4. MAINTENANCE AND INSPECTION



WARNING



Do not disassemble or modify the product not specified in this Instruction Manual.

- In addition to causing injuries, accidents, malfunctions, or failures, it may not meet the specifications such as this Instruction Manual.

Do not attach or detach wiring or connectors while the power is turned on.

- A malfunction, failure, or electric shock may occur.

Do not work with wet hands.

- Doing so may cause electric shock.



Do not touch the heat sink and cement resistor inside the controller, and the actuator motor.

- An electric shock or burns may occur.



Install the product before wiring.

- An electric shock may occur.



After 5 minutes or more have passed since the power was turned off, check the voltage with a tester, etc., and then perform the inspection.

- An electric shock may occur.



CAUTION



During maintenance, inspection, and repair, call attention to the surroundings so that a third party does not accidentally turn on the power.

Turn off the power immediately if abnormal heat, smoke, odor, sound, or vibration occurs in the product.

- Damage to the product or fire may occur.



Wiring and inspections must be performed by specialists.

Use a power cable that can sufficiently tolerate the instantaneous maximum current.

- A heat generation or damage may occur during operation.

Perform periodic inspections (two to three times a year) to confirm that the product operates properly.

Grease the guide section every 6 months or every 1,000,000 operations, whichever comes first.

- Since the greasing interval depends on the conditions of use, consider the appropriate interval when performing initial inspection.

Wear protective glasses when greasing.

- If spattered grease comes in contact with the eyes, it can cause inflammation.

4.1. Periodic Inspection



CAUTION



Perform periodic inspections (two to three times a year) to confirm that the product operates properly.

4.1.1. Inspection item

Inspection item	Inspection method	Action
Check that the mounting bolts on the product and the screws on the terminal block are not loose.	Looseness check	Turn off the power, and then additionally tighten them with the specified torque.
Check that connectors are not loose.	Looseness check	Turn off the power, and then insert the connectors correctly.
Check that there are no scratches and cracks on the cables.	Visual inspection	Turn off the power and then replace cables.
Check that foreign matters are not accumulating or are not stuck in between the movable section.	Visual inspection	Turn off the power, and then perform cleaning. Note 1 After cleaning, apply grease. As a guide, the frequency should be once per six months or per one million times of actuation. Note 2 Lithium-based grease: AFF grease (THK Co., Ltd.) Note 3
Check that there are no vibrations or abnormal sounds while the product is stopped or operated.	Noise inspection	If there is any abnormality, contact your nearest CKD sales office or distributor.
Check that the power supply voltage is normal.	Inspection by a tester	Check the power system and use the product within the power supply voltage range described in the Specifications. Supply voltage: 24 VDC $\pm 10\%$

Note 1: Use a clean waste cloth for cleaning and make sure not to leave foreign matters on the movable section.

Note 2: Applying grease earlier than recommended to low-lead products allows the actuator to be used more safely.

Note 3: Contact CKD for the grease for the FLCR-P4 series.



- Greasing is to apply grease to bearings, etc., to reduce friction and smooth mechanical operation. Because the performance cannot be demonstrated due to deterioration of grease or adhesion of foreign material, periodic maintenance is required.

4.2. Precautions on Product Disposal



CAUTION



When disposing of the product, comply with “laws pertaining to disposal of wastes and cleaning” and have an industrial waste disposal company dispose of the product.

5. TROUBLESHOOTING

5.1. Problems, Causes, and Solutions

If the product does not operate as intended, check according to the table below. Refer to the catalog or the instruction manual of each controller for details on how to take action. Refer to “1.2 Instruction Manuals Related to This Product” for the instruction manual numbers of controllers.

Problem	Cause	Action
Servo lamp does not light or blink even when the power is turned on.	Wiring is not correct.	Check the power supply wiring.
	The cable is disconnected.	Check for cable sheath damage, disconnection, connectors and terminals.
	The product is failure or damaged.	It requires repair. Contact your nearest CKD sales office or distributor.
	The power supply is faulty.	Repair or replace the power supply.
	Power capacity is insufficient.	Use a power supply with large capacity.
The alarm lamp remains lit in red.	Alarm has been issued.	Check the alarm code and remove the cause.
	There is an abnormality in system.	It requires repair.
No signal of ready for operation is output.	It is in emergency stop state.	Release the emergency stop.
	A voltage is applied to the force brake release signal.	Ensure that a 24 V voltage is not applied to the force brake release signal during operation.
	In servo OFF state	Input the servo ON signal from the PLC.
	The stop signal is OFF.	Turn ON the stop signal.
	Wiring is not correct.	Check the wiring to the PLC.
Product does not operate as intended with PLC signal.	Input signal is unstable.	The input signal from the host equipment may be chattering. Ensure the input signal is at least 20 msec.
	It stops during operation.	The transfer load may be too large. Recheck the specifications.
	The point data configuration is wrong.	Check the point data configuration.
	Setting of operation mode is incorrect.	Check the “Operation mode” details in the parameters.
	Wiring is not correct.	Check the wiring.
	Friction load is too large.	Check the friction load during transport. Confirm that it is not seizing with the workpiece.

Problem	Cause	Action	
Product does not operate as intended with PLC signal.	It is colliding with the workpiece.	Check the assembly and setting status.	
	Internal resistance of product has increased.	Recheck the environment conditions and the conditions of use. Check the usage period (operating distance).	
	Actuator body is damaged.	It requires repair.	
Product itself vibrates.	Connection to actuator is loose.	Tighten the bolts, etc. again.	
		Perform gain adjustment.	
The product cannot be operated with PLC.	It is in TOOL mode.	Use S-Tools to change it to PLC mode.	
	Wiring is not correct.	Check the wiring.	
	The cable is disconnected.	Check for cable sheath damage, disconnection, connectors and terminals.	
	Overload error occurs.	Check the transport load. Check the speed.	
	Power capacity is insufficient.	Confirm that the power capacity satisfies the required voltage and current.	
Workpiece moves due to its own weight during an emergency stop.	It is servo OFF state at emergency stop.	Designed to be brakeless	Use a type with brake.
		Brake is forcibly released.	Turn off the forced release of the brake.
	Load exceeding holding force is applied.	Confirm that an external force equal to or higher than the holding force is not being operated.	
		Review the setting of the parameter "Fixed current when stopped".	
Positioning completion output does not turn off.	The positioning width is too large for the travel distance.	Check the "Positioning width" in the point data.	
Pressing operation cannot be performed.	Operation method is not set to pressing operation.	Check the "Operation method" in the point data.	
The maximum speed is not achieved.	The load or speed is excessive.	Confirm that the workpiece weight and operation speed satisfy specification values.	
		Perform gain adjustment.	
The speed is very slow.	Operation method is set to pressing operation instead of positioning operation.	Check the "Operation method" in the point data.	
		Perform gain adjustment.	
The actuator is making abnormal sound.	It is resonating.	Perform gain adjustment.	
Overshoot occurs.	Both transfer weight and amount of deceleration are large.	Confirm that the workpiece weight and operation speed satisfy specification values.	
		Reduce the "Deceleration" in the point data.	
		Perform gain adjustment.	

Problem	Cause	Action
The actuator does not work.	The servo does not turn ON.	Check the MPI and MPO connections on the power connector.
		Check the emergency stop release status.
		Check whether a voltage is applied to the force brake release.
It cannot reach target takt time.	Setting of acceleration or speed is not correct.	Check the "Acceleration" in the point data.
		Check the "Speed" in the point data.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

5.1.1. Items to Check When a Problem Occurs

Item	What to check			
Controller	Check the light status on the controller.			
	Communication status		SV	ALM
	When the control power is OFF		Off	Off
	At normal operation	At servo ON	Lit green	
		At servo OFF	Blinking green (lit once per second)	
	At alarm occurrence	At occurrence of non-cancelable alarm	Blinking green (After lighting off for 2 seconds, light on once every 1 second n times, and then repeat) -> Alarm 0xn □□□ occurred	Lit red
		At occurrence of cancelable alarm		Blinking red (lit once per second)
	At occurrence of warning	At servo ON	Lit green	Blinking red (lit once per 2 seconds)
		At servo OFF	Blinking green (lit once per second)	
	PLC	Check whether there is an error on the PLC.		
Alarm	Use S-Tools to check the alarm information.			
Actuator information	When using the ECG-B series, check that the actuator information written in the controller is identical with the connected actuator.			
PLC communication	Use S-Tools to check the I/O status.			
Cable connection check	Make sure that the cables are connected properly without “disconnection” or “damaged sheath.” Before checking the continuity, be sure to turn off the power and remove the cables to prevent an electric shock.			
Control power supply	Check the voltage of the control power supply (24 VDC).			
Anti-noise measure	Check that measures (such as connecting ground wire and attaching a surge protector) have been taken against noise.			
Situation check	Check the history leading up to the trouble occurring and the operation condition when the trouble occurred.			
Serial number	Check the product's serial No. It may be requested for confirmation when you make an inquiry.			

※ Examine the cause of the trouble on the basis of the above items. Refer to “5.1 Problems, Causes, and Solutions” for solutions.

6. WARRANTY PROVISIONS

6.1. Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge. However, the following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or the Instruction Manual.
- Failure caused by use of the product exceeding its durability (cycles, distance, time, etc.) or caused by consumable parts.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters. When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall take precedence.

6.2. Warranty Period

The product specified herein is warranted for one (1) year from the date of delivery to the location specified by the customer.

7. Reference Information

7.1. Specifications

Item			FLCR-16		FLCR-20		FLCR-25	
Motor type			Stepping motor					
Encoder type			Incremental encoder					
Drive method			Rolled ball screw (Φ6)+ Belt		Rolled ball screw (Φ6)+ Belt		Rolled ball screw (Φ10)+ Belt	
Motor size		mm	□20		□25		□25L	
Stroke		mm	50, 75, 100,125,150		50, 75, 100,125,150,200			
Screw lead		mm	2	8	2	8	2	6
Max. load capacity Note 1	Horizontal	kg	4	3	5.5	5	11	11
	Vertical	kg	4	0.5	6	0.8	8.5	3
Operating speed range Note 2		mm/s	2 to 100 (90)	10 to 250 (250)	2 to 100 (100)	10 to 300 (200)	2 to 75 (75)	7 to 200 (150)
Pressing speed range		mm/s	2 to 20	5 to 20	2 to 20	5 to 20	2 to 20	5 to 20
Max. pressing force		N	90	20	150	55	210	90
Repeatability		mm	±0.02					
Lost motion		mm	0.1 or less					
Static allowable moment	Stroke: 50	N·m	MP:17.8		MP:31.1		MP:65.1	
			MY:17.8		MY:31.1		MY:65.1	
			MR:19.2		MR:37.6		MR:116.3	
	Stroke: 75 100	N·m	MP:37.3		MP:56.2		MP:127.5	
MY:37.3			MY:56.2		MY:127.5			
MR:19.2			MR:37.6		MR:116.3			
Motor power supply voltage			24 VDC ± 10%					
Motor section instantaneous maximum current		A	1.5		3.0		4.5	
Brake	Model, power supply voltage		Non-excitation operation, 24 VDC (+10%/-5%)					
	Power consumption		W		1			
	Holding force		N	51	9	77	15	109
Insulation resistance			10 MΩ, 500 VDC					

Note 1: Maximum value at an acceleration/deceleration of 0.3 G. The load capacity varies depending on the acceleration/deceleration and speed and stroke.

Note 2: The values in () are strokes of 125 or higher.

Item	FLCR-16	FLCR-20	FLCR-25
Withstand voltage	500 VAC, 1 minute		
Operating ambient temperature	0 to 40°C (no freezing)		
Operating ambient humidity	35% to 80% (no condensation)		
Storage ambient temperature	-10 to 50°C (no freezing)		
Storage ambient humidity	35% to 80% (no condensation)		
Atmosphere	No corrosive gas, explosive gas, or dust		
Protective structure	Equivalent to IP40 (IEC standard)		

■ Weight (kg) of FLCR Series

Item		Stroke (mm)					
Size	Brake	50	75	100	125	150	200
FLCR-16	Without brake	0.8	1.1	1.3	1.5	1.6	-
	With brake	0.9	1.2	1.4	1.6	1.7	-
FLCR-20	Without brake	1.3	1.7	1.9	2.0	2.3	2.8
	With brake	1.4	1.8	2.0	2.1	2.4	2.9
FLCR-25	Without brake	2.3	3.0	3.3	3.5	4	4.7
	With brake	2.5	3.2	3.5	3.7	4.2	4.9

※ For the P4 Series, increase by 0.1kg for the above weight.

7.2. Cable specifications

The following motor / encoder relay cable is attached with actuators shipped before September 2022.

To comply with EU standards when using ECMG, use an EA-CBLME4 cable. For compliance with EU standards when using ECG, both EA-CBLME2 and EA-CBLME4 cables can be used.

■ Motor/encoder relay cable model number system

EA-CBLME2-


S

01

Cable type	
S	Fixed cable
R	Movable cable

Cable length	
01	1 m
03	3 m
05	5 m
10	10 m

■ Motor/encoder relay cable external dimensions

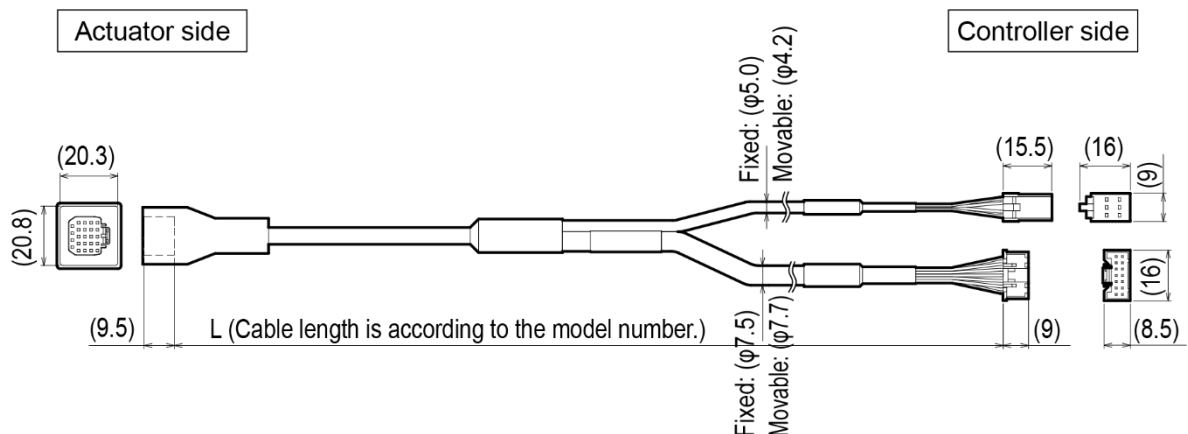

Index

E

End plate 29

F

Flatness 27, 28, 29

G

Grease..... 38

L

Lost motion 45

M

Manual operation screw 36

Max. load capacity 45

Max. pressing force 45

Motor/encoder relay cable..... 17, 47

O

Operating speed range 45

P

Pressing speed range 45

R

Repeatability 45

S

Screw lead 45

Slide table..... 28

Static allowable moment..... 45

S-Tools9, 11


Glossary

CAT5e

A standard for network cables, also called category 5e or category 5 enhanced. The communication speed has been improved from the conventional CAT5 standard. This cable is less susceptible to crosstalk caused by noise from other cables.

CCW

Abbreviation for Counter Clockwise Rotation. Counterclockwise when viewed from the output shaft side.

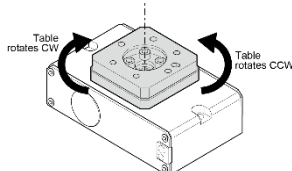

CRC


Abbreviation for Cyclic Redundancy Check. Also referred to as cyclic redundancy checking. A method to check whether data was transmitted, recorded, or replicated accurately.

CSP + file

Abbreviation for the Control & Communication System Profile Plus file. It contains information to help start up, operate, and maintain CC-Link compatible devices. Since the profile specification is fixed, parameters can be easily set for CC-Link products even if they are from different manufacturers.

CW

Abbreviation for Clockwise Rotation. Clockwise when viewed from the output shaft side.

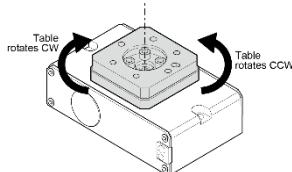

Data storage function

A function to back up the configuration parameter data of an IO-Link device, such as an ECG controller, to the IO-Link master.

DHCP server

A server that automatically assigns IP addresses and other configuration information to devices connected to a network.

EDS file

Abbreviation for Electronic Data Sheet file. It contains information to help start up, operate, and maintain EtherNet/IP-compatible devices. Since the profile specification is fixed, parameters can be easily set for EtherNet/IP products even if they are from different manufacturers.

ESI file

Abbreviation for EtherCAT Slave Information file. It contains information to help start up, operate, and maintain EtherCAT compatible devices. Since the profile specification is fixed, parameters can be easily set for EtherCAT products even if they are from different manufacturers.

HDLC

Abbreviation for High-level Data Link Control, and a type of protocol of the data link layer. Transmission efficiency is high because continuous transmission can be performed without waiting for the other party's response, and data error detection using CRC enables highly reliable data transmission.

IODD file

Abbreviation for the IO Device Description file. It contains information to help start up, operate, and maintain IO-Link compatible devices. Since the profile specification is fixed, parameters can be easily set for IO-Link products even if they are from different manufacturers.

IO-Link device

Devices such as sensors, actuators, and controllers compatible with IO-Link.

IO-Link master

It can connect multiple IO-Link devices and receive signals of the IO-Link devices. The IO-Link master can be set with IO-Link device setting items such as device verification function, backup function, and restore function using PLC development tools.

Input data

It indicates the 32 bit unit data (2 words) to be written from the host device (PLC, etc.) to the controller in EtherCAT communication.

Input signal

It indicates the bit-wise data to be written from the host device (PLC, etc.) to the controller in EtherCAT communication.

Output data

It indicates the 32 bit unit data (2 words) read from the controller by the host device (PLC, etc.) in EtherCAT communication.

Output signal

It indicates the bit-wise data read from the controller by the host device (PLC, etc.) in EtherCAT communication.

NPN

It indicates that NPN transistors are generally used in the output unit of a PLC in the connection of the parallel I/O specification. Even if the NPN transistor is not used, if the – side of the external power supply is connected to the output COM (output common) and the + side of the external power supply is connected to the input COM (input common), the term NPN is used. Also referred to as negative common type or sink type.

PNP

It indicates that PNP transistors are generally used in the output unit of a PLC in the connection of the parallel I/O specification. Even if the PNP transistor is not used, if the + side of the external power supply is connected to the output COM (output common) and the - side of the external power supply is connected to the input COM (input common), the term PNP is used. Also referred to as positive common type or source type.

PLC

Abbreviation for Programmable Logic Controller. A programmable controller for controlling industrial equipment. Possible to control multiple motors, sensors, robots, and other various devices.

WDT

Abbreviation for watchdog timer. A timer that detects an error in the computation time, monitors the time of one scan of the program, and issues an alarm if processing does not finish within the scheduled time.

Alarm code

When an error is detected, it is output from the controller to inform you of the error. You can check the display lamp of the controller, the output signal to the PLC, and all digits or one upper digit of the alarm code from S-Tools. You can check the details of the alarm in the Instruction Manual or the alarm history screen of S-Tools.

Inch operation

It is used when you want to move by relative position specification by the amount of travel set from the current position.

Encoder

There are a linear encoder that measures and outputs movement on a linear axis, and a rotary encoder that measures and outputs angle (rotational movement). The rotary encoder is referred to as an encoder in this Instruction Manual, the instruction manual described in the “Instruction manual for this product”, and the catalog.

- Incremental encoder

An encoder that measures and outputs the angle moved from the measurement start position.

When using with an electric actuator, the amount of movement from the home position is unknown, so it is necessary to return to the home position before operating the actuator.

- Absolute encoder

An encoder that measures and outputs the angle moved from the home position. When using with an electric actuator, it is not necessary to return to the home position before operating the actuator because it outputs the amount of movement from the home position.

- Battery-less absolute encoder

An absolute encoder that does not require a battery to store the position.

Overhang amount

It indicates the distance from the center of the top surface of the slider to the center of gravity of the object transferred. In the catalog, the amount of overhang that is allowed in the front-back, left-right, and up-down directions is listed for each mass.

Regenerative current

 
Current that is generated by the motor operating like a generator when the moving part of the actuator is moved by an external force. Reverse current flows from the motor to the controller, causing malfunction or damage.

Portable mass

It indicates the maximum mass that the actuator can transfer.


Allowable thrust load

Limit value of the load that can be applied in the direction of the actuator rotation axis. WS is used in this Instruction Manual, the instruction manual described in the "Instruction manual for this product", and the catalog.




Allowable radial load

 Limit value of the load that can be applied perpendicular (laterally) to the actuator rotation axis. WR is used in this Instruction Manual, the instruction manual described in the "Instruction manual for this product", and the catalog.



Allowable moment load

 Limit value of the load that can be applied in the direction of tilting the actuator rotation axis. M is used in this Instruction Manual, the instruction manual described in the "Instruction manual for this product", and the catalog.



Home position

Position to be the reference (0 mm) for actuator operation.

Positioning repeatability

A term that is used only for grippers. It indicates the difference between the maximum and minimum stop positions when positioning operation is repeated from the same direction to the same position.

Repeatability

It Indicates the difference between the maximum and minimum stop positions when positioning operation is repeated from the same direction to the same position. However, in the case of grippers, it indicates the variation when the same workpiece is repeatedly gripped under the same operating conditions.

Grease

It is applied to bearings, bearings, etc., to reduce friction and smooth the operation of the machine. Because the performance cannot be demonstrated due to deterioration of grease or adhesion of foreign material, periodic maintenance is required.

Surge protector

A device that protects equipment and communication equipment from transient abnormal high voltage such as lightning.

Servo OFF

It indicates that the motor is not energized.

Servo ON

It indicates that the motor is energized.

Cyclic communication (transmission)

It indicates periodic communication between the host device (PLC, etc.) and the controller.

Subnet mask

A value that identifies in the IP address the part indicating which network it belongs to (network range) and the part indicating which device in the network. The subnet mask value tells you how many bits from the beginning of the IP address indicate the network range.

IP address: 192.168.10.1

Subnet mask: 255.255.0.0



Network range: 192.168.□.□

Jog operation

While the travel command is issued, the actuator continues to operate at the set speed.

Slave station

 
A general term for stations other than the master station.

Static allowable moment

Limit value of the load moment that can be applied to the slider when the actuator is stationary. How to apply each moment in the slider type is as follows.


- Pitching moment

A moment acting in the front-rear direction on the slider movement axis. MP is used in this Instruction Manual, the instruction manual described in the “Instruction manual for this product”, and the catalog.



- Yawing moment

 A moment that acts in the left-right direction on the slider movement axis. MY is used in this Instruction Manual, the instruction manual described in the “Instruction manual for this product”, and the catalog.



- Rolling moment

A moment that acts in the axial rotation direction on the slider movement axis. MR is used in this Instruction Manual, the instruction manual described in the “Instruction manual for this product”, and the catalog.



Installation category

A concept that expresses how well an electrical device can withstand the application of a transient voltage from an AC power source. The installation category 2 corresponds to “primary side circuit for equipment using a power cord connected to an outlet”.

Full-duplex communication

A communication method that allows simultaneous transmission and reception.

Occupied station number

In the CC-Link specification, a value that indicates how much traffic the controller occupies in the communication in the system. Since the number of stations that can be used by one master station is fixed, the total number of stations occupied by the controller and other units connected to the master station must be less than that value.

Soft limit

It indicates the limit of the operating range set in the controller.

Dynamic brake

A method that quickly stops the rotation of the motor by consuming rotational energy as heat energy by short-circuiting the motor terminals via a resistor in the event of a power failure or emergency stop. Since there is no holding torque during stop, it is necessary to use an electromagnetic brake for vertical installation.

Electromagnetic brake

A mechanism that mechanically fixes the output shaft of the motor to prevent the workpiece from falling off when becoming the servo OFF state due to power failure or an alarm in the vertical installation state. Because it is a brake for holding, it cannot be used for stopping during operation.

Electric Actuator

It is a combination of a motor and mechanical parts, and can control operations such as speed, angle, and force. The rotational force of the motor is transmitted to the drive system and converted into rotational motion or linear motion.

Default gateway

It indicates the IP address of a relay device (such as a router) that connects the inside network to the outside network. When sending or receiving data to or from a device at an address other than the network range set by the subnet mask, the relay device set by the default gateway is always passed through.

Screw lead

It refers to the distance that the workpiece can be moved when the motor rotates once in the electric actuator.

Noise filter

An electrical circuit or electronic circuit that removes noise, or a device that contains it.

Backlash

A mechanical play in gears, etc. The lower the backlash, the less rattling.

Parameter

Parameters let you set basic items for operating the actuator. In addition to the settings related to the actuator operation, settings related to communication with the PLC and warnings are also set with parameters.

Half-duplex communication

A communication method in which both transmission and reception cannot be performed at the same time (only one of them can be performed).

Fast Ethernet

It is standardized by IEEE802.3u and is a standard that improves the transmission speed of Ethernet to 100 Mbps.

Function block (FB)

It is a component of a circuit block that is used repeatedly so that it can be reused in a sequence program. By making them into the components, the control that combines multiple functions can be simplified as if it were a single command.

Ferrite core

It is magnetic material using ferrite material. It is used to attenuate high frequency noise.

Process data output / PD(out)

It indicates the data to be written from the host device (PLC, etc.) to the controller in IO-Link specification communication.

Process data input / PD(in)

It indicates the data that the host device (PLC, etc.) reads out from the controller in IO-Link specification communication.

Point data

In the point data, the actuator operation pattern such as the target position and speed is set for each point number. In ECG series, the operation pattern for 64 points can be set, and the actuator can be operated by specifying the point number and issuing a travel command.

Polling

If multiple devices communicate separately, processing and signals can conflict and cause problems. Polling is the process in which the main device (master station) checks in order whether there are any requests from other devices (slave station) in order to communicate smoothly.

When polling response is being performed, it means that there is polling from the master station to the slave station, and the slave station is responding to the polling from the master station.

Ball screw


A mechanical element that can convert rotational motion to linear motion. Unlike sliding screws, the ball rolls between the screw shaft and nut, reducing energy loss due to friction. It is used to convert the rotational motion of the motor into the linear motion of the actuator.

Baud rate

It indicates the communication speed. A value that indicates how many times per second digital data can be modulated and demodulated.

Protective class IP20 / IP40

The protective class indicates the degree of protection from solid foreign materials such as dust and water. The first digit of the number indicates the degree of protection against the human body and solid foreign materials, and "2" indicates that it is protected against foreign solid materials with a diameter of 12.5 mm or more and "4" indicates that it is protected against foreign solid substances with a diameter of 1.0 mm or more. The second digit of the number indicates the degree of protection against water intrusion, and "0" indicates no protection. It is specified in JIS C 0920 and IEC 60529.

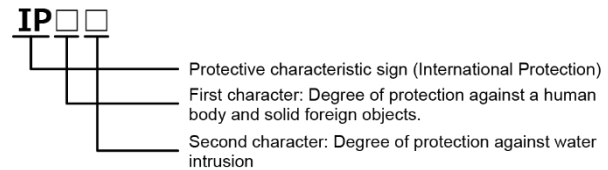**Master station**

A station that controls the entire network. One master station is required for one network.

Mechanical end

A position where the moving part of the actuator stops mechanically.

Message communication (transmission)

It indicates communication that occurs irregularly (when necessary) between the host device (PLC, etc.) and the controller.

Remote device station

A station that cyclically transmits bit-wise input / output signal and word-based input / output data to the master station in the communication of CC-Link specification.

Remote output

It indicates bit-wise data that is written from the host device (PLC, etc.) to the controller in the communication of CC-Link specification.

Remote input

It indicates bit-wise data that the host device (PLC, etc.) reads out from the controller in the communication of CC-Link specification.

Remote register (output)

It indicates 16-bit unit (1 word) data that is written from the host device (PLC, etc.) to the controller in the communication of CC-Link specification.

Remote register (input)

It indicates 16-bit unit (1 word) data that the host device (PLC, etc.) reads out from the controller in the communication of CC-Link specification.

Lost motion

It is the maximum value of the difference between the average values at the stop position after rotating in the forward and reverse directions multiple times. It is affected by the backlash and the rigidity of the mechanism.