

Mounting, installation and adjustment

⚠ WARNING

- Do not apply load to the pass-pipe.
Otherwise, air to the boosted stroke passes through and may prevent the boosted stroke cylinder from operating.



| |
|--------------|
| LCM |
| LCR |
| LCG |
| LCW |
| LCX |
| STM |
| STG |
| STS/STL |
| STR2 |
| UCA2 |
| ULK* |
| JSK/M2 |
| JSG |
| JSC3/JSC4 |
| USSD |
| UFCD |
| USC |
| UB |
| JSB3 |
| LMB |
| LML |
| HCM |
| HCA |
| LBC |
| CAC4 |
| UCAC2 |
| CAC-N |
| UCAC-N |
| RCS2 |
| RCC2 |
| PCC |
| SHC |
| MCP |
| GLC |
| MFC |
| BBS |
| RRC |
| GRC |
| RV3* |
| NHS |
| HRL |
| LN |
| Hand |
| Chuk |
| MechHnd/Chuk |
| ShkAbs |
| FJ |
| FK |
| SpdContr |
| Ending |