

Serial Transmission Device

W4G4 Series T7EF*1
(W4G-OPP8-1EF-*)

CC-Link IE Field Compatible

INSTRUCTION MANUAL

SM-A52545-A



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

PREFACE

Thank you for purchasing CKD's **serial transmission device**. This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly. Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product, which uses control valves such as solenoid valves, motor valves, and air operated valves, is intended for users who have basic knowledge about materials, fluids, piping, and electricity. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training with respect to control valves.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, piping, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the pneumatic or water control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO4414, JIS B8370, JFPS2008 (the latest edition of each standard),
the High Pressure Gas Safety Act, Industrial Safety and Health Act, other safety rules, organization standards relevant laws and regulations.




In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:

Thoroughly read and understand this Instruction Manual before using the product.

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.



Indicates general precautions and tips on using the product.

Precautions on Product Use

WARNING

The product must be handled by a qualified person who has extensive knowledge and experience.

The product is designed and manufactured as a device or part for general industrial machinery.

Use the product within the specifications.

The product must not be used beyond its specifications. In addition, never modify or additionally machine this product.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shut-off circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

Do not handle the product or remove pipes and devices until confirming safety.

- Inspect and service the machine and devices after confirming the safety of the entire system. Also, turn off the energy source (air supply or water supply) and power to the relevant facility. Release compressed air from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

CONTENTS

PREFACE	i
SAFETY INFORMATION	ii
Precautions on Product Use	iii
CONTENTS	iv
1. PRODUCT OVERVIEW	1
1.1 System Overview	1
1.1.1 System features.....	1
1.1.2 System structure.....	2
1.2 Part Name	3
1.2.1 Parts of the device.....	3
1.2.2 Switches and LED indicators	4
1.3 Specifications.....	5
1.3.1 Communication specifications.....	5
1.3.2 Device specifications.....	6
2. INSTALLATION	7
2.1 Mounting	7
2.2 Wiring	8
2.2.1 Connecting and wiring to the network connector socket	8
2.2.2 Connecting and wiring to the unit/valve power plug	10
3. USAGE	12
3.1 Setting the Switches	12
3.1.1 Station number setting	13
3.1.2 Output settings in the event of communication error.	13
3.1.3 Network number settings.....	14
3.1.4 Fast link-up function setting	14
3.2 Settings by CSP+ system profile	15
3.2.1 Parameter acquisition/setting	15
3.3 Remote setting.....	17
3.3.1 Remote I/O	17
3.3.2 Remote register.....	17
3.3.3 Example of valve No. array corresponding to solenoid output No.	18
3.4 Programming	19
4. MAINTENANCE AND INSPECTION	20
4.1 Periodic Inspection.....	20
4.2 Removing and Mounting.....	22
4.2.1 Removing the product (device)	23
4.2.2 Mounting the product (device).....	23
5. Troubleshooting	24
5.1 Problems, Causes, and Solutions	24
6. WARRANTY PROVISIONS	25
6.1 Warranty Conditions	25
6.2 Warranty period.....	25

1. PRODUCT OVERVIEW

1.1 System Overview

1.1.1 System features



Make sure to read the instruction manual for each product.

This Instruction Manual describes the device T7EF*1 (W4G-OPP8-1EF-*) for W4G4.

For the master unit and other remote units that are connected in the same system, refer to the instruction manuals issued by each manufacturer.

For manifold solenoid valves, make sure to read both this instruction manual and the solenoid valve's instruction manual to fully understand the functions and performance in order to use them correctly.

■ T7EF*1 (W4G-OPP8-1EF-*)

This is a device for W4G4 which can connect to the open field network CC-Link IE Field specified by the CC-Link Partner Association (hereinafter referred to as CLPA).

It has the following features:

- The device is connected to PLC with only a network cable (Category 5e or higher), allowing significant reduction in wiring man-hours.
- The unit power and the valve power are separated, ensuring easy maintenance.
- The station number and network number of the device can be set with a hard switch.
- The valve output status can be set by a switch when a communication error occurs. (Hold all points output/ Clear all points output).
- The device is available in +COM or -COM specification.


1.1.2 System structure

This system mainly consists of a PLC, master unit, W4G-OPP8-1EF-* mounted manifold solenoid valve, and peripheral equipment (CC-Link IE Field devices).

■ Examples of PLC and master unit combination


PLC manufacturer	Compatible PLC	Master unit model
Mitsubishi Electric Corporation	MELSEC-R Series	RJ71GF11-T2

■ Example of basic structure of the system

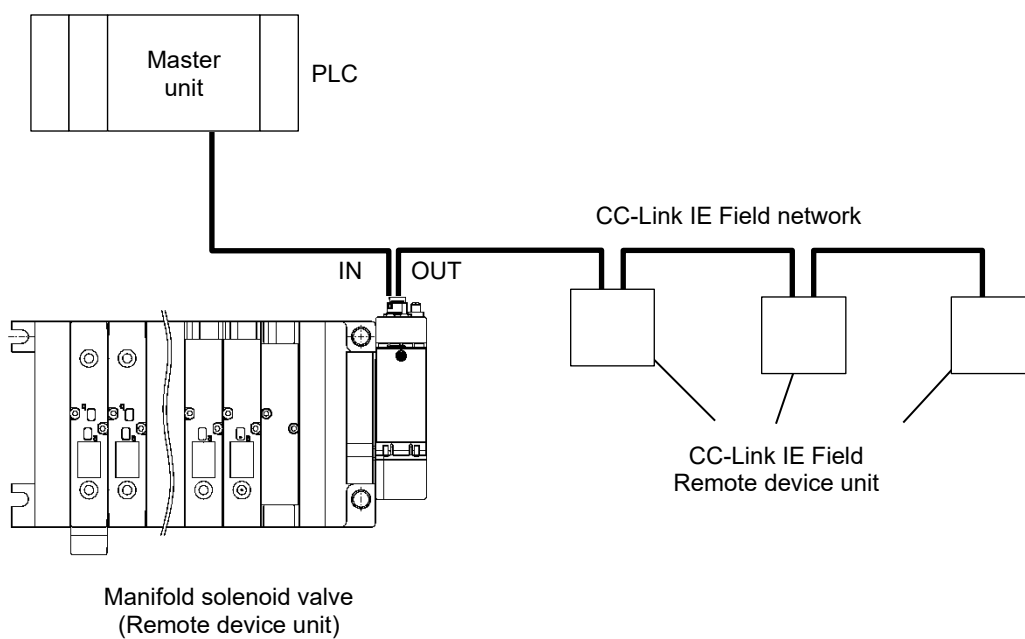

1.2 Part Name

1.2.1 Parts of the device

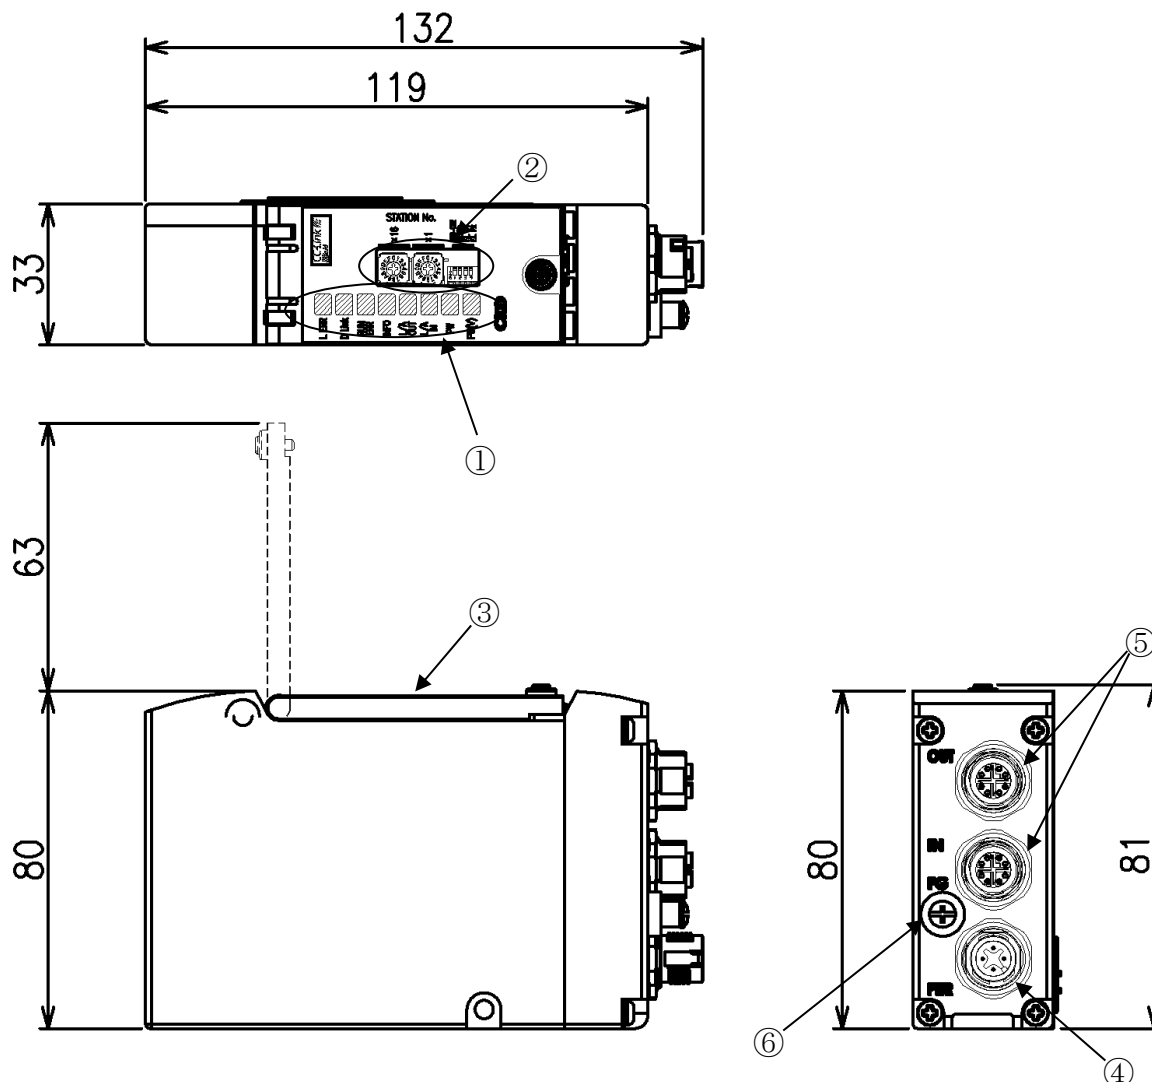

No.	Part name	Description
①	LED indicators	Indicates the status of the device and network with L ERR, D Link, RUN/ERR, LINK/ACT OUT, LINK/ACT IN, INFO, PW, and PW (V).
②	Rotary switches	Set the station number of the device.
	Slide switches	Set the operation at communication error, network number, and Fast Link-up function.
③	Cover	Protects the LEDs and setting switches.
④	Unit/valve power plug [PWR] M12 A code	Connects unit/valve power socket.
⑤	Network connector sockets [IN, OUT] M12-X code	Ports transmit CC-Link IE Field communication to the next device or receive (IN) it from the previous device. Note: There is no difference in the function between input (IN) and output (OUT) ports which only named to distinguish each port. (Except when the Fast Link-up function is ON).
⑥	FG terminal	Connects FG (frame grounding) to the terminal.

1.2.2 Switches and LED indicators


⚠ CAUTION

Discharge static electricity from your body before touching the product.
Static electricity may cause damage to the product.

■ Switches

These switches set the output in the event of a communication error and the device station number. Set the switches with the power off.

Switches		Settings
STATION No.	Setting switches (x 16)	Set the station number of the device.
	Setting switches (x 1)	Refer to 3.1.1. "Station number settings" for the settings.
HLD – CLR	Output setting switch at communication error	Sets the output status when a communication error occurs. Refer to 3.1.2. "Output settings in the event of communication error" for the settings.
NET No.	Network number setting switch	Sets the network number. Refer to 3.1.2. "Output settings in the event of communication error" for the settings.
F.L P1	Fast link-up function (OUT) setting switch	Sets fast link-up function.
F.L P2	Fast link-up function (IN) setting switch	Refer to 3.1.2. "Output settings in the event of communication error" for the settings.

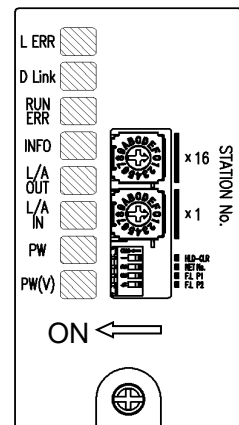

*In the right figure, the slide switch is [ON] when it is in the left position.

■ LED indicators

These LEDs indicate the status of this product and network.

LED	Function	Status
L ERR	Link error	Red on Link(network) error occurred at P1 (OUT) or P2 (IN)
		Off Operating normally.
D Link	Data link	Off Data link has not connected yet.
		Green on Data link is in process.
		Green blinking Data link is stopped.
RUN/ERR	Operating status	Off In initializing
		Red blinking Station number or network number error occurred.
		Red on In parallel off.
		Green on Operating normally.
INFO	Notification	Red blinking Forced output setting is in process.
		Red blinking (slow) Maintenance notice
		Red blinking (fast) Detected Internal hardware abnormality.
		Red flashing (twice) Detected switch operation.
LINK/ACT OUT, IN	OUT(P1), IN(P2) Link status	Off Neither link nor activity.
		Green on Link detected
		Yellow blinking Activity detected
PW	Unit power status	Off Unit power OFF
		Green on Unit power ON
PW(V)	Valve power status	Off Valve power OFF
		Green on Valve power ON

1.3 Specifications

1.3.1 Communication specifications

Item	Specifications
Communication protocol	CC-Link IE Field
Unit type	Remote device unit
Baud rate	1000Mbps
Communication media	Ethernet cable (Category 5e or higher) Shielded twisted pair cable
Maximum number of networks	239
Maximum number of connectable units	120 units
Network topology	Line, star, or ring type
Distance between nodes	Up to 100m

1.3.2 Device specifications

The product must be used within the following specifications.

Item		Specifications	
Model No.		W4G-OPP8-1EF (T7EF1)	W4G-OPP8-1EF-P (T7EFP1)
Unit power supply voltage		21.6 VDC to 26.4 VDC (24 VDC $\pm 10\%$)	
Unit power current consumption		100 mA or less (all points ON at 24.0 VDC)	
Valve power supply voltage		22.8 VDC to 26.4 VDC (24 VDC $+10\%$, -5%)	
Valve power current consumption		10 mA or less (when all points OFF) 15 mA or less (when all points ON at no load)	
Output type		+COM (NPN)	-COM (PNP)
Number of output point		16 points	
Insulation resistance		Between external terminals and the case: 30 M Ω or more with 500 VDC	
Withstand voltage		Between external terminals and the case: 500 VAC for one minute	
Shock resistance		294.0 m/s ² for 3 times in 3 directions	
Storage ambient temperature		-20°C to 70°C	
Storage humidity		30% to 85% RH (no dew condensation)	
Ambient temperature		-5°C to 55°C	
Ambient humidity		30% to 85% RH (no dew condensation)	
Atmosphere		No corrosive gas	
Output insulation		Photo coupler insulation	
Max. load current		40 mA/1 point	
Leakage current		0.1 mA or less	
Residual voltage		0.5 V or less	
Fuse		Valve power: 24V, 3A / Unit power 24V, 2A (Both fuses are non-replaceable)	
Degree of protection		IP65	
Vibration resistance	Durability	10 Hz to 55 Hz to 10 Hz, 1 octave/min., 15 sweeps each in X, Y, Z directions with 0.75 mm half-amplitude or 98.0 m/s ² , whichever smaller.	
	Malfunction	10 Hz to 55 Hz to 10 Hz, 1 octave/min., 4 sweeps each in X, Y, Z directions with 0.5 mm half-amplitude or 73.5 m/s ² , whichever smaller.	

- * For the delay time, refer to the instruction manual for the master unit. Transmission delay as a system varies depending on the PLC scan time and other devices connected to the same network.
- * For the response time of the solenoid valve, check the solenoid valve specifications.
- * Solenoid valve Off time is delayed by approximately 20 msec due to the surge absorbing circuit integrated in the device.

2. INSTALLATION

2.1 Mounting

CAUTION

Before handling the device, touch a grounded metal part to discharge static electricity from your body.

Static electricity may cause damage to the product.

Do not apply tension or shocks to the power cable or network cable.

If the wiring is long, the cable weight or shocks may cause an unexpected force and result in damage to the connector or device.

Take appropriate measures such as secure the wiring to the machine or device midway.

To prevent noise problems, keep the following in mind when wiring:

- If noise could have an effect, prepare power for each manifold solenoid valve and wire separately.
- Wire the power cable as short as possible.
- Wire the power cables for the product separately from the power cables for noise-generating devices such as inverter motors.
- Wire the power cable and network cable away from other power lines as much as possible.

Wire the power cable and network cable properly within its specifications.

Incorrect wiring may cause the device to malfunction or break.

Make sure that cables and connectors are securely connected before turning on the power.

- 1** Connect the network cable and power cable.
Check both this Instruction Manual, the instruction manuals for PLC and each unit, and connect the cable properly.
Incorrect connection may cause not only a system failure but also serious fault to the other devices.
- 2** Keep 200 mm or more away from high-voltage lines and power lines or wire the high-voltage lines and power lines in metal tubing and ground it before mounting this device.

2.2 Wiring

2.2.1 Connecting and wiring to the network connector socket

WARNING

Carry out wiring with the power turned off.

An electric shock may occur by touching the electrical wiring connection (bare live part).

Do not touch live parts with bare hands.

An electric shock may occur.

Thoroughly read and understand this instruction manual before working on electrical wiring.

CAUTION

Check the working voltage and polarity before wiring and energizing.

Take measures against lightning surges on the device side.

The product has no resistance to lightning surges.

Use a dedicated network cable that complies with CC-Link IE Field specifications.

Provide sufficient bending radius for the network cable and do not bend it forcibly.

Separate the network cable from power lines and high-voltage lines.

Although the CC-Link IE Field network uses a standard Ethernet cable and has flexible wiring methods, there are limits depending on the wiring material and equipment (master, hub, and other devices) used. Make sure to understand these specifications before wiring. For details, refer to the instruction manuals issued by the master unit manufacturer or CLPA.

The network plug is not supplied with the product. Separately purchase a network plug that satisfies the specifications.

<Recommended cable with plug [Cat.5e]>

Manufacturer	Cable	Model
Mitsubishi Electric System & Service Co., Ltd.	Industrial Ethernet cable (double shield)	SC-E5EW-□

* □ differs depending on the cable specifications.


Recommended assembly type M12 connector

Manufacturer	Connector	Model
Phoenix Contact KK	Assembly type M12 connector * SPEED mating method	1411043(SACC-MSX-8QO)

■ Connecting the network cable

Follow the steps below to connect the network cable to the network socket.

- 1
- After confirming safety, stop network communication and turn off all peripheral equipment.
- 2
- Refer to the figure below and connect the CC-LINK IEF compliant cable to M12 connector.
- * There is no difference in the function between input (IN) and output (OUT) ports which only named to distinguish each port. (Except when the fast link-up function is ON).
- * The communication of this device turns OFF when the previous device is OFF.

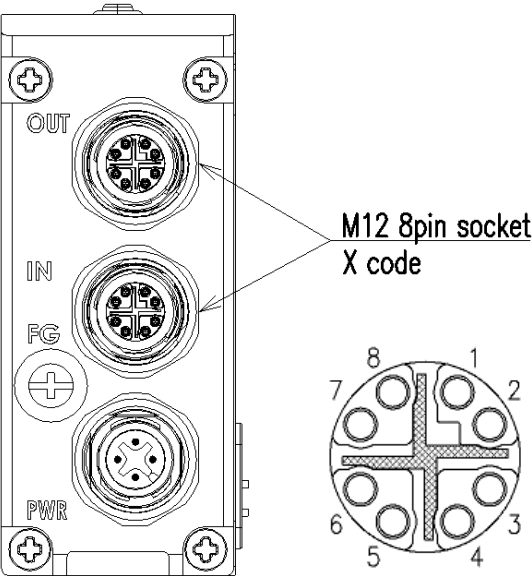

Port	Pin	Signal	Function
IN/ OUT	1	BI_DA+	Sent/received data, plus
	2	BI_DA-	Sent/received data, minus
	3	BI_DB+	Sent/received data, plus
	4	BI_DB-	Sent/received data, minus
	5	BI_DD+	Sent/received data, plus
	6	BI_DD-	Sent/received data, minus
	7	BI_DC-	Sent/received data, minus
	8	BI_DC+	Sent/received data, plus

2.2.2 Connecting and wiring to the unit/valve power plug

CAUTION

Always check the polarity and rated voltage thoroughly before connecting cables.

Calculate the current consumption to select the power cable.

Consider the voltage drop due to cables when selecting and wiring the cables if power is supplied to more than one device (remote device unit) from one power supply.

Take measures to secure the specified power supply voltage if voltage drop cannot be avoided.

For example, wire the power cables in multiple systems or install other power supplies to secure the specified power supply voltage.

Use a terminal block when crossover wiring power cables.

In this product, the unit power supply and the valve power supply are separated. In addition, each power supply is connected by an M12 connector (socket).

* Power connector is not supplied. Separately purchase a power supply connector that satisfies the specifications.

Unit power supply

This electrical power is for operating the device. Use 21.6 VDC to 26.4 VDC power with the least noise.

Valve power supply

This is the power supply to operate the solenoid valve. Use 22.8 VDC to 26.4 VDC power supply with the least noise.

Recommended M12 connector (socket) loose wire type power cable

Manufacturer	Part name	Model No.
Omron Corporation	Straight type	XS2F-D421-□8-□

* □ differs depending on the cable specifications.

Recommended M12 connector and power cable


Manufacturer	Part name	Model No.
Phoenix Contact KK	Assembly type connector * SPEEDCON mating method	1424655(SACC-M12FS-4PL M)

Cable size: AWG26 to 18, outside diameter of compatible cable: 4 to 8 dia.

■ Connecting the power cable

Follow the steps below to connect the power cable to the unit/valve power plug.


- 1** After confirming safety, stop network communication and turn off all peripheral equipment.
- 2** Refer to the figure below and wire the cable to the M12 connector.
- 3** Connect it to the unit/valve power plug and fix with the proper torque (0.4 N·m).

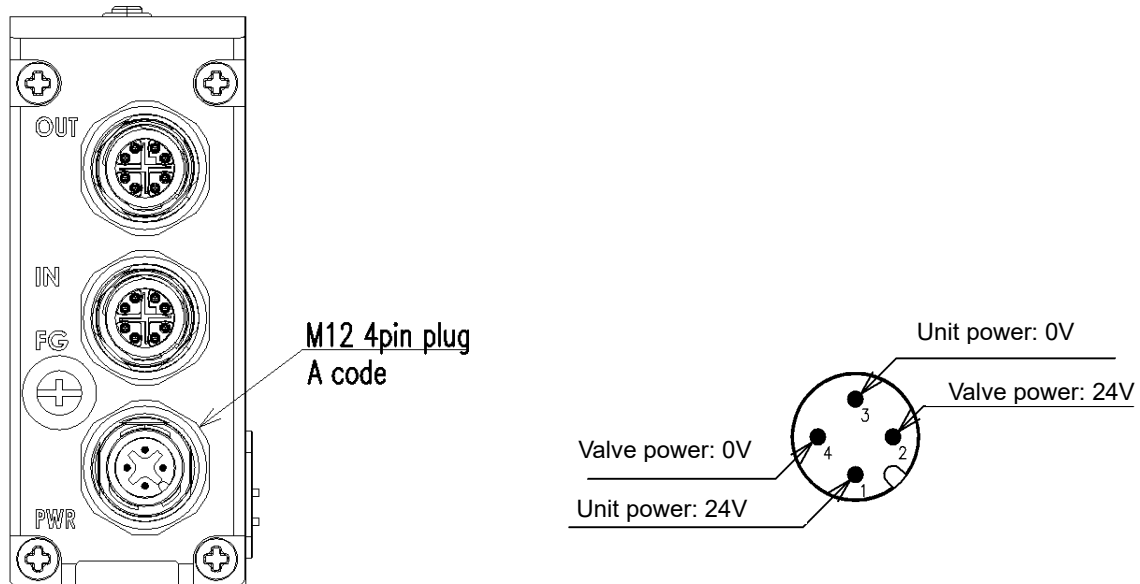


■ Wiring the power cable

The following figures 1 to 3 are examples of the wiring for the power socket. Change the circuit configuration as necessary.


1. Common connection for unit power and valve power

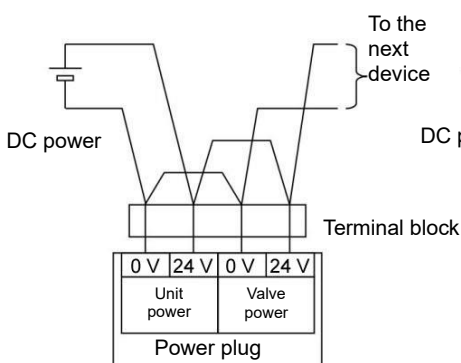

2. Connection for turning on/off valve power

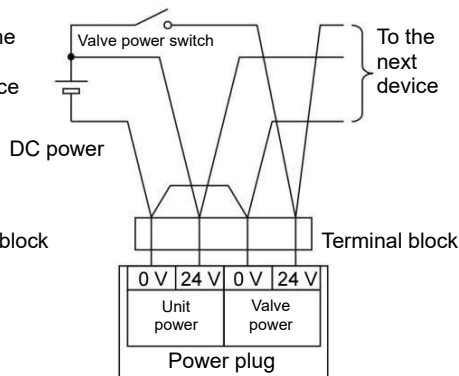

3. Separate connection for unit power and valve power

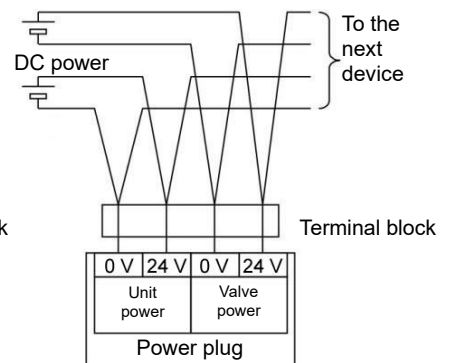

3. USAGE

WARNING

Consult CKD about the specifications before using the product under conditions not specified for the product or for special applications.

CAUTION

Thoroughly read and understand the instruction manual for the network system to be used before using the serial transmission device.

Carefully check the hard switch settings of serial transmission device before use.

Setting improper value may cause valves or cylinders to malfunction.

Be careful of the surroundings and ensure safety before turning on or off the power.

The system or solenoid valve (cylinder) may operate suddenly.

3.1 Setting the Switches

CAUTION

Discharge static electricity from your body before touching the product.

Static electricity may cause damage to the product.

Set switches while the unit power is turned off.

Since switch settings are read when the power is turned on, changes made to the settings after turning on the power are not recognized.

Keep the cover of serial transmission device closed except when setting the switches.

The cover may become damaged or foreign matters may enter inside and cause unexpected failure.

Be careful not to allow any foreign matter to enter inside when setting the switches.

Unexpected failure may result.

Do not handle switches roughly.

Switches are precision devices and can be easily damaged.

Do not touch the internal circuit board when setting the switches.

The internal circuit board can be easily damaged.

3.1.1 Station number setting

Set the station number of the device.

Set the rotary switch to "00" when setting the station number with an engineering tool.


The setting is in hexadecimal.

Refer to the following table for converting the value.

Switch	STATION No. ×16、×1
Setting range	00 to 78 (Hex) [0 to 120 (Dec)]

x16 Switch		
Setting value (Hexadecimal)	⇔	Decimal
0	⇔	0
1	⇔	16
2	⇔	32
3	⇔	48
4	⇔	64
5	⇔	80
6	⇔	96
7	⇔	112
8	⇔	128
9	⇔	144
A	⇔	160
B	⇔	176
C	⇔	192
D	⇔	208
E	⇔	224
F	⇔	240

x1 Switch		
Setting value (Hexadecimal)	⇔	Decimal
0	⇔	0
1	⇔	1
2	⇔	2
3	⇔	3
4	⇔	4
5	⇔	5
6	⇔	6
7	⇔	7
8	⇔	8
9	⇔	9
A	⇔	10
B	⇔	11
C	⇔	12
D	⇔	13
E	⇔	14
F	⇔	15

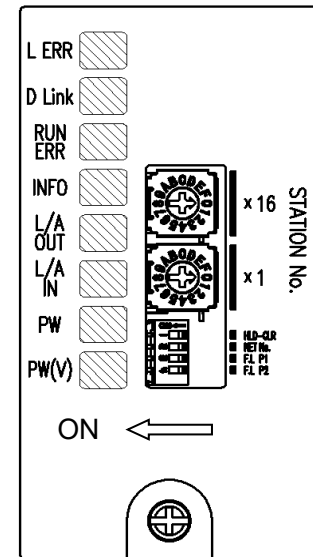

* (Note) 8 to F: cannot be set.

Example: To set the address to 71 (decimal)

Since $71 = 64 + 7$, set the x16 switch to 4 and the x1 switch to 7.

Station number settings with engineering tool.

1. Make sure the device can be communicable with the master unit. (The factory setting station number is [1])
2. Execute the parameter processing with the engineering tool and change the station number to the desired value.

*Refer to the manual of the engineering tool for specific operation.

3. Restart this product with the changed station number by turning the power off and on.

3.1.2 Output settings in the event of communication error.

Sets the output status when a communication error occurs.

This setting becomes enable when the rotary switch is set to [01 to 78 (hexadecimal)] for the station number settings.

The setting with engineering tool becomes enable when the station number is set to [00].

(The default settings when the station number is set to [00] is all points OFF.)

Switches	Settings
HLD – CLR (Output mode settings)	Sets the output status when a communication error occurs (such as disconnection and timeout). ON : Hold mode OFF : Clear mode

Output settings in the event of a communication error with engineering tool.

1. Set the rotary switch for station number setting to [00] so that the device can be communicable with the master unit.
* Refer to [Station number settings with engineering tool] of "3.1.1 Station number setting".
2. Execute the parameter processing with engineering tool and change OutputCommFaultEnable and OutputCommFaultValue to the desired value.
*Refer to the manual of the engineering tool for specific operation.
*Changes made with the engineering tool will be reflected immediately.

3.1.3 Network number settings

Sets the network number.

Switches	Settings
NET No. (Network number settings)	Sets the network number. ON : Network number 1 OFF : Software setting (factory setting is 1 and can be changed by parameter setting)

Network number settings with engineering tool

1. Slide the NET No. switch to OFF so that the device can be communicable with the master unit.
2. Execute the parameter processing with engineering tool and change the network number to the desired value.
3. Restart this product with the changed network number by turning the power off and on.
*Refer to the manual of the engineering tool for specific operation.

3.1.4 Fast link-up function setting

Set enable/disable of fast Link-up function.

Switches	Settings
FL P1/P2	Sets fast link-up function. ON : Enable OFF : Disable

The fast link-up function is a function that shortens the data link time to the master unit when the power is turned on.

To use the fast link-up function, a master unit and remote unit supporting the function are required. Contact each unit manufacturer for the compatible functions and settings.

Precautions for use

- Disable the fast link-up function for the port directly connect to the master unit.
- Connect the function enabled port with the same enabled port of another device. Connecting to a disabled port does not function the fast link-up.
- Connect to a port with a different port number when connecting to another device. (Example : Connect with P1 and P2) Connecting to ports with the same number does not link up: both are P1 or P2.

3.2 Settings by CSP+ system profile

Using the CSP+ file makes the product setting easy with engineering tool.
Refer to the manual of the engineering tool for handling CSP+ file.

CSP + file name: 0x0104_OPP8 (CC-Link IE Field) series.zip

The above file includes the following models.

- W4G-OPP8-1EF
- W4G-OPP8-1EF-P

Refer to the following table for selecting the model.

Item	Model name in CSP+ file	
Model No.	W4G-OPP8-1EF	W4G-OPP8-1EF-P
Module name	OPP8-1EF	OPP8-1EF-P
Output type	+COM(NPN)	-COM(PNP)
Number of output point	16 points	
CSP+ file name	0x0104_OPP8-1EF_1.0	0x0104_OPP8-1EF- P _1.0

3.2.1 Parameter acquisition/setting

Using the CSP+ file enables acquiring and setting parameters with engineering tool.
Refer to the manual of the engineering tool for operation.

Following parameters are available for setting and acquisition.
Only some parameters correspond to the parameter setting. “Y” in the setting column indicate the corresponding parameters.

Product Information

Parameters	Description	Setting
ModelCode	Indicates product code.	
SoftwareVersion	Indicates software version.	

Network Information

Parameters	Description	Setting
NetworkMode	Indicates the network number setting mode. Hardware switch : Switch setting Software settings : Value set in parameter setting	
NetworkNo	Indicates the current network number. The value is shown when it is changed in the parameter setting.	Y
NodeMode	Indicates the setting mode of station number. Hardware switch : Switch setting Software settings : Value set in parameter setting	
NodeNo	Indicates the current station number. The value is shown when it is changed in the parameter setting.	Y
FLU P1/P2	Indicates the status of the fast Link-up function. Enable : Enable Disable : Disable	

Product Status

Parameters	Description	Setting
MaintenanceEnable	Sets the maintenance monitoring item (*1). Enable : Monitoring Disable : Not monitoring	Y
MaintenanceDetect	Indicates the status of the maintenance monitoring item (*1). Detecting : Monitoring conditions are satisfied Undetected : Monitoring conditions are not satisfied	
EnergizationTime	Indicates the total time (energization time) that the power of this product was ON. (in seconds)	
EnergizationTimeThershold	Sets the value for determining energization time monitoring. (in seconds)	Y
ValvePower	Indicates valve power status.	

*1 Following table indicates each item of maintenance monitoring and monitoring conditions.

Parameters	Description	Monitoring condition
Valve power supply error	Valve power failure	When valve power supply is OFF.
Error	Moderate error	When an internal hardware error is detected.
Warning	Minor error	When the switch is operated.
Energization time monitoring	Energization time monitoring	When "EnergizationTime" exceeds "EnergizationTimeThreshold".
Output count/time monitoring	Output monitoring	When any of "OutputOnCountDetect" or "OutputOnTimeDetect" becomes "Detecting".

Output

Parameters	Description	Setting
OutputIo	Indicates the status of each output.	
OutputCyclic	Indicates the output status notified by the master.	
OutputForcedEnable	Sets the forced output of each output. Enable : Enable (Outputs the value set in "OutputForcedValue".) Disable : Disable	Y
OutputForcedValue	Sets the output value when the forced output of each output is enabled.	Y
OutputCommFaultMode	Indicates the output setting mode when communication with the master becomes abnormal. Hardware switch : Switch setting Software settings : Value set in parameter setting	
OutputCommFaultEnable	Sets output pattern of each output when communication with the master becomes abnormal. Output value at communication error: OutputCommFaultValue Hold : Hold	Y *2
OutputCommFaultValue	Sets output if "Output value at communication error" is selected for the output pattern of each output when communication with the master becomes abnormal.	Y *2
OutputOnCountEnable	Sets whether to monitor the ON count of each output. Enable : Enable Disable : Disable	Y
OutputOnCountDetect	Indicates the ON count monitoring status of each output. Detecting : "OutputOnCount" exceeds "OutputOnCountThreshold" Undetected : Other than the above.	
OutputOnCountThreshold	Sets the value for determining the ON count monitoring of each output. *Value is common to all outputs. No individual setting.	Y
OutputOnCount_No00~No31	Indicates the number of times each output has turned ON.	Y
OutputOnTimeEnable	Sets whether to monitor the ON time of each output. Enable : Enable Disable : Disable	Y
OutputOnTimeDetect	Indicates the ON time monitoring status of each output Detecting : "OutputOnTime" exceeds "OutputOnTimeThreshold" Undetected : Other than the above.	
OutputOnTimeThreshold	Sets the value for determining the ON time monitoring of each output. (in seconds) *Value is common to all outputs. No individual setting.	Y
OutputOnTime_No00~No31	Indicates the total time that each output was ON. (in seconds)	Y

*2 Setting is available only when "OutputCommFaultMode" is [Software settings].

3.3 Remote setting

3.3.1 Remote I/O

There are two types of I/O data: RY (remote output) data sent from the master unit to the remote device unit (this product) and RX (remote input) data sent from the remote device unit to the master unit. This product is an output device that receives remote output data from the master unit and output to the valve. (There is no remote input)
Refer to the table below for the solenoid output number.

Remote output	Solenoid output No.
RY□0	s1
RY□1	s2
RY□2	s3
RY□3	s4
RY□4	s5
RY□5	s6
RY□6	s7
RY□7	s8
RY□8	s9
RY□9	s10
RY□A	s11
RY□B	s12
RY□C	s13
RY□D	s14
RY□E	s15
RY□F	s16

3.3.2 Remote register

Following table is an example of allocation from RWr0. There is no remote register (RWw) from the master to this product.

Remote register	Parameters									
RWr0	Indicates the status of the maintenance monitoring item.									
	Bit	15 to 8	7	6	5	4	3	2	1	0
	Item	0	Output monitoring	0	Energization time monitoring	0	Minor error	Moderate error	0	Valve Power failure
* Each bit becomes 1 when monitoring condition is satisfied. * Refer to the product status of "3.2.1 Parameter acquisition/setting" for details of monitoring conditions.										
RWr1 to 3	(Reserved)									


3.3.3 Example of valve No. array corresponding to solenoid output No.

In the table below, each valve number consists of a number (the station number) and an alphabet (a for a-side solenoid and b for b-side solenoid). For example, “1a” refers to 1st station a-side solenoid. Also, “V” stands for “Vacant”.

Manifold stations are numbered from left to right with the piping port towards the user (refer to the figure below).

As appearance and maximum number of stations differ depending on the solenoid valve model, check individual specifications.

< W4G-OPP8-1EF, W4G-OPP8-1EF-P (16-point output)>

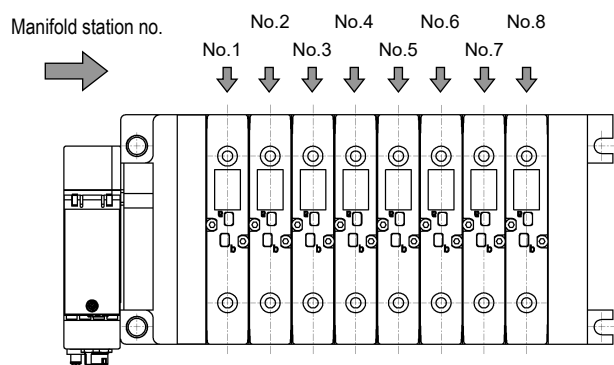

The figure on the left is an example of mounting eight stations of double-solenoid type manifold valves. There is no solenoid on the b-side for single-solenoid type.

Standard wiring

• Single solenoid valve

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	2a	3a	4a	5a	6a	7a	8a	9a	10a	11a	12a	13a	14a	15a	16a

• Double solenoid valve

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	1b	2a	2b	3a	3b	4a	4b	5a	5b	6a	6b	7a	7b	8a	8b

• Mixed (both single and double solenoid valves are mounted) [example]

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	2a	3a	3b	4a	4b	5a	6a	7a	7b	8a	9a	10a	10b	11a	11b

Double wiring

• Single solenoid valve

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	(V)	2a	(V)	3a	(V)	4a	(V)	5a	(V)	6a	(V)	7a	(V)	8a	(V)

• Double solenoid valve

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	1b	2a	2b	3a	3b	4a	4b	5a	5b	6a	6b	7a	7b	8a	8b

• Mixed (both single and double solenoid valves are mounted) [example]

Solenoid output No.	s1	s2	s3	s4	s5	s6	s7	s8	s9	s10	s11	s12	s13	s14	s15	s16
Valve No.	1a	(V)	2a	(V)	3a	3b	4a	4b	5a	(V)	6a	(V)	7a	7b	8a	(V)

3.4 Programming

This product is treated as a remote device unit from the master unit.

There are two types of I/O data: RY (remote output) data sent from the master unit to the remote device unit (this product) and RX (remote input) data sent from the remote device unit to the master unit. This product is an output device that receives remote output data from the master unit and output to the valve.

(There is no remote input)

Refer to the instruction manual issued by the PLC manufacturer when programming.

Refer to the following table to program the I/O mapping.

The setting made to specify which action to take on the output in the event of an error is a unique function of this device. This output status setting does not affect the program.

Mapping for RY data

Number of output points	RY	Bit															
		RY□0	RY□1	RY□2	RY□3	RY□4	RY□5	RY□6	RY□7	RY□8	RY□9	RY□A	RY□B	RY□C	RY□D	RY□E	RY□F
16 points	2 bytes	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15

4. MAINTENANCE AND INSPECTION

WARNING

Turn off the power, stop the supply of compressed air and make sure that there is no residual pressure before conducting maintenance.

Do not disassemble, modify, or repair the product.

These may cause failure or malfunction.

CAUTION

Plan and perform daily and periodic inspections so that maintenance can be managed properly.

If maintenance is not properly managed, the product's functions may deteriorate significantly. This may lead to faults (such as short service life, damage, and malfunctions) or accidents.

Do not drop or apply excessive vibrations or shocks to the product.

These may cause damage since the product inside is made with precision.

4.1 Periodic Inspection

This section describes the cleaning and inspection of the device for daily maintenance and what to do when replacing the device. In order to use the product under optimum conditions, clean and inspect the product periodically.

■ Cleaning

- 1** For daily cleaning, wipe the product with a soft dry cloth.
- 2** When stains cannot be removed by wiping with a dry cloth, moisten the cloth with diluted neutral detergent (2%), wring it out well, and wipe off the stains.
- 3** Objects such as rubber, vinyl, or tape may stain the device if they are left in contact with the device for a long period. Remove such objects when cleaning if they are leaving stain on the product.

■ Inspection

Perform inspection once or twice a year.

However, perform inspections at shorter intervals if using the product in an environment with extremely high temperatures, high humidity, a lot of dust, etc.

<Inspection items>

Inspect the following items to make sure that each item satisfies the criteria.

If any item does not meet the criteria, improve the surrounding environment or adjust the device.

Inspection item	Description	Criteria	Inspection method
Environment	Is the surrounding and in-panel temperature appropriate?	Refer to "1.3.2 Device specifications".	Thermometer
	Is the surrounding and in-panel humidity appropriate?	Refer to "1.3.2 Device specifications".	Hygrometer
	Is there any accumulated dust?	No dust	Visual inspection
Installation	Is the device fixed securely?	No looseness	Hexagonal wrench
	Is the power cable connector fully inserted?	No looseness	Visual inspection
	Is the network cable connector fully inserted?	No looseness	Visual inspection
	Is the connection cable not broken?	No abnormality in appearance	Visual inspection

■ Checking the device before/after replacing

The network is constituted by each unit (master and device).

If any unit fails, immediately perform recovery work to prevent the entire network from being affected. To restore the network function as fast as possible, it is recommended to prepare spare units.

<Inspection items>

If a fault is detected and the unit is replaced with a new one, check if the new unit has no abnormality.

Also, confirm the device settings.

<Settings for replacement device>

For the switches on the replacement device, confirm the specifications and set the same settings as the previous one.

4.2 Removing and Mounting

WARNING

Turn off the power and completely release the pressure before removing or adding a manifold solenoid valve.

Thoroughly read and understand this Instruction Manual before removing and adding the manifold solenoid valve.

Do not touch the electrical wiring connection (bare live part).

An electric shock may occur.

Do not touch live parts with bare hands.

An electric shock may occur.

CAUTION

Check the device station number and the setting made to specify which action to take on the output in the event of communication error, before turning on the unit power.

Do not attach or detach the plug while the power is turned on.


These may cause failure or malfunction.

Do not pull out the device by pulling the cable or connector.

This may cause cable disconnection or damage.

4.2.1 Removing the product (device)

- 1** After confirming safety, stop network communication as necessary and turn off all peripheral equipment.
- 2** After confirming safety, turn off the unit power and valve power as necessary.
(Note that following unit next to this device may stop communication.)
- 3** Remove the device mounting screw and slowly remove it from the electrical component block.

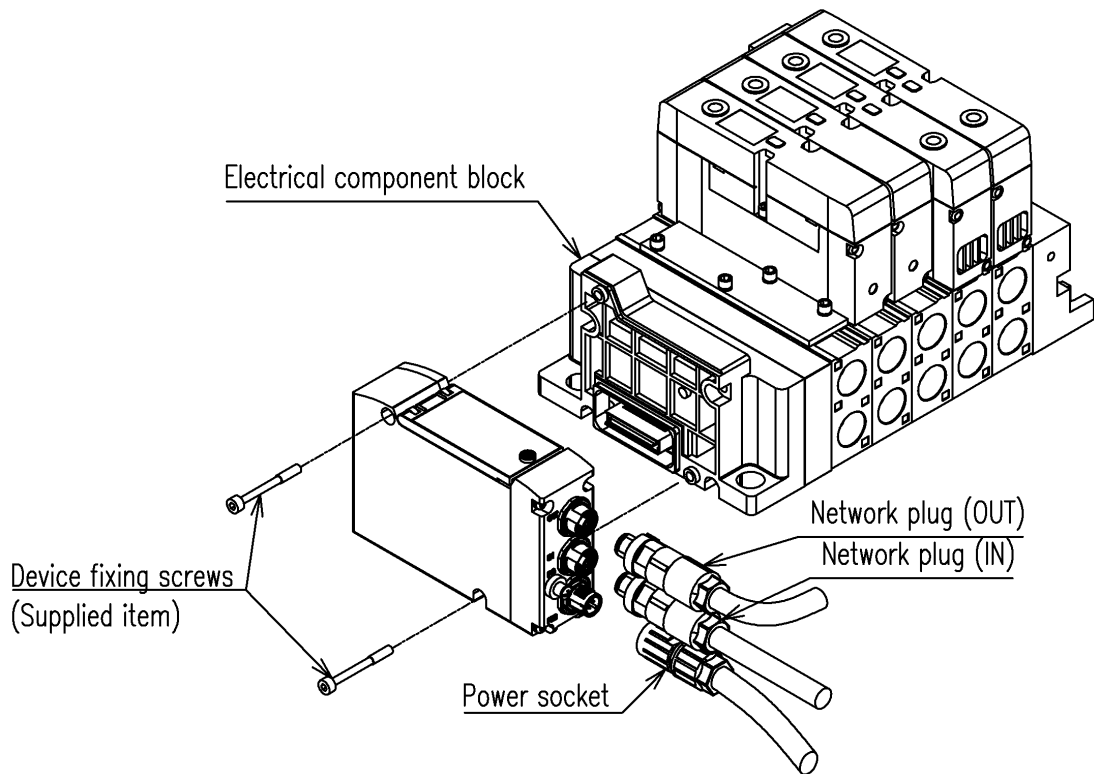

4.2.2 Mounting the product (device)

- 1** Sets the network and station number of the device.
- 2** Check that the product and electrical component block are properly connected and tighten the device fixing screw firmly.
(Proper tightening torque: 0.5 N·m)
- 3** Turn off the power (for device/valve) and connect the network plug and power plug.
The system may start operating suddenly if the plug is connected while the power is turned on.
Be careful of the surroundings and secure safety before connecting the plug. Hold the product and insert it slowly in the direction of the arrow.
- 4** Confirm safety and turn on each power.

5. Troubleshooting

5.1 Problems, Causes, and Solutions

Troubleshooting for this device must be carried out not only for the single unit but for the entire system. The system may start operating suddenly depending on the communication state. Use extreme care and ensure safety during maintenance.

■ Fault 1: PW, PW(V) does not light up.

- Check that the power cable is properly connected and in good condition.
- Check that the supplied power voltage is used within the specified range.

■ Fault 2: ERR LED lights up.

- Check that the power to the master unit is turned on.
- Check that there are no problems (such as damage or disconnection) with the network cable or connector connection.
- Check that the network cable is compatible with CC-Link IE Field network.
- Check that the transmission distance is compatible with CC-Link IE Field network.
- Check that there are no noise-generating devices or high-voltage lines near the communication line.

■ Fault 3: ERR LED is blinking.

- Check that the station number or network number is set correctly.

■ Fault 4: L ERR LED is on.

- Check that the power to the master unit is turned on.
- Check that there are no problems (such as damage or disconnection) with the network cable or connector connection.
- Check that the ring topology is connected correctly.

■ Fault 5: D Link LED does not light up.

- Check that the power to the master unit is turned on.
- Check that the data link from the master has not been stopped.
- Check the status of the device connecting to and the connection port when the fast link-up function is enabled.

■ Fault 6: INFO LED is blinking.

<Blinking>

- Check the status of the device enabled in the maintenance monitoring setting.

<Repeat twice-blinking>

- In case the switch has been operated, return the switch to the original state or turn the power off and on.

<Fast blinking>

- Internal hardware is malfunctioning. Replace the device if the condition doesn't change even after turning the power on and off.

6. WARRANTY PROVISIONS

6.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by use of the product exceeding its durability (cycles, distance, time, etc.) or caused by consumable parts.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

6.2 Warranty period

The product is warranted for one year from the date of delivery to the location specified by the customer.