



Pneumatic Components

# To Use This Product Safely

Be sure to read this before use.

For general pneumatic components precautions, refer to Intro 15 for details.

Individual Precautions: 20 mm Width Integrated Type VSJP Series

## Design / Selection

### Warning

- Vacuum retention function allows vacuum leakage. Hence, take other safety measures if vacuum retention for long periods is required.
- For the self-hold (VSJ-□□D...), when resupplying after the pilot air supply is stopped (including the first use after shipment), the position of the switching valve is in neutral. When restarting pilot air supply, be sure to send a signal to the pilot valve or perform switching reliably by manual operation.

### Caution

- Fittings When replacing the supply port sheath block, make sure that the packing has not fallen out, remove the deposits in the vicinity, then securely tighten it at the specified tightening torque.

MEMO

Vacuum Components

Vacuum Pump System

VSJP/  
VSJPM

VSNP/  
VSNPM

VSXP/  
VSXPM

VSQP

VSZPM

Vacuum Components

Vacuum Pump System

VSJP/  
VSJPM

VSNP/  
VSNPM

VSXP/  
VSXPM

VSQP

VSZPM

For precautions regarding mounting, installation, adjustment, operation, and maintenance, please refer to the CKD Equipment Product Site(<https://www.ckd.co.jp/kiki/en/>) → 'model No.' → [Instruction Manual](#)

Ending

Ending