



To Use This Product Safely

Please read before use.
Refer to Intro 27 and "Directional control valve ② (No. RJ-012AA)" for general precautions.

Individual Precautions : Spool Position Detection Residual Pressure Exhaust Valve SNS Series

At Design / Selection

1. Continuous Energization

CAUTION

- In the following cases, to prevent deterioration of valve performance, enable heat dissipation when installing, so that the ambient temperature remains within the specification range.
 - When the energized time exceeds non-energized time in intermittent operation
 - When one energizing session exceeds 30 minutes in intermittent operation

2. About Operating Pressure

- The flow rate must be 940 L/min and over to operate the SNS Series. Also, if the piping cross-sectional area on the fluid supply side is restricted, the pressure inside the valve may drop due to the pressure drop during valve operation, causing unstable operation.

For precautions regarding mounting, installation, adjustment, operation, and maintenance, please refer to the CKD Component Products site (<https://www.ckd.co.jp/kiki/en/>) → 'model No.' → Instruction Manual.