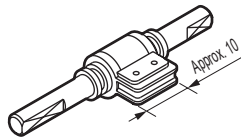 
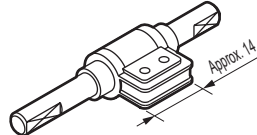 
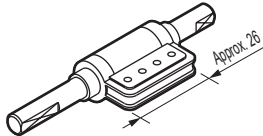 
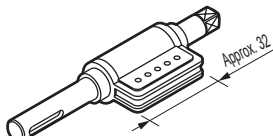 
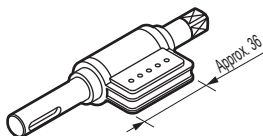 
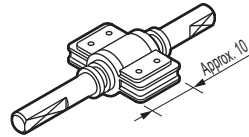 
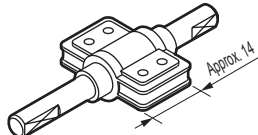 
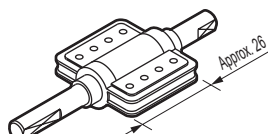 
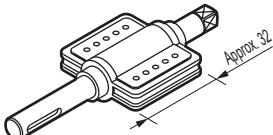 
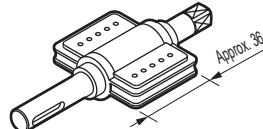 


Repair parts list

● Compact rotary actuator

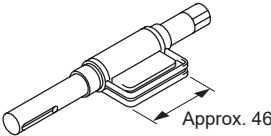 
 
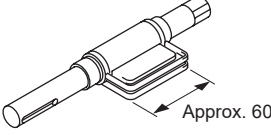 
 
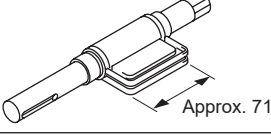 
 
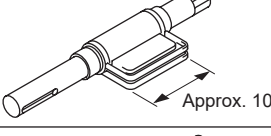 
 
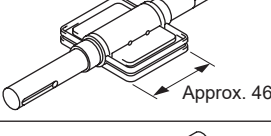 
 
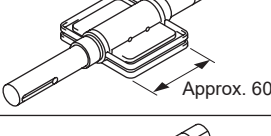 
 
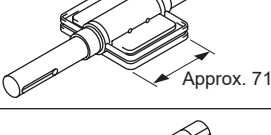 
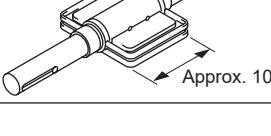 
No./part name	No.	3	1	8
Model	Kit No.	Vane shaft	Shoe sealant	O-ring (2 pcs. each)
RV3S1	RV3S1-K			ø1xø3.8(WxID)
RV3S3	RV3S3-K			ø1.42xø6.8
RV3S10	RV3S10-K			ø1.5xø8
RV3S20	RV3S20-K			ø2xø10.5
RV3S30	RV3S30-K			P-14
RV3D1	RV3D1-K			ø1xø3.8(WxID)
RV3D3	RV3D3-K			ø1.42xø6.8
RV3D10	RV3D10-K			ø1.5xø8
RV3D20	RV3D20-K			ø2xø10.5
RV3D30	RV3D30-K			P-14

LCM
LCR
LCG
LCW
LCX
STM
STG
STS/STL
STR2
UCA2
ULK*
JSK/M2
JSG
JSC3/JSC4
USSD
UFCD
USC
UB
JSB3
LMB
LML
HCM
HCA
LBC
CAC4
UCAC2
CAC-N
UCAC-N
RCS2
RCC2
PCC
SHC
MCP
GLC
MFC
BBS
RRC
GRC
RV3*
NHS
HRL
LN
Hand
Chuk
MechHnd/Chuk
ShkAbs
FJ
FK
SpdContr
Ending

RV3* Series

Repair parts list

● Large rotary actuator

No./part name	Part No.	4	6	8	10
Model	Kit No. Product	Vane shaft	Shoe sealant	O-ring (2 pcs. each)	O-ring
RV3S50	RVS50-K			P-16	ø1.8xø56.2
RV3S150	RVS150-K			P-22	ø1.9xø82
RV3S300	RVS300-K			P-31	ø3xø105
RV3S800	RVS800-K			P-48	ø3.1xø150
RV3D50	RVD50-K			P-16	ø1.8xø56.2
RV3D150	RVD150-K			P-22	ø1.9xø82
RV3D300	RVD300-K			P-31	ø3xø105
RV3D800	RVD800-K			P-48	ø3.1xø150

Repair parts kit

Part name	Kit No.	Appearance	Part name	Quantity
Lever with magnet	- RVU50-A1 - RVU150-A1 - RVU300-A1 - RVU800-A1		Lever Boss Magnet Pan head machine screw Nut	1 1 1 1 1
Base bracket	- RVU50-A2 - RVU150-A2 - RVU300-A2 - RVU800-A2 *1 - RVU800-A2-D *2 *1 with 1 switch *2 In the case of the second type with two switches, refer to page 1392 for configuration with switches.		Base bracket Binding machine screw	1 2 *3
Switch mounting bracket	- RVU50-A3 - RVU150-A3 - RVU300-A3		LS bracket Holder Pan head machine screw Spring washer	1 1 1 1
Switch mounting bracket for shock absorber installation	- RVU50-A3-C - RVU150-A3-C - RVU300-A3-C		LS bracket Holder Pan head machine screw Spring washer	1 1 1 1
Lever for shock absorber with magnet Dimensions Refer to page 1384 for the type without switch.	- RVU50-90-A1-C - RVU150-90-A1-C - RVU300-90-A1-C - RVU800-90-A1-C		Lever Magnet Magnet holder Hexagon socket head cap screw Pan head machine screw Spring washer	1 2 2 1 2 2
	- RVU50-100-A1-C - RVU150-100-A1-C - RVU300-100-A1-C - RVU800-100-A1-C			
	- RVU50-180-A1-C - RVU150-180-A1-C - RVU300-180-A1-C - RVU800-180-A1-C			

LCM
LCR
LCG
LCW
LCX
STM
STG
STS/STL
STR2
UCA2
ULK*
JSK/M2
JSG
JSC3/JSC4
USSD
UFCD
USC
UB
JSB3
LMB
LML
HCM
HCA
LBC
CAC4
UCAC2
CAC-N
UCAC-N
RCS2
RCC2
PCC
SHC
MCP
GLC
MFC
BBS
RRC
GRC
RV3*
NHS
HRL
LN
Hand
Chuk
MechHnd/Chuk
ShkAbs
FJ
FK
SpdContr
Ending

Repair parts kit

Part name	Kit No.	Appearance	Part name	Quantity
Lever for shock absorber with magnet (The lever for the 280° shock absorber with magnet is not available.)	● RVU50-270-A1-C RVU150-270-A1-C RVU300-270-A1-C RVU800-270-A1-C (For information about types without switch and dimensions refer to page 1384.)		Lever Magnet Magnet holder Hexagon socket head cap screw Pan head machine screw Spring washer	1 1 1 1 1 1
M-bracket SW	● RVU-00-A1		M-switch installation band Mounting bracket Cross-recessed pan head machine screw	1 1 1
Packing seal screw kit	● RVU10-B1 RVU20-B1 RVU30-B1 RVU50-B1 RVU150-B1 RVU300-B1		O-ring Gasket Cross-recessed pan head machine screw Cross-recessed pan head machine screw with captive washer	2 1 2 2
Valve kit	● RVU□□□-B2 10 20 30 50 150 300 1: 100 VAC 2: 200 VAC 3: 24 VDC V :Single solenoid W :Double solenoid		Valve Cross-recessed pan head machine screw with captive washer Gasket	1 2 1
Sub-base	● RV3U10-B3 RV3U20-B3 RV3U30-B3 RV3U50-B3 RV3U150-B3 RV3U300-B3		Sub-base	1
Angle variable switch	● RV3U-CT-□ 3R :For right mounting 3L :For left mounting 3RU :L-shaped lead wire For right mounting 3LU :L-shaped lead wire For left mounting		Switch	1