

INSTRUCTION MANUAL

Electric actuator KBX series KBX-50

Belt-Driven Actuator

- Before operating the product, read this instruction manual without fail.
- Among all, carefully read the description related to safety.
- Keep this instruction manual in a safe place so that you can read it at any time when necessary.

2th Edition

CKD Corporation

Introduction

Before using the electric actuator KBX series, read through and completely understand this instruction manual to assure correct use.

For general information for the electric actuator KBX series, refer to KCA-25 Instruction Manual (Basic Part).



- 1. About application of this product
 - This product is not designed or manufactured to be used in equipment in situations that can affect or endanger human life.
 - When considering this product for operation in special applications (passenger transportation, medical, aerospace, atomic power, electric power, etc.), however, please contact CKD.
 - Although this product was manufactured under conditions of strict quality control, you are strongly advised to
 install safety devices to forestall serious accidents when it is used in facilities where a breakdown in the
 product is likely to cause a serious accident.
- 2. This equipment does not have an explosion-proof structure. Take utmost care of the operating environment.
- All efforts have been made to assure the contents of this manual. If you have any questions, or find any mistakes, however, please contact CKD.
- 4. CKD will not be held responsible for any effects caused by using this equipment, regardless of Item 3 above.
- 5. The contents of this manual are subject to change without prior notice to effect improvements.

Contents

■1.1 Cautions for safety. ■1.2 For your safe operation ■1.3 Wayranty Chapter 2 Shipment List. ■2.1 Shipment List. ■2.1 Shipment list. (Chapter 3 Axis Specifications. ■11 ■3.1 Axis type and names of individual parts. ■11 ■3.2 Single axis specification. ■12 Chapter 4 Cable Installation. ■17 Chapter 5 Installing Actuator (Axis). ■5.1 Installing Actuator (Axis). ■5.1 Installing Actuator (Axis). ■5.2 Robot type for each Axis. ■5.3 Parameter values. ■6.1 Fluctuation in sliding resistance during long-term storage. ■6.1 Fluctuation in sliding resistance during long-term operation. ■22 ■6.2 In the event of collision. ■24 ■6.3 About cracks on the back of the timing belt during long-term operation. ■25 ■6.4 Servo gain setting. Chapter 7 Maintenance. ■7.1 Precautions for inspection and maintenance work. ■7.2 Inspection before starting the work. ■25 ■7.3 Periodic inspection. ■26 ■7.4 Cleaning. ■27 ■7.5 Greasing. ■7.6 Timing belt inspection. ■7.7 Timing belt inspection. ■7.8 Routing the timing belt. ■7.9 Origin position adjustment. ■7.1 Bolt and screw tightening torque. ■7.1 Bolt and screw tightening torque. ■8.1 Spare Parts. 44 45 46 47 47 48 48 48 48 48	Chapter 1 Safety	1
■1.3 Warranty	■1.1 Cautions for safety	1
Chapter 2 Shipment List. 16 ■2.1 Shipment list. 16 Chapter 3 Axis Specifications. 11 ■3.1 Axis type and names of individual parts 11 ■3.2 Single axis specification 12 Chapter 4 Cable Installation 17 Chapter 5 Installing Actuator (Axis) 18 ■5.1 Installing Actuator (Axis) 19 ■5.2 Robot type for each Axis 19 ■5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 22 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 22 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 30 ■7.6 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.10 Linear guide replacement <t< td=""><td>■1.2 For your safe operation</td><td>5</td></t<>	■1.2 For your safe operation	5
■2.1 Shipment list. 10 Chapter 3 Axis Specifications. 11 ■3.1 Axis type and names of individual parts 11 ■3.2 Single axis specification. 12 Chapter 4 Cable Installation. 15 Chapter 5 Installing Actuator (Axis) 15 ■5.1 Installing Actuator (Axis) 15 ■5.2 Robot type for each Axis. 15 ■5.3 Parameter values. 20 Chapter 6 Precautions for Use. 22 ■6.1 Fluctuation in sliding resistance during long-term storage. 22 ■6.2 In the event of collision. 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 25 ■7.1 Precautions for inspection and maintenance work 25 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection. 25 ■7.4 Cleaning. 25 ■7.5 Greasing. 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.10 Linear guide replacement<	■1.3 Warranty	9
Chapter 3 Åxis Specifications 11 ■ 3.1 Axis type and names of individual parts 11 ■ 3.2 Single axis specification 12 Chapter 4 Cable Installation 17 Chapter 5 Installing Actuator (Axis) 18 ■ 5.1 Installing Actuator (Axis) 19 ■ 5.2 Robot type for each Axis 15 ■ 5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■ 6.1 Fluctuation in sliding resistance during long-term storage 22 ■ 6.2 In the event of collision 22 ■ 6.3 About cracks on the back of the timing belt during long-term operation 22 ■ 6.4 Servo gain setting 22 ■ 6.1 Precautions for inspection and maintenance work 22 ■ 7.1 Precautions for inspection and maintenance work 28 ■ 7.2 Inspection before starting the work 25 ■ 7.3 Periodic inspection 26 ■ 7.4 Cleaning 29 ■ 7.5 Greasing 30 ■ 7.6 Timing belt inspection 31 ■ 7.7 Timing belt and motor replacement procedure 31 ■ 7.8 Routing the timing belt 36 ■ 7.10 Linear guide replacement 38	Chapter 2 Shipment List	10
■3.1 Axis type and names of individual parts		
■3.2 Single axis specification	Chapter 3 Axis Specifications	11
Chapter 4 Cable Installation 17 Chapter 5 Installing Actuator (Axis) 18 ■5.1 Installing Actuator (Axis) 19 ■5.2 Robot type for each Axis 19 ■5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 22 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 29 ■7.4 Cleaning 29 ■7.5 Greasing 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 38 ■7.11 Bolt and screw tightening torque 35 Chapter 8 Spare Parts 40	■3.1 Axis type and names of individual parts	11
Chapter 5 Installing Actuator (Axis) 18 ■5.1 Installing Actuator (Axis) 19 ■5.2 Robot type for each Axis 15 ■5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 22 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 36 ■7.6 Timing belt inspection 31 ■7.7 Timing belt inspection 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 36 ■7.11 Bolt and screw tightening torque 36 Chapter 8 Spare Parts 40	■3.2 Single axis specification	12
■5.1 Installing Actuator (Axis) 19 ■5.2 Robot type for each Axis 15 ■5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 36 ■7.6 Timing belt and motor replacement procedure 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■5.2 Robot type for each Axis 19 ■5.3 Parameter values 20 Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 22 Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 29 ■7.3 Periodic inspection 29 ■7.4 Cleaning 29 ■7.5 Greasing 30 ■7.6 Timing belt inspection 30 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40 Chapter 8 Spare Parts 40	Chapter 5 Installing Actuator (Axis)	18
■5.3 Parameter values 20 Chapter 6 Precautions for Use	■5.1 Installing Actuator (Axis)	19
Chapter 6 Precautions for Use 22 ■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 24 Chapter 7 Maintenance 25 ■7.1 Precautions for inspection and maintenance work 25 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 36 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 35 ■7.11 Bolt and screw tightening torque 35 Chapter 8 Spare Parts 46	■5.2 Robot type for each Axis	19
■6.1 Fluctuation in sliding resistance during long-term storage 22 ■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 24 Chapter 7 Maintenance 25 ■7.1 Precautions for inspection and maintenance work 25 ■7.2 Inspection before starting the work 25 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 36 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 35 ■7.11 Bolt and screw tightening torque 35 Chapter 8 Spare Parts 46		
■6.2 In the event of collision 22 ■6.3 About cracks on the back of the timing belt during long-term operation 23 ■6.4 Servo gain setting 24 Chapter 7 Maintenance 25 ■7.1 Precautions for inspection and maintenance work 25 ■7.2 Inspection before starting the work 29 ■7.3 Periodic inspection 25 ■7.4 Cleaning 25 ■7.5 Greasing 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 36 ■7.10 Linear guide replacement 35 ■7.11 Bolt and screw tightening torque 35 Chapter 8 Spare Parts 46		
■6.3 About cracks on the back of the timing belt during long-term operation23■6.4 Servo gain setting24Chapter 7 Maintenance28■7.1 Precautions for inspection and maintenance work28■7.2 Inspection before starting the work29■7.3 Periodic inspection29■7.4 Cleaning29■7.5 Greasing30■7.6 Timing belt inspection31■7.7 Timing belt and motor replacement procedure31■7.8 Routing the timing belt36■7.9 Origin position adjustment38■7.10 Linear guide replacement39■7.11 Bolt and screw tightening torque39Chapter 8 Spare Parts40	■6.1 Fluctuation in sliding resistance during long-term storage	22
■6.4 Servo gain setting 22 Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 29 ■7.3 Periodic inspection 29 ■7.4 Cleaning 29 ■7.5 Greasing 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
Chapter 7 Maintenance 28 ■7.1 Precautions for inspection and maintenance work 28 ■7.2 Inspection before starting the work 29 ■7.3 Periodic inspection 29 ■7.4 Cleaning 29 ■7.5 Greasing 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40	■6.3 About cracks on the back of the timing belt during long-term operation	23
17.1 Precautions for inspection and maintenance work 28 17.2 Inspection before starting the work 29 17.3 Periodic inspection 29 17.4 Cleaning 29 17.5 Greasing 30 17.6 Timing belt inspection 31 17.7 Timing belt and motor replacement procedure 31 18. Routing the timing belt 36 19. Origin position adjustment 38 10. Linear guide replacement 39 11. Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.2 Inspection before starting the work. 29 ■7.3 Periodic inspection. 29 ■7.4 Cleaning. 29 ■7.5 Greasing. 30 ■7.6 Timing belt inspection. 31 ■7.7 Timing belt and motor replacement procedure. 31 ■7.8 Routing the timing belt. 36 ■7.9 Origin position adjustment. 38 ■7.10 Linear guide replacement. 39 ■7.11 Bolt and screw tightening torque. 39 Chapter 8 Spare Parts. 40	1	
■7.3 Periodic inspection 29 ■7.4 Cleaning 29 ■7.5 Greasing 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.4 Cleaning. 29 ■7.5 Greasing. 30 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.5 Greasing. 36 ■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40	1	
■7.6 Timing belt inspection 31 ■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40	8	
■7.7 Timing belt and motor replacement procedure 31 ■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40	e	
■7.8 Routing the timing belt 36 ■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.9 Origin position adjustment 38 ■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.10 Linear guide replacement 39 ■7.11 Bolt and screw tightening torque 39 Chapter 8 Spare Parts 40		
■7.11 Bolt and screw tightening torque		
Chapter 8 Spare Parts40		
■8.1 Spare Parts 40		
1	■8.1 Spare Parts	40

Overview

- This manual describes the axis type expression method, specifications and motor replacement procedures, etc., according to the type of axis.
- · For the installation, see the instruction manual (installation of actuator) provided separately.

Chapter 1 Safety

■1.1 Cautions for safety

- Before the installation, programming, operation, maintenance and inspection of the equipment, be sure to read through this manual so that you can use the electric actuator with safety.
- After you have read this manual, keep it nearby for future reference.

Be sure to observe the instructions for ensuring operation safety of the electric actuator.

This manual contain the important information to prevent injury to the operators and persons nearby, to prevent damage to assets and to assure correct use of the equipment.

Make sure that you have well understood the following details (indications and symbols) before reading this manual. Always observe the information that is noted.

▲ WARNING

If you have neglected this instruction and caused a handling error, death or serious injury may occur.

▲ CAUTION

If you have neglected this instruction and caused a handling error, human injury or property damage (damages to houses, household goods and domestic animals) may occur.

CAUTION

This gives a brief description of the major points of operation procedures, precautions and method for effective use of the machine.

WARNING

Install the safety fences to prevent anyone from entering the working envelope of the robot.

When the door is attached to the safety fence, the robot should be stopped at emergency at the same time that the door has opened.

 Connect the EMERGENCY STOP pushbutton switch to the emergency stop input terminal of the controller and mount the same switch at an easy-to-operate place in an emergency.

The EMEGENCY STOP switch must not be reset automatically and cannot be reset negligently by any person.

• Wiring should be done safely and completely according to the Electrical Installations Technical Requirements and Interior Wiring Requirements of Japan.

Incorrect wiring will result in an electric shock or a fire.

 The equipment MUST NOT be repaired or modified without prior written permission from the manufacturer.

Otherwise, an accident or damage will be caused.

Before the maintenance and inspection, be sure to turn off the controller main power switch.
 Take all necessary measures to prevent anyone other than the worker engaged in adjustment of the robot from negligently turning the power on. (Lock the switch and put a tag showing "DO NOT turn the power on.")

Also, DO NOT touch the controller interior ten (10) minutes after the power is turned off.

Otherwise, you may get an electric shock due to residual voltage of the capacitor.

DO NOT touch the motor, heat sink and cement resistor in the controller.

They are too hot and you may get burnt. Before performing inspection, take enough time to cool them off.

• DO NOT pour water on the equipment interior or exterior, or drain water from it. Otherwise, you may get an electric shock, or the equipment will be damaged.

When the equipment has contaminated, wipe it off with a hard squeezed cloth. DO NOT use a thinner, benzene or other organic solvent.

DO NOT throw away metals, combustibles or other contaminant into the opening of this
equipment.

A fire or an electric shock will be caused.

DO NOT put your finger or hand on the movable part or opening of the equipment.

Otherwise, you may get injured.

When using the actuator in other than the horizontal state, select the vertical actuator.

This actuator (belt-driven) cannot be used for the vertical application.

▲ WARNING

 As the equipment is heavy, make sure of its weight and gravity center position and disconnect the cables when carrying the equipment.

Also, DO NOT carry the equipment with the slider. Otherwise, the slider will move and you will get injured.

DO NOT use this equipment for the living body as a massaging machine.

Otherwise, you will be injured due to incorrect teaching or mis-operation.

 This equipment has not a sealed structure. During use, grease or wear of the belt may scatter from the opening of the equipment.

When using this equipment for food and chemical applications, take appropriate measures against entry of them.

• Enter the robot type and initialize the memory correctly.

Otherwise, the robot may move unexpectedly and you will be injured.

 DO NOT use this equipment in an atmosphere of inflammable gas or an atmosphere inducing an explosion.

As this equipment is not explosion-proof, it may explode in the worst occasion.

 DO NOT damage, break, process, forcibly bend, stretch, place a heavy object on or pinch the cables (power cable, controller cable).

Otherwise, an electric shock or a fire will be caused.

 Should an abnormality such as smoke or nasty smell occur, turn the power off immediately and stop using the equipment.

If the equipment is used continuously, an electric shock or a fire will be caused.

A CAUTION

 DO NOT place the equipment at a place where the ambient temperature exceeds 40°C, or where the temperature changes sharply, causing condensing, or where it is exposed to direct sunlight.

Additionally, if the equipment is installed at a narrow place, the ambient temperature rises due to heat generation in the controller itself or external device, which will result in malfunction or mis-operation of the equipment.

 DO NOT use the equipment at a place where an impact or vibration is involved. Also, DO NOT use the equipment in an atmosphere where conductive dust, corrosive gas or oil mist generates.

Otherwise, a fire, electric shock, malfunction or mis-operation will be caused.

DO NOT use the equipment at a place where too much dust or dirt exists.

If the equipment is used at such a place, it may malfunction because this equipment is not dust-proof.

DO NOT use repair parts other than those designated by the manufacturer.

Otherwise, the equipment cannot be operated to its full capacity and will cause malfunction.

Mount the robot on a highly rigid frame.

If rigidity of the frame is not enough, vibration (or resonance) may be caused during the robot operation, adversely affecting the operation.

 In the case of power failure, this equipment becomes a free running state. When devices or work pieces may be damaged by free running of this machine, use an axis equipped with brake even if the axis is installed horizontally.

This machine does not have a dynamic brake function.

The "KBX" belt driven axis does not support specifications with brakes.

Do not apply force to the slider that exceeds the maximum speed of this machine.

It may cause a malfunction.

Do not connect or disconnect a connector with the controller turned ON.

Malfunction may be caused.

· Take safety measures against fall and scatter of a work piece.

If collision occurs, the axis decelerates suddenly and a work piece may fall and scatter.

- Perform risk assessment for entire equipment and take required protective measures.
- When discarding this product, dispose correctly as an industrial waste.


■1.2 For your safe operation

When you use the electric actuator KBX Series, be sure to take the measures in conformity to the following instruction:


This machine is an industrial robot in conformance to the provisions of Paragraph 31of Article 36 of the Ordinance on Industrial Safety and Hygiene. Necessary cautions are specified in the "Selection", "Installation", "Use", "Periodic Inspection, etc." and "Education" of the "Technical Guideline on Safety Standards for Use of Industrial Robot" conforming to the Article 28 of the Industrial Safety and Health Law. You are requested to read them carefully and to observe the instructions. The following introduces some of them.

■1.2.1 Safety measures

(1) A safety barrier shall be provided to ensure that any person cannot enter the working area of a robot.

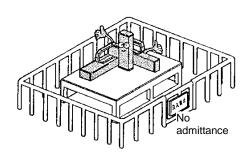

- The barrier shall have sufficient strength to withstand the force generated during the work or environmental conditions. The barrier shall have such a structure that cannot be easily adjusted, removed or cleared.
- The safety barrier shall be free from any serrated or sharp edge or protrusions.
- The safety barrier shall be designed in a stationary structure.
- When a safety barrier is equipped with a door, an interlock shall be provided so that the robot will be stopped by opening of the door.
- (2) An emergency stop device shall be installed where the robot can be easily stopped by the operator immediately in the event of emergency.

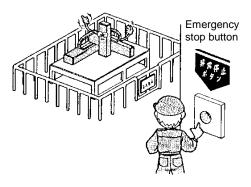

- 1. The emergency stop function shall ensure immediate and reliable stop of a robot when the emergency stop button switch has been operated by an operator.
- 2. The emergency stop button shall be red.
- The emergency stop device shall be located so that it can be easily pulled, pressed or touched by the operator, and it can block a beam of light.
- The emergency stop button shall be structured in such a way that it is not automatically reset after having been operated, and cannot be reset carelessly.
- (3) For safety, never modify the robot main unit or control device.

■1.2.2 Precautions for installation

Observe the following instructions when installing a robot:

- (1) The robot shall be laid out to ensure the work space required for robot teaching, maintenance and inspection.
- (2) The robot controller, other controllers and stationary operation panel shall be installed outside the movable range and where the operator can watch the robot operations.
- (3) The pressure gauge, hydraulic pressure gauge and other instruments shall be installed in clearly visible positions.
- (4) The electric wiring and hydraulic/pneumatic piping shall be provided with protective covers if they may be damaged.
- (5) To ensure effective operation of the emergency stop device in the event of emergency, emergency stop device switches shall be installed on locations other than the operation panel, as required.

■1.2.3 Precautions for use

Observe the following instructions when using a robot:

[Work within the movable range]

(1) Work provisions

Determine provisions for the following items and perform the work in conformity to them:

- Root operation methods and procedures required in the work such as startup method and switch handling method.
- 2. Speed of robot main unit in teaching.
- 3. Signaling method for work adjustment among more than one operator.
- 4. Action to be taken by the operator for each problem.
- 5. Procedures for confirming the release of the emergency and safety when restarting the robot operation after the robot operation has been stopped due to the operation of the emergency stop device.
- Measures to protect against the hazard due to unexpected operation of the robot described below (in addition to the above items), or the hazard caused by a robot operation error.
 - Indication on the operation panel.
 - Measures to ensure safety of the operator working within the movable range.
 - Working position and posture.
 - Prevention of operation error due to noise.
 - Signaling method for work adjustment with operators of related devices.
 - Error type and evaluation procedure.
- 7. The work provisions shall meet the requirements of the robot type, installation site and work.
- The work provisions shall be prepared by consultation with the related operators, manufacturer's engineers and industrial safety consultant.
- (2) Indication on the operation panel

To ensure that the start switch and selector switch will not be carelessly operated by a person other than the personnel in charge of this work, the switch shall be provided with an easy-to-read indication to show that the work is in progress. Alternatively, the operation panel cover shall be provided with locking or other means.

(3) Measures to ensure the operation safety of the personnel working within the movable range

Any one of the following measures or other measures on the equal or higher level shall be taken so that you can stop the robot operation immediately in the event of an error when working within the movable range:

- An adequately authorized supervisor shall be assigned outside the movable range and where the robot operations can be observed. This supervisor shall be exclusively in charge of the supervision and shall be responsible for the following:
 - The supervisor shall cause the emergency stop device to be operated immediately in the event of an error.
 - The supervisor shall ensure that a person other than the personnel in charge of this work is kept outside the movable range.
- The emergency stop device switch shall be placed under the control of the person working within the movable range.
- A portable operation panel having a structure capable of on/off operation of the power source, oil hydraulic or pneumatic source shall be used in the work.
- (4) Inspection prior to start of the work such as teaching

Prior to start of the work such as teaching, the following items shall be inspected. If any error is detected, immediately repair the trouble or take other required action.

- 1. Check if the covering or sheathing of the external power source is damaged or not. (This check must be made after the power has been turned off).
- 2. Check if the operation of the robot proper is faulty.
- 3. Check for the functions of the braking device and emergency stop device.
- 4. Check if there is any leakage of air or oil from the piping.
- (5) Cleaning of working tools

When such working tools as a painting nozzle are mounted on the robot proper, and these working tools must be cleaned, it is preferred that these tools should be automatically cleaned so that the number of machines entering the movable range can be minimized.

(6) Release of residual pressure

Before disassembling the pneumatic components or replacing their parts, release the residual pressure in the drive cylinder.

(7) Operation check

Perform the verification operation without entering the movable range, wherever possible.

(8) Illuminance

The illuminance required for operation safety shall be maintained.

[For automatic operation]

(1) Action before startup

Before starting the robot, check for the following items in advance and determine a signaling method for work adjustment among related operators.

- 1. Make sure that there is no person within the movable range.
- 2. The movable operation panel and tools shall be located at specified positions.
- 3. There shall be no error indication for the robot or related devices.
- (2) Action for automatic operation and in the event of an error
 - 1. Make sure that there is an indication to show that the automatic operation is now in progress, after the robot has been started.
 - 2. When a problem has occurred to the robot or related device and you have to enter the movable range to take emergency measures, stop the robot operation, for example, by operating the emergency stop device before entering the movable range. At the same time, carry a safety plug with you, and ensure that the start switch is provided with the indication to show that the work is now in progress. Take measures so that any other person than the operator in charge of the emergency measures cannot operate the robot.

Requesting your cooperation

For the safety instructions which seem especially important, relevant warning label is attached to the equipment.

When the label attached to the equipment has peeled off or the characters are defaced and unreadable, please procure it from our sales agent in your territory by specifying the part number, and attach it to the original place.

Warning label for actuator Part number: 55620157

↑ WARNING

- Before the installation, programming, operation, maintenance and inspection of the equipment, be sure to read through this manual so that you can use the electric actuator with safety.
- Install the safety fences to prevent anyone from entering the working envelope of the robot.
- DO NOT put your finger or hand on the movable part or opening of the equipment. Otherwise, you may get injured.
- When using the actuator in other than the horizontal state, be sure to select the actuator with brake. Otherwise, the slider will drop at power OFF, and you will be injured.

■1.3 Warranty

■1.3.1 Warranty period

This product is warranted for one of the following periods whichever comes first.

- (1) For 24 months after shipment from our factory.
- (2) For 18 months after installation at the customer's factory.
- (3) For 4000 hours of operation.

■1.3.2 Details of warranty

- (1) This product is warranted. The scope of the warrant includes the specifications and functions described in the Specification, catalog and Instruction Manual. We are not responsible for any secondary or incidental damages caused by the trouble of this product.
- (2) We will repair, on a free-of-charge basis, the trouble caused in the handling or use of the product within the warranty period of this product as described in the Instruction Manual attached to this product. Alternatively, such trouble will be repaired after the product has been returned to our factory. If the problem is solved by a dispatch of service personnel to meet the convenience of the customer, we may claim payment from your company regarding the transportation expenses, lodging expenses or other expenditures not directly related to the repair of the product.

■1.3.3 Exemption from responsibility

The following cases shall be excluded from the scope of warrant.

- The trouble and damage caused by the use of the product according to a method not described in the Instruction Manual, or by a careless error in use.
- (2) Problems caused by chronological changes or wear by use (such as natural fading of paints, deterioration of the consumable parts *1).
- (3) Problems caused by sensory phenomena (e.g. generated noise without affecting the function).
- (4) Modification or disassembling not authorized by our company.
- (5) Troubles or damages caused by inadequate maintenance and inspection or improper repair.
- (6) Troubles or damages caused by natural disaster, fire and other external factors.
- (7) Internal data such as programs and points created or modified by the customer.
- (8) Problems caused when this product purchased in Japan is brought to an overseas country.
- *1 : Consumable parts are defined as the parts maintenance replacement parts (spare parts) described in the Instruction Manual of each product, and the parts (e.g. backup battery) that must be replaced on a periodic basis.

■1.3.4 Precautions

- (1) When you have used the product beyond the specifications of the product, we cannot warrant the basic performances of the product.
- (2) Should you fail to observe the instructions given in "WARNING" and "CAUTION" described in the Instruction Manual, we are not responsible for any personal injury, damages or trouble that may occur.
- (3) Please note that the "WARNING" and "CAUTION" described in the Instruction Manual, and other descriptions are within the scope assumed by our company.
- (4) The numerical values given as technical data are theoretical values as a guideline showing the durability and others. They shall not be construed as indicating warranty. Note that these values are subject to change according to the conditions of use.

Chapter 2 Shipment List

■2.1 Shipment list

When the axis proper is shipped, it is composed of the following parts:

- (1) Actuator (axis)
- (2) Number of oval bolts attached (M8×40)
 - The above-mentioned axs-1 will be provided with the bolts in the number shown in the right-hand Table.



Axis stroke (mm)	Attached quantity
100~200	12
250~600	16
650~1000	20
1050~1300	26
1350~1850	32
2050~2600	40
2650~3200	48
3250~3500	56


(3) Introduction Manual

Chapter 3 Axis Specifications

■3.1 Axis type and names of individual parts


■Type of axis

The following shows the axis type:

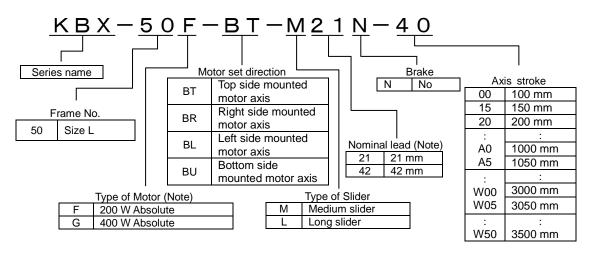

Note 1: Compatible only with the 21 mm-lead product in the case of a 200-watt motor. Compatible only with the 42 mm-lead product in the case of a 400-watt motor.

■ Names of individual parts

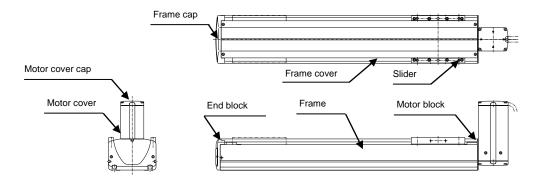

■3.2 Single axis specification

■ Specifications

KBX-50□-B□-□□□N-□□


Type of axis		KBX-50F-B=-=21N-==	KBX-50G-B=-=42N-==
Motor		AC 200-watt servo motor (absolute)	AC 400-watt servo motor (absolute)
Drive method		Timing belt Lead 21 mm	Timing belt Lead 42 mm
Guide method		Linear guide (Double) Bearing block 4 pieces	
Maximum payload m (Note 1) (Note 3)	ass	Horizontal : 40kg	Horizontal : 20kg
Maximum speed (Note 1) (Note 2)		1000 mm/s	2000 mm/s
Static permissible	Medium slider	MR:2080N • m MP:2160N • n	n MY:1820N • m
moment (Note 4)	Long slider	MR:2080N • m MP:3150N • n	n MY:2640N • m
Repeated positioning	accuracy (Note 5)	±0.04 mm	
Resolution		0.01 mm	
Rated thrust		190N	190N

- (Note 1) The part with a lead of 21 mm has an acceleration/deceleration time of 0.3 s or more. The part with a lead of 42 mm has an acceleration/deceleration time of 0.5 s or more.
- (Note 2) The part with a lead of 21 mm is compatible only with a 200-watt motor. The part with a lead of 42 mm is compatible only with a 400-watt motor.

▲ CAUTION

Set the part with a lead of 21 mm to an acceleration/deceleration time below $0.3\ s.$ Set the part with a lead of 42 mm to an acceleration/deceleration time below $0.5\ s.$ A misalignment may occur in meshing between the timing belt and pulley

(Note 3) Set the pause time after movement to 1.0 sec or longer.

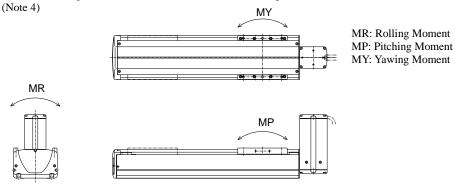


(Note 5) Repeatability in one direction during 7 trials at a constant ambient temperature of 20°C. It is not absolute positioning accuracy. Trajectory accuracy is not guaranteed.

Axis dimensions

(1) Top side mounted motor axis [KBX-50*-BT-***N]


(1) 100	side inodified i	11000		Į—,				٠,																											
	Type DF-BT-M21N-□□ DG-BT-M42N-□□	20	30	40	50	60	70	80	90	A0	В0	CO	DO	E0	F0	GO	НО	J0	КО	L0	MO	NO	P0	QO	RO	S0	T0	UO	VO	WOO	W10	W20	W30	W40	W50
St	roke X (mm)	200	300	400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000	2100	2200	2300	2400	2500	2600	2700	2800	2900	3000	3100	3200	3300	3400	3500
Full	length L(mm)	581	681	781	881	981	1081	1181	1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481	3581	3681	3781	3881
Weight	KBX-50F-BT-M21	15.0	16.5	18. 0	19.5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37.5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63.7	65. 2	66.8
(kg)	KBX-50G-BT-M42	15.0	16.5	18. 0	19.5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37.5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63.7	65. 2	66.8
	Type DF-BT-L21N-□□ DG-BT-L42N-□□	25	35	45	55	65	75	85	95	A 5	B5	C5	D5	E5	F5	G5	Н5	J5	K5	L5	M5	N5	P5	Q5	R5	S5	T5	U5	V5	W05	W15	W25	W35	W45	
St	roke X (mm)	250	350	450	550	650	750	850	950	1050	1150	1250	1350	1450	1550	1650	1750	1850	1950	2050	2150	2250	2350	2450	2550	2650	2750	2850	2950	3050	3150	3250	3350	3450	l
Full	length L(mm)	681	781	881	981	1081	1181	1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481	3581	3681	3781	3881	i
Weight	KBX-50F-BT-L21	17. 1	18.6	20. 1	21.6	23. 1	24.6	26. 1	27. 6	29. 1	30.6	32. 1	33.6	35. 1	36.6	38. 1	39.6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58.0	59.6	61.2	62.7	64. 3	65.8	67.4	i
(kg)	KBX-50G-BT-L42	17. 1	18.6	20. 1	21.6	23. 1	24. 6	26. 1	27. 6	29. 1	30.6	32. 1	33. 6	35. 1	36.6	38. 1	39.6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58.0	59.6	61.2	62.7	64. 3	65.8	67.4	l

[NOTE] The format of the table lists only the end of the symbol " part of the type. In the case of more than stroke 3000mm, it will be a three-digit code.

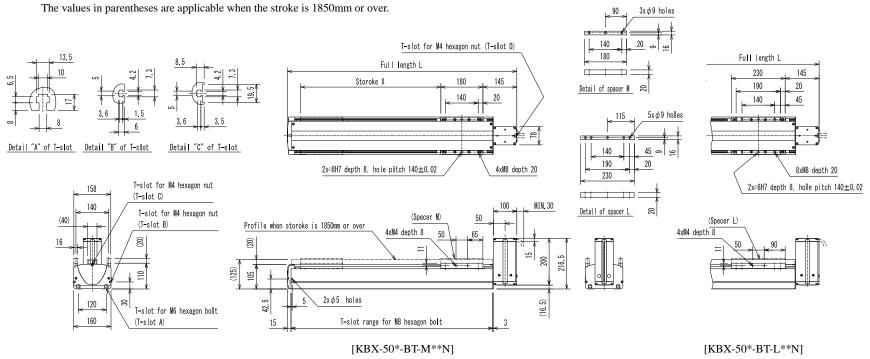


(2) Botto	om side mounte	ed me	otor a	xis [<u>KBX</u>	<u>-50*</u> -	·BU-	***N]																											
	Type																																		
	F-BU-M21N-	20	30	40	50	60	70	80	90	A0	B0	CO	D0	E0	F0	G0	H0	J0	K0	L0	MO	NO	P0	Q0	R0	S0	T0	U0	VO	W00	W10	W20	W30	W40	W50
	G-BU-M42N-□□																													L		L'	لحجيا	ليبيا	
	oke X (mm)	200	300			600		800																										3400	
Full	length L(mm)	581	681		881	981	1081																	2781	2881	2981	3081	3181	3281	3381	3481			3781	
Weight	KBX-50F-BU-M21	15. 0	16.5	18. 0	19.5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51. 2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63. 7	65. 2	66.8
(kg)	KBX-50G-BU-M42	15. 0	16. 5	18. 0	19. 5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43. 4	44. 9	46. 5	48. 1	49.6	51. 2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63.7	65. 2	66.8
	Type F-BU-L21N-□□ G-BU-L42N-□□	25	35	45	55	65	75	85	95	A 5	B5	C5	D5	E5	F5	G 5	Н5	J5	K 5	L5	M5	N5	P5	Q5	R5	\$5	T5	U5	V5	W05	W15	W25	W35	W45	
Str	oke X (mm)	250	350	450	550	650	750	850	950	1050	1150	1250	1350	1450	1550	1650	1750	1850	1950	2050	2150	2250	2350	2450	2550	2650	2750	2850	2950	3050	3150	3250	3350	3450	'n
Full	length L(mm)	681	781	881	981	1081	1181	1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481				3881	i
Weight	KBX-50F-BU-L21	17. 1	18. 6	20. 1	21.6	23. 1	24. 6	26. 1	27. 6	29. 1	30.6	32. 1	33. 6	35. 1	36. 6	38. 1	39. 6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58. 0	59. 6	61.2	62. 7	64. 3	65. 8	67. 4	i
(kg)	KBX-50G-BU-L42	17. 1	18. 6	20. 1	21.6	23. 1	24. 6	26. 1	27. 6	29. 1	30. 6	32. 1	33. 6	35. 1	36. 6	38. 1	39. 6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58. 0	59. 6	61.2	62. 7	64. 3	65. 8	67. 4	i

[NOTE] The format of the table lists only the end of the symbol " part of the type. In the case of more than stroke 3000mm, it will be a three-digit code.

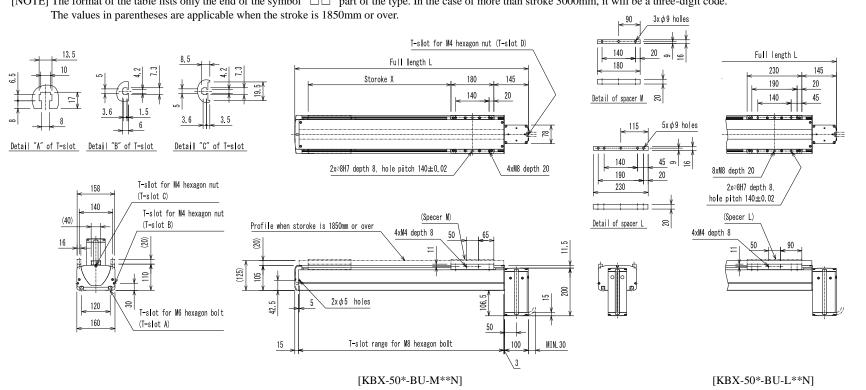


(3) Righ	nt side mounted	l mot	or ax	is [KI	BX-5	ю*-В	BR-**	*N]																											
	Туре																																		
	F-BR-M21N-□□	20	30	40	50	60	70	80	90	A0	B0	CO	D0	E0	F0	G0	H0	J0	K0	L0	MO	NO	P0	Q0	R0	S0	T0	U0	VO	WOO	W10	W20	W30	W40	W50
KBX-50	G-BR-M42N-□□																																		
Str	roke X (mm)	200	300	400	500	600	700	800									1700																		
Full	length L(mm)	581	681	781	881		1081										2081																		
Weight	KBX-50F-BR-M21	15.0	16.5	18. 0	19.5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43. 4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63. 7	65. 2	66.8
(kg)	KBX-50G-BR-M42	15. 0	16. 5	18. 0	19.5	21.0	22. 5	24. 0	25. 5	27. 0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63. 7	65. 2	66.8
	Туре																																		
KBX-50	F-BR-L21N-□□	25	35	45	55	65	75	85	95	A5	B5	C5	D5	E5	F5	G5	H5	J5	K5	L5	M5	N5	P5	Q5	R5	S5	T5	U5	٧5	W05	W15	W25	W35	W45	l
KBX-50	G-BR-L42N-□□																																		ĺ
Str	roke X (mm)	250	350	450	550	650	750	850	950	1050	1150	1250	1350	1450	1550	1650	1750	1850	1950	2050	2150	2250	2350	2450	2550	2650	2750	2850	2950	3050	3150	3250	3350	3450	l
Full	length L(mm)	681	781	881	981	1081	1181	1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481	3581	3681	3781	3881	l
Weight	KBX-50F-BR-L21	17. 1	18.6	20. 1	21.6	23. 1	24. 6	26. 1	27. 6	29. 1	30.6	32. 1	33.6	35. 1	36.6	38. 1	39.6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58. 0	59.6	61.2	62. 7	64. 3	65.8	67. 4	l
(kg)	KBX-50G-BR-L42	17. 1	18.6	20. 1	21.6	23. 1	24. 6	26. 1	27. 6	29. 1	30.6	32. 1	33. 6	35. 1	36.6	38. 1	39.6	42. 4	44. 0	45. 5	47. 1	48. 7	50. 2	51.8	53. 3	54. 9	56. 5	58. 0	59.6	61.2	62. 7	64. 3	65.8	67.4	1

[NOTE] The format of the table lists only the end of the symbol " part of the type. In the case of more than stroke 3000mm, it will be a three-digit code.

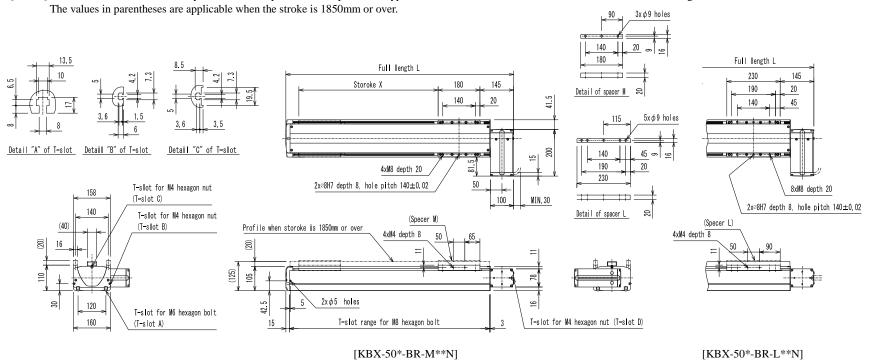

(4) Len	side mounted i	noto	axis	[KB	X-50	*-BL	***N	1]																											
	Туре																																		
	F-BL-M21N-□□	20	30	40	50	60	70	80	90	A0	B0	CO	D0	E0	F0	GO	H0	J0	K0	L0	MO	NO	P0	QO	R0	S0	T0	U0	V0	W00	W10	W20	W30	W40	W50
)G-BL-M42N-□□																																<u> </u>		
Str	roke X (mm)	200	300	400	500	600		800																										3400	
Full	length L(mm)	581	681	781	881	981	1081	1181	1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481	3581	3681	3781	3881
Weight	KBX-50F-BL-M21	15.0	16.5	18.0	19.5	21.0	22. 5	24. 0	25. 5	27.0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63. 7	65. 2	66.8
(kg)	KBX-50G-BL-M42	15.0	16.5	18.0	19.5	21.0	22. 5	24. 0	25. 5	27.0	28. 5	30.0	31.5	33.0	34. 5	36.0	37. 5	39.0	41.8	43.4	44. 9	46. 5	48. 1	49.6	51.2	52. 7	54. 3	55. 9	57. 4	59.0	60.6	62. 1	63. 7	65. 2	66.8
	Type																																		
KBX-50	F-BL-L21N-□□	25	35	45	55	65	75	85	95	A5	B5	C5	D5	E5	F5	G5	H5	J5	K5	L5	M5	N5	P5	Q5	R5	S5	T5	U5	٧5	W05	W15	W25	W35	W45	
KBX-50	G-BL-L42N-□□																													1 1	1 '		1 1		
Str	roke X (mm)	250	350	450	550	650	750	850	950	1050	1150	1250	1350	1450	1550	1650	1750	1850	1950	2050	2150	2250	2350	2450	2550	2650	2750	2850	2950	3050	3150	3250	3350	3450	
	roke X (mm) length L(mm)	250 681	350 781		550 981																											3250 3681			
			350 781 18. 6	881	981	1081		1281	1381	1481	1581	1681	1781	1881	1981	2081	2181	2281	2381	2481	2581	2681	2781	2881	2981	3081	3181	3281	3381	3481	3581		3781	3881	
Full	length L(mm)	681 17. 1		881 20. 1	981 21. 6	1081 23. 1	1181 24. 6	1281 26. 1	1381 27. 6	1481 29. 1	1581 30. 6	1681 32. 1	1781 33. 6	1881 35. 1	1981 36. 6	2081 38. 1	2181 39. 6	2281 42. 4	2381 44. 0	2481 45. 5	2581 47. 1	2681 48. 7	2781 50. 2	2881 51.8	2981 53. 3	3081 54. 9	3181 56. 5	3281 58. 0	3381 59. 6	3481 61. 2	3581 62. 7	3681	3781 65. 8	3881 67. 4	


[NOTE] The format of the table lists only the end of the symbol " " part of the type. In the case of more than stroke 3000mm, it will be a three-digit code.

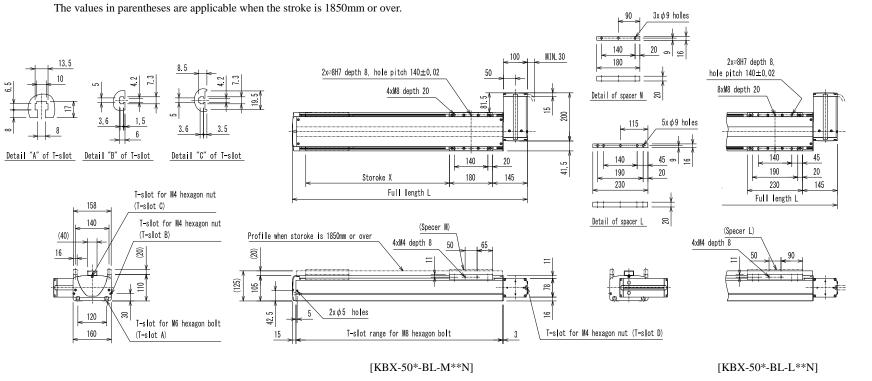


Chapter 4 Cable Installation

Install the cable according to the following procedure:

 (1) Loosen the four hexagon socket head button bolts holding the motor cover cap and remove the motor cover cap from the motor cover.



 
(2) Select the cover of the cable outlet in the direction where the cable of the motor cover cap is pulled out, and hold it with cutting pliers. Then remove it by twisting.




(3) Insert a band into the lateral hole on the portion without the cover of the cable outlet of the motor cover cap.

Pass it through the hole.

  
(4) Use the band to fix the side of the controller cable which is fitted to the axiz. Do not tighten the band excessively.





(5) Insert the connector for the axis side of the controller cable into the connector for the axis body (for motor power, encoder, origin sensor) until it is locked, and connect it securely.

 (This machine does not have a brake except for special specifications, so it is not necessary to connect the brake connector. If it is a special specification with a brake, connect it.)



Insert the motor power connector for the controller side of the cable into the connector on the surface of the controller until it is locked, and then connect it securely. Insert the encoder connector into the connector on the surface of the controller and fix it with screws.

For the connector on the controller side, also refer to the KCA-25 Instruction Manual (Basic part).

A CAUTION

- Before energizing, be sure to check that there are no connector connection leaks or connection errors.
- Do not pinch the wiring between the motor cover cap and the motor cover.
- When connecting or fixing the connector, do not apply excessive force to the cable.



Chapter 5 Installing Actuator (Axis)

- This chapter describes the basic installation procedures for the axis and peripheral equipment.
- Installation shall comply with the instructions of this Chapter. If the installation procedure is incorrect, robot
 performance cannot be achieved. Not only that, the service life may be seriously reduced.

▲ CAUTION

Precautions for installation

- Environment of installation site
- (1) The ambient environment for operation shall comply with the following requirements:

• Ambient temperature Working temperature: 0°C to 40°C

Transportation and storage temperature: -10°C to 50°C

• Relative humidity: 30 to 90%RH without dew condensation

Altitude: 1000 m or less
 Vibration 0.98 m/s² or less

Dust: Free from conductive dust or dirt
 Gas: Free from flammable or corrosive gas

• Magnetic field: Free from a nearby device that may generate magnetic field

• Radiation: Not in the radiation controlled area

• Others: Without greasy fume

- (2) This product is not designed as an explosion proof structure. Do not use it in a dusty place. Further, take sufficient care of the environment since it is not explosion-proof.
- (3) Do not use it in a place with an organic solvent or white kerosene.. Of guide or ball screw grease is melted. It may cause malfunction.

Precautions in installation

- (1) Do not allow the product to fall down or be collided with other object during the transportation.
- (2) Install the product where maintenance and inspection are easier.
- (3) Install the controller within the range where it can be reached from the robot proper by a standard cable.
- (4) Installation
 - Install the product on a horizontal installation base.
 - The installation base shall have the length that allows only the frame portion to be mounted.
 - The installation base shall be made of a steel plate having a thickness of 20 mm or more where the plate has a machined surface with flatness of 0.2 or less. Install this product on this base to correct the bend and twist of the axis frame and to reinforce the axis frame.
 - Install the oval bolts (installation bolts) of the axis at a pitch of approximately 150 mm.

■5.1 Installing Actuator (Axis)

Installation shall comply with the following procedures:

(1) Setting the oval bolt

From the axis end face, insert the oval bolt in the T-slots of the frame installation surface.

(2) Mounting on the installation base

Drill installation holes on the installation base of the carriage at a pitch of approximately 150 mm, and mount the product with oval bolts.



- The T-slots (for M4 nut) on the side and top of the frame are used to install the CN box and optical parts. Never use these T-slots to mount the axis.
- The nut (M8) tightening torque shall be 12 N-m.

■5.2 Robot type for each Axis

The robot type is indicated by the 6-digit numerals specified for each robot type.

If this setting is made, various parameter values suited to the axis to be used can be automatically set. The input procedure is given in Section 4.2 of the KCA-25 Instruction Manual (Basic Part).

The major robot type for each axis is given in the following Table. The axis (new models) not described in the following Table are specified in the Actuator Instruction Manual.

When you want to use a combination of axes, see the following Table for each an axis.

[Robot type for KBX-50]

• When used as a slider traveling type axis (in normal use)

	Lead (mm)	Type of axis	Robot type
KBX-50F	21	KBX-50F-B□-□21□-□□	602390
KBX-50G	42	KBX-50G-B□-□21□-□□	603080



●When you have used the origin change sensor (optional) and set the home position to the side reverse to the normal side, input the robot type prior to change. After that, change the "Setting the motor rotating direction" in paragraph 2 of Section 13.4.5 described in the KCA-25 Instruction Manual (Basic Part) (Change it from 1 to 0).

■5.3 Parameter values

The parameters of this product are available in two types -- parameter 1 and parameter 2 -- depending on the frequency of use. The relationship between each parameter and the robot type is illustrated below:

Setting the robot type allows the parameters on the circled portion on the left to be automatically changed.

■5.3.1 Values of parameter 1 for each robot type

This parameter has a higher frequency of use.

• Belt-driven axis (slider movable type)

Automatic		Robot type	602390	603080
setting	Parameter		Lead 21	Lead 42
	Software limit val	ue (upper limit)	0000.00	0000.00
	Software limit val	ue (lower limit)	0000.00	0000.00
	Servo gain	Position	19	20
	Position/Speed	Speed	30	30
	Pass area		20	00
	Origin offset value	e	0000.00	0000.00
	Sequence of Retur	rn to Origin	1 (Note)	1 (Note)
	100	L(Low speed)	10	10
	JOG speed	H(High speed)	50	50
	JOG inching move	ement	0.01	0.01

(Note) The Sequence of Return to Origin varies according to the combination format, installation conditions and others. The customer is requested to set it in conformity to your operation conditions.
 The initial value is common at "1" for all robot types. Thus, if there is no change, simultaneous origin return of all axes can be achieved.

CAUTION

Regarding the servo gain value, the initial value is automatically set by the input of the robot type, but the conditions vary depending on the specifications of the axis (stroke, grease change, etc.), the installation state of the axis, the load mounting state, etc. Since it will change, change the set value if it is necessary to shorten the cycle time or if abnormal noise is generated due to the oscillation of the servo motor. For the servo gain, please also check the section of \blacksquare 6.4 "Servo gain setting". For details on how to change the servo gain setting, refer to Sections 13.3.3 and 13.3.4 of the KCA-25

Operation Manual (Basic Part).

■5.3.2 Values of parameter 2 for each robot type

• Belt-driven axis (slider movable type)

Automatic		Robot type	602390			603080
setting	Parameter		Lead 21			Lead 42
	Axis display		X			X
	In position dat	a value	00.05			00.05
	Overflow data	value	20000			30000
0	Feed forward	data value	02000			02000
0	Direction of m	otor rotation	1			1
0	Maximum spe	ed	1000			2000
	ъ	(L) Low speed	10			10
0	Return to origin speed	(M) Medium speed	50			50
	origin speed	(H) High speed	200			200
0	Return to origi	n method	1			1
0	Origin sensor	logic	0			0
	High speed ret	urn to origin position	20			20
0	Lead		21.015			42.000
0	Encoder divisi	on number	2768			2768
0	Encoder pulse	multiplier	4			4
	Encoder type ((Note)	a			a
	Task and axis	combination	[1]	[0]	[0]	[0]
	Task order of p	priority	[1]	[1]	[1]	[1]
	Task coordinat	te table	999	999	999	999
	Task step num	ber	5000	0000	0000	0000

(Note) The encoder type cannot be set in this robot type since setting for each axis is not available. See Section 13.4.17 of the KCA-25 Instruction Manual (Basic Part).

Chapter 6 Precautions for Use

■6.1 Fluctuation in sliding resistance during long-term storage

The belt drive axis of the electric actuator drives the slider by meshing between the timing belt and pulley.

When the electric actuator has been stored or its operation has been suspended for a longer period of time (*1), the timing belt is kept curled at the meshing portion between the timing belt and pulley (or roller).

When the slider is subjected to sliding close to this curl, a fluctuation occurs to the sliding resistance, but this does not raise any problem.

This curl does not affect the timing belt. Further, the fluctuation in the sliding resistance of the slider does not have any adverse effect on the repeated positioning accuracy.

The curl of the timing belt will be removed after several days of operation (*2). The fluctuation in the sliding resistance due to the curl of the belt will also be removed.

For the bend of the timing belt, see Section 7.6 Routing the timing belt.

- *1: About a week. This may vary according to the environment during storage.
- *2: The number of days of operation before the curl of the timing belt is removed varies according to the number of reciprocations of the slider per day and the storage period.

■6.2 In the event of collision

Skipping of teeth may occur to the meshing between the belt and pulley by the collision between the slider and axis end due to some trouble. If this occurs, the origin and working range will be misaligned.

In this case, the axis must be readjusted. Retighten the belt. For the belt tightening procedure, see Section 7.5 Timing belt and motor replacement procedure.

■6.3 About cracks on the back of the timing belt during long-term operation

 
When the slider part of the belt drive axis reciprocates about 1 million (*1), crack-like streaks occur in the rubber on the back surface (toothless surface) of the timing belt. However, if you are using it within the specifications, there is no problem.

Please note that the life of the timing belt may be shortened if the number of reciprocating operations is large, such as high-speed cycle operation.

Check the timing belt regularly. If there is a problem, replace the timing belt immediately. This crack-like streaks is caused by the reciprocating motion of the timing belt hung on the pulley.

The number of crack-like streaks increases in proportion to the number of movements up to about 5 million round trips (* 1), and crack-like streaks are generated in a narrow pitch.

(The minimum crack-like streaks pitch is about 3 mm.)



Initial crack-like streaks development (back of timing belt)
(After about 1 million round trips)

 
Before the timing belt reaches the end of its life, the following signs and abnormalities of the belt life may appear.

- · The rubber on the back of the timing belt has peeled off from the crack on the back of the timing belt.
- The slots on the back of the timing belt is widened.
 (Rhagades change from streaks to slots)
- · The tooth of the timing belt is missing.

etc.

If you find any signs or abnormalities during the inspection before starting the work and periodic inspection, replace the timing belt as soon as possible.

For the timing belt replacement procedure, refer to ■ 7.7 "Timing belt and motor replacement procedure".



If the timing belt is used under conditions outside the specified range, it may reach the end of its life such as breakage in a short operating time before crack-like streaks appear on the belt or signs of life appear.

Be sure to use it under the load conditions within the specified range and the usage environment.

*1: The number of reciprocating operations described is a guideline value. It varies depending on the load conditions and usage environment.

In addition, the number of reciprocating movements counts the number of reciprocating movements within the stroke range regardless of the movement stroke.

If models with different strokes make one round trip of the full stroke, both are counted as the same one round trip.

Example: Stroke 100 mm, 3 seconds / round trip and Stroke 2,000 mm, 10 seconds / round trip are counted as the same one round trip.

■6.4 Servo gain setting

In the actuator, in order to facilitate the parameter setting work of the controller, the initial parameters for operating the component arm are automatically set by setting the "robot type" (6 digit number) determined for each model to the controller.

The initial value of the servo gain that is automatically set is set to a value that does not cause abnormal noise or vibration in single-axis or combination operation with no load to maximum load. Therefore, the operation cycle time tends to be slower overall. Also, in the initial value state, the cycle time may be longer than that of the old model. The servo gain value is designed to be adjusted by the customer according to the operating conditions and load conditions, such as when shortening the cycle time. Please adjust the servo gain value by referring to $\blacksquare 5.1.1$ "Servo gain setting value and operating condition".

For details on how to change the servo gain setting, refer to Sections 13.3.3 and 13.3.4 of the KCA-25 Operation Manual (Basic Part).

For the robot type setting value, refer to **\(\bigsiz** 5.2 \) "Robot type for each Axis", and for the initial parameter value set by the robot type setting, refer to **\(\bigsiz** 5.3 \) "Parameter values".

■6.4.1 Servo gain setting value and operating condition

The relationship between the servo gain setting value and the operating state is as follows.

- (1) Position gain (P)
 - When the set value is reduced
 - · Positioning completion will be delayed (cycle time will be longer).
 - If the position gain is set too small, an error such as an "overflow error" may occur during operation (especially during acceleration) and operation may not be possible.
 - The positioning and holding force of the slider is reduced (rigidity is reduced).
 (When the servo is turned on and the slider operation is stopped (servo holding state), it becomes easier to move when an external force is applied to the slider part.)
 - In the case of elevating operation specifications, if an emergency stop is applied while the operation is stopped with the servo on, the amount of drop of the slider will increase.
 - The KBX- belt driven axis does not support vertical specifications (specifications with brakes).
 - When the set value is increased
 - · Positioning is completed faster. (cycle time is shorter)
 - Deceleration stop becomes faster, and shaking when deceleration stop becomes larger.
 (Especially when the combination specification or when the distance from the slider to the load is long, the shaking becomes large.)
 - Immediately before deceleration stops, shaking will occur due to speed fluctuations.
 (It behaves like shaking just before it stops, especially when the load is heavy.)
 - · If it is made excessively large, abnormal noise will be generated due to the oscillation of the servo motor.
 - The positioning holding force of the slider part increases. (the rigidity increases) (it becomes difficult to move even if an external force is applied to the slider part when the servo is ON and the slider operation is stopped (servo holding state).)
 - In the case of a belt drive axis, the teeth of the belt may come off due to faster deceleration, and a position error may occur. (Especially when the load is heavy, it is likely to occur)
 - By shortening the cycle time, "overload error" and abnormalities due to overheating of the motor are more likely to occur.

(2) Speed gain (V)

- When the value is reduced
- If it is made too small, an error such as "overflow error" may occur during operation (especially when accelerating) and operation may not be possible.
- The positioning and holding force of the slider is reduced. (Rigidity decreases)
- When the value is increased
- Abnormal noise is generated due to the oscillation of the servo motor.
 (Depending on the installation state and load conditions, when the servo is turned on, abnormal noise may occur in the slider operation stop state (servo holding state) or operation state.)



The relationship between gain value and operation described above is an example of a general condition. Other states may appear depending on the combination state, load conditions, operating conditions, and the combination of position gain and speed gain settings.

■6.4.2 About adjustment of servo gain

When adjusting the servo gain, refer to the contents described in \blacksquare 6.4.1 "Servo gain setting value and operating condition" and set according to the following description.

(1) Speed gain setting

The initial value of speed gain usually does not need to be changed.

If it is changed, please set as follows.

By increasing the speed gain, the holding rigidity of the slider part becomes stronger, but abnormal noise is more likely to occur.

- 1. Be sure to perform the confirmation operation.
 - Increase the speed gain value by 1 or 2 until abnormal noise occurs during operation or stop.
 - (If there is an abnormal noise such as motor oscillation at the initial value due to load conditions, etc., first lower the speed gain value before put into practice.)
- 2. Decrease the speed gain value by 1 from the state where abnormal noise is generated until there is no abnormal noise, etc., and determine the upper limit of the speed gain.
- 3. Set the value (* 1) lowered by "2" from the determined upper limit value as the speed gain setting value.

 After setting, operate continuously. Make sure that no abnormal noise is generated during operation or stop. If abnormal noise occurs, lower the set value.
 - * 1: If the upper limit of the speed gain value that does not cause an abnormality is "20", set "2" lowered, "18".

(2) Position gain setting

To increase the position gain value, set as follows.

By increasing the position gain, the cycle time will be shortened, but shaking and abnormal noise will be more likely to occur when decelerating and stopping.

- 1. Be sure to perform the confirmation operation.
 - Increase the position gain value by 3 to 5 until abnormal noise or abnormalities such as shaking begin to occur during operation.
- 2. Decrease the position gain value by 1 or 2 from the state where an abnormality has occurred to the state where there is no abnormality, and determine the upper limit of the position gain.
- 3. Set an integer value (* 2) that is 10% lower than the determined upper limit value as the position gain value.

 After setting, check that there are no abnormalities in continuous operation. If there is something abnormalities, lower the set value.
 - * 2: If the upper limit of the position gain value that does not cause an abnormality is "35", lower it by 10% and round down to the nearest whole number, and set "31" as the set value. (The gain setting can only be set to an integer value)



- Checking the operation while energizing is dangerous work. Be sure to take the safety measures described in the section of ■ 1.2 "For your safe operation".
- If you accidentally change the parameter settings that you did not intend, the behavior may be unexpected. Be sure to check the items to be changed before implementing.
- If the parameter value is changed significantly, vibration / shaking or abnormal noise may
 occur. Be sure to change the value little by little and check the operation.

- Abnormalities such as vibration and abnormal noise may occur due to resonance, so check
 the operation from the low speed range used for return to origin operation and "JOG"
 operation to the high speed range used for continuous operation.
- By shortening the cycle time, an "overload error" or an abnormality due to overheating of the motor may occur. If an error occurs, consider changing the motor capacity or operating conditions.
- For the combined specification axes, adjust the servo gain for all axes.
 If all the axes have not been adjusted, the amount of deviation in the operation trajectory of the interpolation operation may increase or the positioning may be delayed due to the operation of the axis that has not been adjusted.

Chapter 7 Maintenance

■7.1 Precautions for inspection and maintenance work

(1) Precautions for inspection and maintenance work

Observe the following instructions at the time of inspection and maintenance:

- The robot shall be inspected and maintained by the personnel having a sufficient level of skill and experience.
 If such personnel are not available, contact the manufacturer and request implementation of the relevant work or education of the person in charge.
- 2. Use adequate illumination.
- 3. The start switch of the stationary operation panel or some other similar portion shall be provided with a notice board to indicate that the inspection and maintenance work is currently in progress.
 Before entering the fence and enclosure, lock the open power switch to turn off power completely. If the access of the fence or enclosure is provided with a safety plug, be sure to carry the related plug with you.
- If you have to enter the fence and enclosure for inspection and inspection of the control circuit, turn off the drive power source.
- 5. If you have to operate the industrial robot in the inspection and maintenance work within the guard fence and enclosure, you are recommended to take the following measures:
 - Two persons should be engaged in the work in cooperation with each other. This means that role
 assignment should be made in such a way that one person supervises the work of the other person during
 the work.
 - It is required to select such a speed that contact with the robot can be avoided in the event of a possible operation error of the robot. Determine the speed suited for the relevant work.
 - Take care of the robot operation during the work. Press the emergency stop button immediately when an unexpected operation has been detected.
- Before starting disassembly of the pressure gauge or replacement of the parts, release the residual pressure of the cylinder.
- 7. Before starting disassembly of the hydraulic and pneumatic systems or replacement of parts, take a sufficient care to avoid deposition or mixture of foreign substances such as dust.
- (2) Action to be taken subsequent to inspection and maintenance work
 - After termination of the inspection or maintenance work, the inspection or maintenance worker shall carry
 the tools back to the original position.
 - 2. After termination of the maintenance work, be sure to perform a test run to verify the result. The test run shall be performed from outside the fence and enclosure in principle.
 - 3. After action of item 2 has been taken, the inspection or maintenance worker shall report termination of the inspection or maintenance work to his superior.

■7.2 Inspection before starting the work

- (1) Before starting your work with the robot, make sure of the following:
 - 1. Brake device function
 - 2. Emergency stop device function
 - 3. Contact preventive equipment and robot interlock function
 - 4. Related devices/robot interlocking function
 - 5. Possible damage of the external wiring and piping
 - 6. Error of supply voltage and hydraulic and pneumatic pressures
 - 7. Operation error
 - 8. Abnormal noise and vibration
 - 9. Contact preventive equipment state
- (2) This inspection shall be conducted outside the movable range wherever possible.

■7.3 Periodic inspection

Giving consideration to the robot installation site, frequency of use and durability of the parts, determine the inspection standards including the inspection item, inspection procedure, evaluation criteria and implementation period for the following items. Start inspection in conformity to these standards.

- 1. Looseness of major parts
- 2. Lubrication and other possible errors of the movable parts
- 3. Power transmission component trouble
- 4. Hydraulic and pneumatic system error
- 5. Electric system error
- 6. Operation failure detecting function error
- 7. Encoder error
- 8. Servo system error

■7.4 Cleaning


Clean the robot proper in conformity to the following steps:

- 1. Turn off the power switch and remove the power plug.
- 2. Use waste cloth or such to remove the dust and dirt from the frame and covers etc.
- 3. Remove the frame cover and clean the dust and dirt from the frame cover. After that, supply oil for lubrication.
- 4. Mount the frame cover back.

■7.5 Greasing

Greasing positions

The linear guide of this product are provided with an oilless seal. To prevent a possible accident, check for the greasing conditions and damages on a periodic basis. If insufficient lubrication has been found out, supply grease according to the following steps. If any trouble such as a breakdown has been detected and repair work is required, contact the Service Divisions shown at the end of this Manual, and request repair to be made.

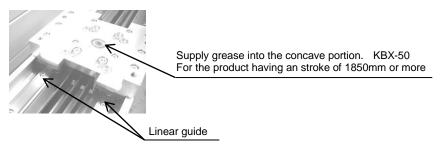

Greasing position	Type of grease (manufacturer)	Inspection and greasing intervals	Volume of grease
Linear guide	Albania Grease S2	Every 6 months	A thin layer of grease applied on the linear guide rail
Resin on slider	(Shell)	-	Fill the groove.

· Inspection and greasing steps

- 1. Turn off the power and remove the power plug.
- 2. Remove the frame cover of the axis.
- 3. Inspect the linear guide . If insufficient greasing has been found out, supply grease to the above-mentioned greasing positions.
- 4. Slowly move the slider manually or in the jog mode (at a speed of about 50 mm per second or less) five or more reciprocations and make sure that grease has been supplied into the linear guide block.
- 5. Wipe off the overfilled or discolored grease.
- 6. Mount the frame cover again.

CAUTION

If the fats and oils in the belt is attached, please be sure to wipe it will be the cause of the deterioration of the belt.

■7.6 Timing belt inspection

Inspect the timing belt at intervals of approximately 500 hours.

- Check the belt for deterioration, fatigue and scratches. Replace it if any problem has been detected. For the replacement procedure, see the Actuator Instruction Manual.
- If you want to use the brake motor shuttling axis in the vertical position (as a Z-axis), observe the following instructions:
 - 1. Be sure to replace the belt before operation for 3000 hours.
 - 2. The service life of the belt heavily depends on the working environment and conditions. If any trouble has been found out during the inspection, replace the belt immediately.



If the belt used in the vertical position is broken, a serious accident may occur. Enforce belt replacement in good time.

■7.7 Timing belt and motor replacement procedure


Replace the timing belt and motor in conformity to the following steps:

For the belt tension adjustment procedure, see Section 7.6 Routing the timing belt as well.


▲ CAUTION

- Turn OFF power before starting the work.
- When the belt tension has been adjusted, the programmed position (teaching position)
 may be misaligned. If it is misaligned, correct the programmed position (teaching
 position).
- (1) Remove the cover.


(When you want to replace the motor for the 21 mm-lead product alone, you need not remove the frame cap or end plate.)

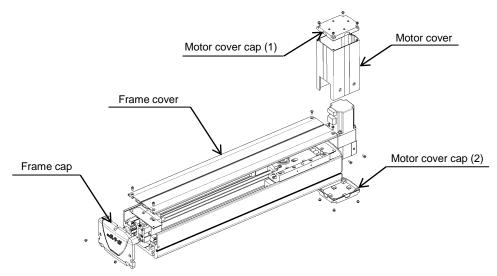


(2) Loosen two belt clamp bolts and reduce the timing belt tension.
(This step is not necessary if you want to replace the motor for the 21 mm-lead product alone.)
When the motor faces leftward, remove the frame cover mounting plate from the end base and loosen the belt clamp bolt from the hole of the end base.

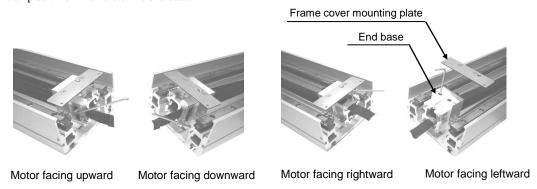


(3) Loose the bolt on the motor output shaft side of the coupling located inside, from the hole of the motor spacer. (For the 42 mm-lead product, this work is not necessary.)

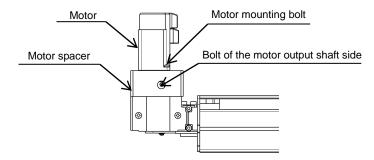


- (4) Remove the motor mounting bolt. Then remove the motor (21 mm-lead product with inertia damper, 42 mm-lead product with pulley and bearing) from the axis.
 If you want to replace the motor alone, go to step (12).
- (5) Remove the belt clamp proper from the motor block.
 - For 21 mm-lead product
 Loosen the motor spacer mounting screw, and remove the motor spacer from the motor block.
 Loosen the belt clamp mounting screw on the motor block side and remove the belt clamp proper from the motor block.

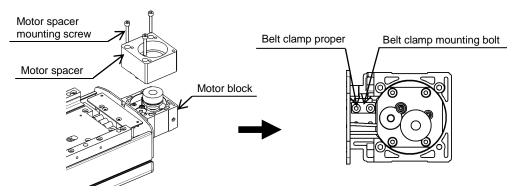

 For 42 mm-lead product
 Loosen the belt clamp mounting screw on the
 motor block side and remove the belt clamp
 proper from the motor block.




- (6) Remove the screw of the sheet metal fixing the belt of the belt clamp on the motor block side. Then remove the belt.
- (7) Pull the end of the belt and remove the belt from the axis.
- (8) Pull out the prepared belt from the motor block and mount it again on the belt clamp. Fix the belt so that it will be protruded one thread from the belt clamp.

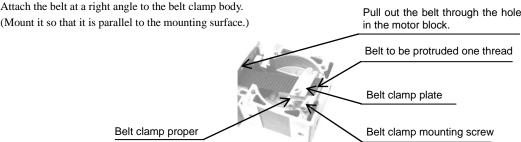

▲ CAUTION


The tension of the belt may cause the belt to come off from the belt clamp. Be sure to pull out 1 tooth of the belt from the belt clamp plate and fix it.

- (9) The belt clamp proper on the motor block side shall be mounted on the motor block. (Tapped hole outside the motor block outside for 21 mm-lead product, and tapped hole at the center of the motor block outside for 42 mm-lead product; See 7.7(5))
- (10) Route a new timing belt in the order of the slider block (motor side), inside he motor block, end block, slider block (end side) and end side belt clamp proper. It should be noted that routing of the motor varies according to the motor mounting direction and lead (See 7.8).
 - For 21 mm-lead product
 Loosen the motor bracket mounting screw and remove
 the motor bracket from the motor block. If the belt
 has been routed, mount the motor bracket on the
 motor block
 (See 7.8.1).

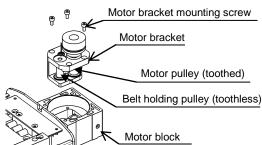

• For 42 mm-lead product

 
Turn back the timing belt within the motor block so that it can be applied to the pulley (See 7.8.2).




▲ CAUTION

Do not allow the belt to be twisted.

(11) For the 21 mm-lead product, mount the motor spacer on the motor block. (The 42 mm-lead product is not provided with a motor spacer).

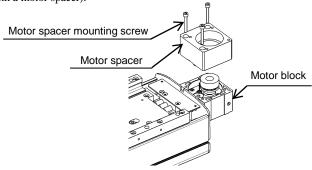

- (12) Connect the motor with the controller on the temporary basis. Then connect the teaching pendant to the controller, and return the axes to the origin.
- (13) The motor rotates. Taking care not to touch the rotating part, move the slider close to the origin. If the origin sensor has detected the slider, the motor starts the stop operation at the time of return to the origin.
- (14) After the motor has stopped (completion of return to origin), move the slider so that the distance between the slider and plate will be 42 mm.
 - Turn off the controller power and mount the motor on the motor block using the original screw.

 


(15) Tighten the motor mounting screws uniformly little by little so the motor will not be tilted.


The motor lead wire should be oriented toward the slider.

Tighten the coupling bolt of the 21mm lead product with the torque described below.


KBX-50F (200W motor specification): 1.5 to 1.9N·m

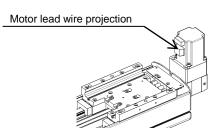

(16) Mount the motor on the motor block, and loosen four bearing clamping plate screws on the bottom of the motor block. Make sure that the bearing clamping plate rotates a little about the bearing. After that, uniformly retighten bearing clamping plate mounting screws having been loosened. Make sure that there is no misalignment between the motor mounting position and bearing clamping plate. (For the 21 mm-lead product, this work is not necessary).

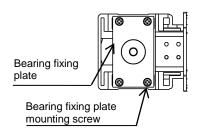


 (17) Adjust the meshing between the peak and valley of the end of the belt protruding from the belt clamp on the end block side, and bind them with a band.



(18) Route the hook of the spring balance through the portion where the timing belt has been turned back.

 Pull the timing belt with a force of 147 N (15 kgf). When the belt is kept pulled, tighten the belt clamp bolt



(19) Mount the cover.



- A new timing belt may be subjected to initial elongation.
 When the initial elongation occurs and the belt tension has been reduced, set the belt tension back to the specified level.
- When the belt has been re-tightened, the programmed position (teaching position) may be misaligned. If this has occurred, correct the program (teaching).

■7.8 Routing the timing belt


For the details of the motor block interior, see Section 7.7 (10).

Route the timing belt so that the belt tooth will touch the toothed pulley and the back of the belt will touch the toothless pulley.


Take care to make sure of the directions of the motor block, end block and slider block.


■7.8.1 Routing the timing belt for 21 mm-lead product

• Schematic view

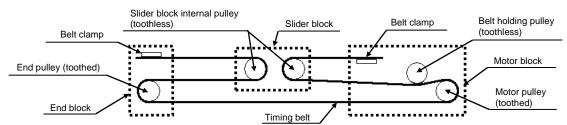


• Top side mounted motor axis

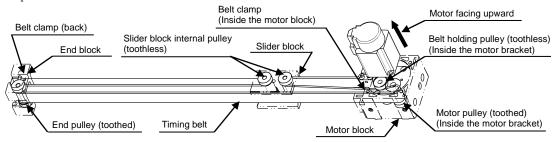

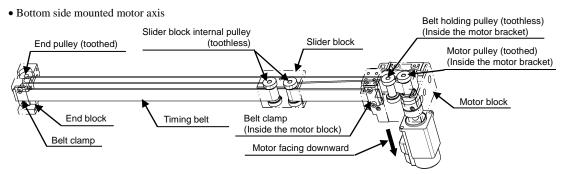


• Right side mounted motor axis Slider block internal pulley Belt clamp Belt holding pulley (toothless) (Inside the motor block) (toothless) (Inside the motor bracket) Belt clamp Motor block End block Timing belt Motor pulley (toothed) Slider block (Inside the motor bracket) End pulley (toothed) Motor facing rightward

• Left side mounted motor axis (The end side belt clamp is located inside the end base.)

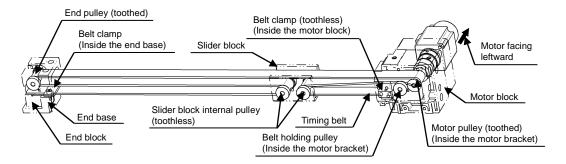


■7.8.2 Routing the timing belt for 42 mm-lead product


• Schematic view

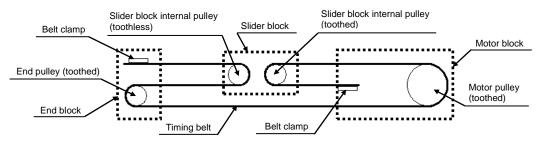


• Top side mounted motor axis

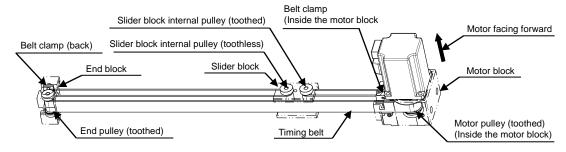


• Bottom side mounted motor axis

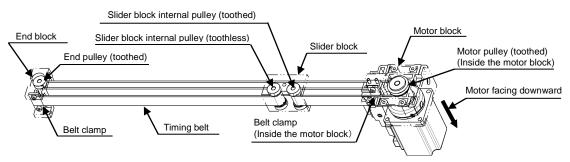


• Right side mounted motor axis

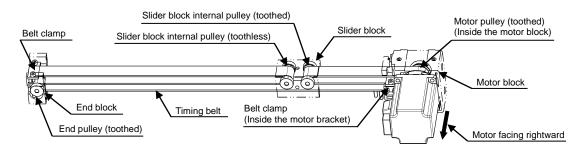

• Left side mounted motor axis (The end side belt clamp is located inside the end base.)

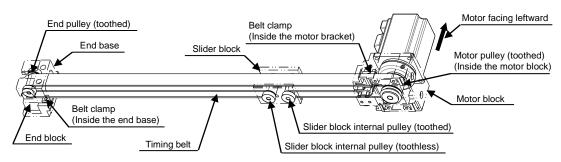


■7.9 Origin position adjustment

 

The distance between the origin sensor and motor block is "A".

Applicable axis	A
KBX-50F(G)-B*-M	103.5mm
KBX-50F(G)-B*-L	153.5mm

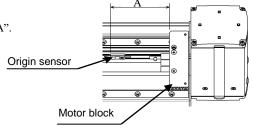

■7.10 Linear guide replacement

- If the linear guide needs to be replaced, contact our sales office closest to your company.
 - It must not be replaced by the customer.
- This replacement is performed for each axis. It should be noted that this replacement cannot be made inside the
 device or in the combined state.

■7.11 Bolt and screw tightening torque

For the tightening torque of bolts, etc., tighten the parts not described in the work procedure, etc. with the values in the table below.

Name	Screw size	Tightening torque (N·m)	Remarks
Hexagon socket head cap screw	M3	0.98	
	M4	2.94	
	M5	5.88	
	M6	8.82	
Pan head screw Countersunk head screw hexagon socket button head screw	M3	0.29	For fixing resin parts
	M3	0.49	
	M4	1.47	
	M5	2.94	

Chapter 8 Spare Parts

■8.1 Spare Parts

When a trouble has occurred to the robot proper and you have found it out at an earlier stage, you cannot repair it if you have no repair parts. Accordingly, you are recommended to keep spare parts on hand.

No.	Parts name	Remarks
1	Timing belt	Varies according to the stroke. Contact our Service Division.
3	AC servo motor (encoder: absolute)	With 21 mm-lead inertia damper (200 W)
4	AC servo motor (encoder: absolute)	With 42 mm-lead pulley (400 W)