

维护部件

■维护部件 (马达单元)

※ 仅限ECR时更换马达单元, ECG除外。

型号		适用機種
无刹車		
	EBS-04ME-MOTORUNIT-N	EBR-04ME
	EBS-04MR-MOTORUNIT-N	EBR-04MR/D/L
	EBS-05ME-MOTORUNIT-N	EBR-05ME
	EBS-05MR-MOTORUNIT-N	EBR-05MR/D/L
	EBS-08ME-MOTORUNIT-N	EBR-08ME
	EBS-08MR-MOTORUNIT-N	EBR-08MR/D/L
	有刹車	EBS-04ME-MOTORUNIT-B
EBS-04MR-MOTORUNIT-B		EBR-04MR/D/L
EBS-05ME-MOTORUNIT-B		EBR-05ME
EBS-05MR-MOTORUNIT-B		EBR-05MR/D/L
EBS-08ME-MOTORUNIT-B		EBR-08ME
EBS-08MR-MOTORUNIT-B		EBR-08MR/D/L

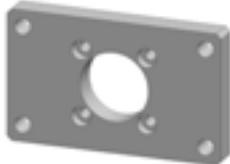
■维护部件/马达安装方向：右、下、左折回安装用(正时皮带)

型号		适用機種
		
	EBS-04MR-BELT	EBR-04※R/D/L
	EBS-05MR-BELT	EBR-05※R/D/L
	EBS-08MR-BELT	EBR-08※R/D/L

■维护部件 (润滑油加注嘴)

型号		适用機種
		
EBS-NOZZLE	全部機種	

■维护部件 (法兰)

型号		适用機種
		
EBR-04-FA	EBR-04※	
EBR-05-FA	EBR-05※	
EBR-08-FA	EBR-08※	