


Mould

Convey die from high shelf

Before

Small work place

Taking out work from high position

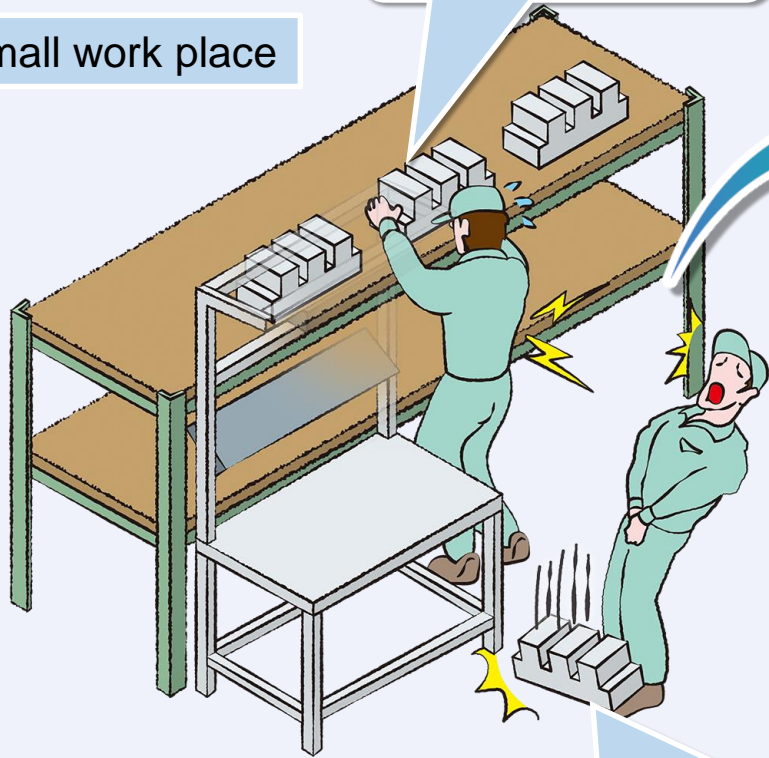


Injury by dropping work

Work weight 30kg (Metal Pattern)

Frequency 1 times/day

After

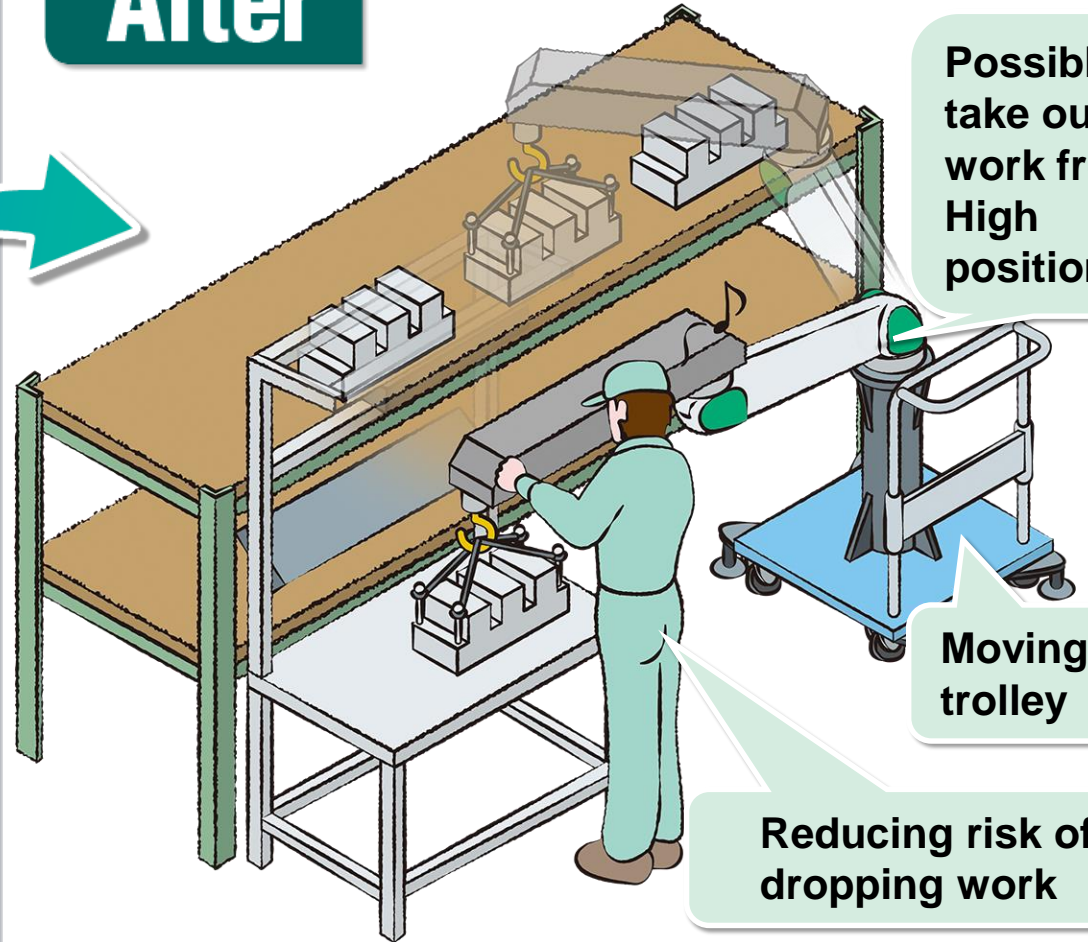

Possible to take out work from High position

Moving by trolley

Reducing risk of dropping work

Arm

Extension arm + $\phi 100$

Attachment

hook



Point

Safety

Moved by trolley

Approach from side