
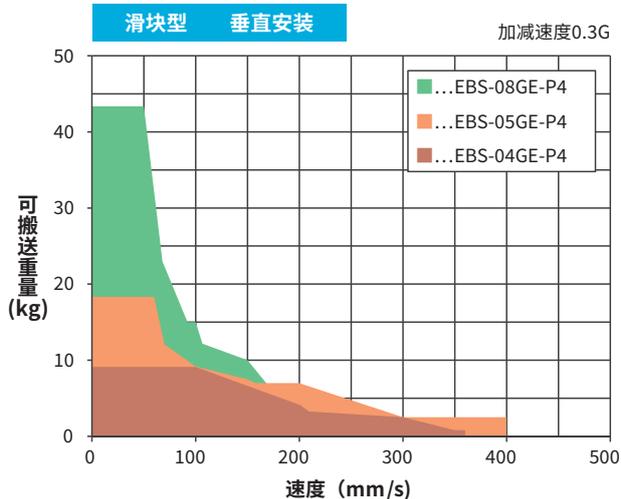


EBS-G-P4 Series

体系表

控制器	执行器型号		马达功率	马达安装方向	本体宽度 (mm)	导程 (mm)	最大可搬送重量 (kg)		最大按压力 (N)
							水平	垂直	
EBS-P4 (带马达)		EBS-04GE-06-P4	□35	直接安装	44	6	20.0	9.2	155
		EBS-04GE-12-P4				12	15.0	3.3	77
		EBS-04GR/D/L-06-P4				6	20.0	9.2	155
		EBS-04GR/D/L-12-P4				12	11.7	3.3	77
EBR-P4 (带马达)		EBS-05GE-02-P4	□42	直接安装	54	2	45.0	18.3	550
		EBS-05GE-05-P4				5	40.0	14.0	220
		EBS-05GE-10-P4				10	27.5	7.0	110
		EBS-05GE-20-P4				20	18.3	2.5	55
		EBS-05GR/D/L-02-P4		折回安装		2	45.0	18.3	550
		EBS-05GR/D/L-05-P4				5	40.0	10.0	220
		EBS-05GR/D/L-10-P4				10	27.5	3.3	110
		EBS-05GR/D/L-20-P4				20	18.3	0.8	55
ECG-A (控制器)		EBS-08GE-05-P4	□56	直接安装	82	5	80.0	43.3	965
		EBS-08GE-10-P4				10	70.0	28.3	482
		EBS-08GE-20-P4				20	30.0	3.3	241
		EBS-08GR/D/L-05-P4		折回安装		5	80.0	33.3	965
		EBS-08GR/D/L-10-P4				10	70.0	18.3	482
		EBS-08GR/D/L-20-P4				20	30.0	3.3	241
ECG系列		EBS-08GE-05-P4	□56	直接安装	82	5	80.0	43.3	965
		EBS-08GE-10-P4				10	70.0	28.3	482
		EBS-08GE-20-P4				20	30.0	3.3	241
		EBS-08GR/D/L-05-P4		折回安装		5	80.0	33.3	965
		EBS-08GR/D/L-10-P4				10	70.0	18.3	482
		EBS-08GR/D/L-20-P4				20	30.0	3.3	241

使用注意事项

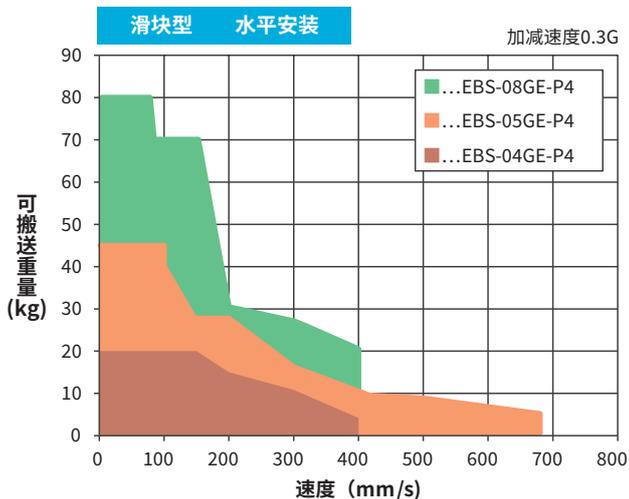

行程 (mm) 与最快速度 (mm/s)																					记载 页码					
50 mm	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050		1100				
260 mm/s																						4	EBS-P4 (带马达)			
400																						8				
200																										
320																										
100													95	80	70										14	EBS-P4 (带马达)
230													200	185												
400														370												
680																									18	ECG-A (控制器)
80														70												
200														185												
320																										
560																									24	使用 注意事项
120																		110	100							
200																										
400																				28						
100																										
200																										
320																										

※ 本数据为加减速速度0.3G时的值。
 ※ 壁挂安装时的可搬送重量与水平安装时相同。