
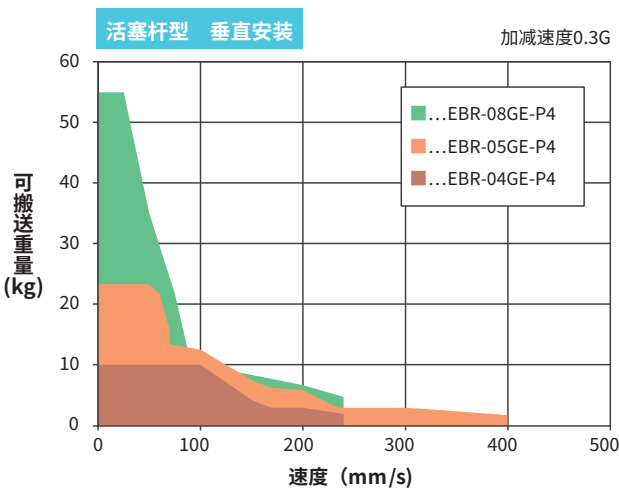


EBR-G-P4 Series

体系表

控制器	执行器型号		马达功率	马达安装方向	本体宽度 (mm)	导程 (mm)	最大可搬送重量 (kg)		最大按压力 (N)		
							水平	垂直			
  ECG 系列		EBR-04GE-06-P4	□35	直接安装	44	6	40.0	10.0	155		
		EBR-04GE-12-P4				12	12.5	2.9	77		
		EBR-04GR/D/L-06-P4				6	40.0	8.3	155		
		EBR-04GR/D/L-12-P4				12	12.5	2.9	77		
		EBR-05GE-02-P4	□42	直接安装	54	2	80.0	23.3	550		
		EBR-05GE-05-P4				5	60.0	14.0	220		
		EBR-05GE-10-P4				10	41.7	7.0	110		
		EBR-05GE-20-P4				20	11.7	2.9	55		
		EBR-05GR/D/L-02-P4		折回安装		2	80.0	23.3	550		
		EBR-05GR/D/L-05-P4				5	60.0	14.0	220		
		EBR-05GR/D/L-10-P4				10	38.3	6.7	110		
		EBR-05GR/D/L-20-P4				20	11.7	1.7	55		
		EBR-08GE-05-P4	□56	直接安装	82	5	80.0	55.0	965		
		EBR-08GE-10-P4				10	70.0	23.3	482		
		EBR-08GE-20-P4				20	35.0	10.0	241		
		EBR-08GR/D/L-05-P4		折回安装		5	80.0	55.0	965		
		EBR-08GR/D/L-10-P4				10	70.0	20.0	482		
		EBR-08GR/D/L-20-P4				20	35.0	8.3	241		

使用注意事项

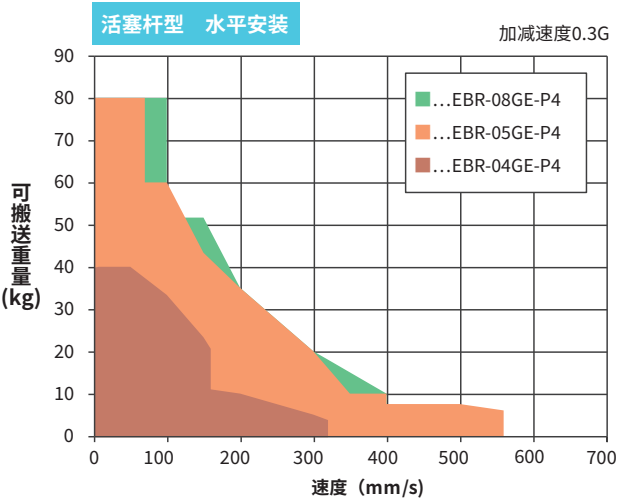

	行程 (mm) 与最快速度 (mm/s)														记载 页码	
	50 mm	100	150	200	250	300	350	400	450	500	550	600	650	700		
	160 mm/s															46
	320															
	160															50
	280															
	70															56
	240					210										
	400															
	560															
	70															
	200															60
	320															
	480															
	100														66	
	240															
	400															
	100														70	
	200															
	320															

EBR-P4
(带马达)

EBR-P4
(带马达)

ECG-A
(控制器)

使用
注意
事项

※ 本数据为电源电压DC24V、加减速速度0.3G时的值。
※ 壁挂安装时的可搬送重量与水平安装时相同。