

# Solder Paste Inspection Machine VP9000 Series

Future with
Flexible Inspection







# 1 User-friendly GUI

Information is easily accessible and operations are intuitive.

# Multiple Resolution Switch

The VP9000 can inspect a wide range of pads with only a reliance on one machine.

# 3 Adjustable Touch Screen

A large touch screen that comes equip with an angle adjustment function can accommodate everyone.

# What is a "Solder Paste Inspection Machine"?

Smart SMT Style


Solder paste inspection machines (SPI) can analyze and optimize printing conditions.



# Inspection Principles of the VP Series


#### Ring Light

An outline of solder paste is extracted through the use of a 360° ring light source that projects against inspection objects (solder paste). This method of inspection isolates solder paste on a Printed Circuit Board (PCB) and performs three-dimensional measurements to achieve more reliable inspections.

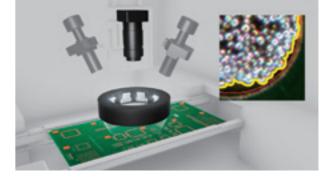


#### **3D Projectors**

A camera captures solder paste images with a stripe pattern light using 3D projectors that are positioned diagonally and faced downwards. Depending on the height of the solder paste, the stripe pattern light will shift according to the relative height. Through the principles of triangulation, the height is calculated based on the stripe pattern light shift.

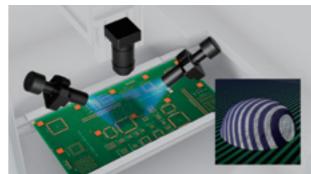

#### Z axis Auto-Focus Function

The amount of PCB warping is measured in each field of view and the inspection camera automatically compensates for the distance between the camera and the surface of the PCB. This function enables users to perform inspections without the influence of PCB warping.

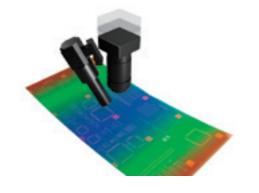



# User-friendly GUI Simple, Quick and Intuitive Operational Screen

#### | Settings Dashboard

Important inspection settings can be checked on the main screen.


1D & 2D code reading, PCB warp compensation, resolution switch etc.

#### Visualization of Solder Paste Shift

Solder paste shift can be viewed on the scatter chart .

#### | Visualization of Operational Status

Operational status can be checked and monitored by displaying important information on the main screen. (ex. judgement results, yield rates etc.)

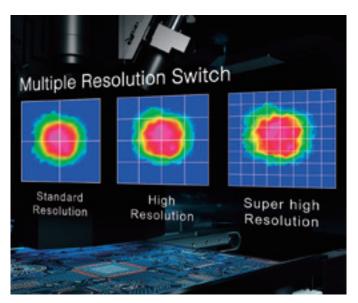

# Multiple Resolution Switch Three types of Inspection Resolutions

CKD's proprietary multiple inspection resolution switch function has been further developed. The most suitable resolutions for each part can be selected to achieve the best inspection time.

#### Standard Resolution


High speed inspection of large pads can be performed (ex. electrolytic capacitor).

#### High Resolution

Small pads can be inspected (ex. ceramic capacitor).

#### Super High Resolution

Fine pads can be inspected (ex. BGA).

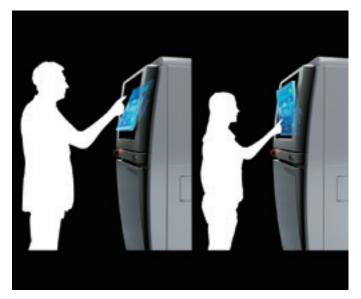

#### Adjustable Touch Screen

#### Adjustment Feature

The angle of the touch screen is adjustable up to 10°upwards and 25° downwards.

#### | Improved Operability

Operators can use the touch screen at their desired position without keyboard.

### Swift Creation of Inspection Program


Inspection program can be created from Gerber data in a minimum of 3 minutes. Part information is easily registered by using mount data and optional software.



#### Foreign Material Inspection


Foreign materials can be effortlessly detected while inspecting solder paste.






## PCB Warp Distribution Display

Warpage amounts can be measured, visualized and saved for future reference.

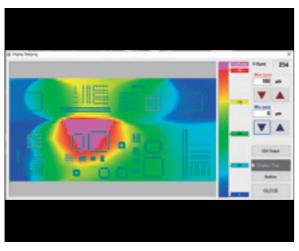

#### Glue Inspection (Optional)

Precise amounts of dispensed glue can be measured in 3D for judgement.

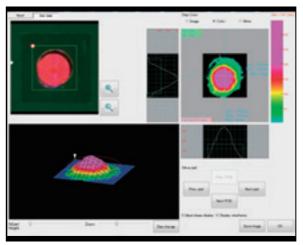

## **Upgraded Manual Verification Function**

Operators have the option to reconsider the reasons for defective judgements.



#### **SPC Function**

Various statistical process controls (ex. X-bar, Cp/Cpk) have the potential to improve the productivity of production lines. 6 sets of machines can be connected and monitored simultaneously by one VP Data Station PC.

#### Standard Specifications

Model		VP9000 (Standard Machine)			VP9000 (High-speed Machine)		
Inspection Method		Phase Shift Method					
PCB Size		(M)50x50mm~330x250mm					
		(L)50x50mm~510x460mm					
PCB Thickness		0.3~5.0mm					
Projection		Dual Projectors Single Projector					
Inspection Resolution		Digital Switching Method					
		25/12.5/8.5 μm	20/10/7μm	15/7 <b>.</b> 5/5µm	25/12.5/8.5µm	20/10/7μm	15/7 <b>.</b> 5/5μm
Inspection Speed (mm²/sec)	Standard Resolution	8900	5700	3200	9400	6000	3300
	High Resolution	5600	3500	1900	6000	3700	2000
	Super High Resolution	1900	1200	650	2000	1300	700
Accuracy (volume 3σ) *1		Within 2%			Within 3%		
PCB Warping Compensation		± 5mm					
Outline Dimensions		(M)724x970x1500mm					
		(L)904x1180x1600mm					
Power Supply		Single Phase AC200~230V 50~60Hz MAX 1KVA					
Pneumatic Supply		Not Required					
Weight		(M)460kg					
		(L)550kg					
UPS		Standard Equipment (only PC)					
Environmental Standard		RoHS					

\*1 When CKD sample board is used.

#### Optional

Feedback/Feedforward Data Station (connect up to 6 sets of machines) Transformer Keyboard Tray Loading Conveyor 1D & 2D Code Reading Ultrafine Resolution **CE** Compliance (Large machines only) (10, 8, 5µm) **Unloading Conveyor** Mount Data Conversion Software Glue Inspection ePM-SPI Software

#### **Outline View**



需出口本产品及其相关技术时,请务必注意防止将其用于与兵器、武器相关的用途中。

If the goods and/or their replicas, the technology and/or software found in this catalog are to be exported, law requires that the exporter makes sure that they will never be used for the development or manufacture of weapons for mass destruction.

# CKD Corporation

<Website> https://www.ckd.co.jp/

本社・工場 

〒485-8551 愛知県小牧市応時2-250 7485-8551 愛知県小牧市応時2-250 〒105-0013 東京都港区浜松町1-31-1 (文化放送メディアブラス 4階) 〒485-8551 愛知県小牧市応時2-250

TEL(0568)77-1111 FAX(0568)77-1123 TFI (0568)74-1316 FAX(0568)77-3412 TEL(03)5402-3626 FAX(03)5402-0121

自動機械中日本担当 自動機械西日本担当

〒532-0003 大阪府大阪市淀川区宮原4丁目2-10 (PMO EX新大阪6階)

TEL(0568)74-1316 FAX(0568)77-3412 TEL(06)6396-9622 FAX(06)6396-9623

Overseas Sales Dept. 2-250 Ouji, Komaki City, Aichi 485-8551, Japan Email auto-mc-os@ckd.co.jp

- ●出于改良的目的,本样本上记载的产品规格及外观可能会进行变更,恕不另行通知,敬请谅解。
- Specifications are subject to change without notice. © CKD Corporation 2024 All copy rights reserved.