

INSTRUCTION MANUAL

SPEED CONTROL VALVE WITH ADJUSTING DIAL

DSC—S

- Please read this instruction manual carefully before using this product, particularly the section describing safety.
- Retain this instruction manual with the product for further consultation whenever necessary.

Safety precautions

When designing and manufacturing a device using CKD products, the manufacturer is obligated to manufacture a safe product by confirming safety of the system comprising the following items:

- Device mechanism
- Pneumatic or water control circuit
- Electric control that controls the above

It is important to select, use, handle, and maintain the product appropriately to ensure that the CKD product is used safely.

Observe warnings and precautions to ensure device safety.

Check that device safety is ensured, and manufacture a safe device.



WARNIN

- 1. This product is designed and manufactured as a general industrial machine part. It must be handled by someone having sufficient knowledge and experience.**

- 2. Use this product within its specifications.**

This product cannot be used beyond its specifications. Additionally, the product must not be modified or machined.

This product is intended for use in general industrial devices and parts. Use beyond such conditions is not considered. Consult with CKD for details when using the product beyond the unique specification range, in the following conditions or environments. In any case, measures for safety shall be provided when the valve malfunctions.

- ① Use for special applications requiring safety including nuclear energy, railroad, aviation, ship, vehicle, medical equipment, equipment or applications coming into contact with beverage or food, amusement equipment, emergency shutoff circuits, press machine, brake circuits, or for safeguard.
- ② Use for applications where life or assets could be adversely affected, and special safety measures are required.

- 3. Observe corporate standards and regulations, etc., related to the safety of device design and control, etc.**

SO4414, JIS B 8370 (pneumatic system rules)

JFPS2008 (principles for pneumatic cylinder selection and use)

Including High Pressure Gas Maintenance Law, Occupational Safety and Sanitation Laws, other safety rules, standards and regulations, etc.

- 4. Do not handle, pipe, or remove devices before confirming safety.**

- ① Inspect and service the machine and devices after confirming safety of the entire system related to this product.
- ② Note that there may be hot or charged sections even after operation is stopped.
- ③ When inspecting or servicing the device, turn off the energy source (air supply or water supply), and turn off power to the facility. Release any compressed air from the system, and pay enough attention to possible water leakage and leakage of electricity.
- ④ When starting or restarting a machine or device that incorporates pneumatic components, make sure that system safety, such as pop-out prevention measures, is secured.

5. Observe warnings and cautions on the pages below to prevent accidents.

■The safety cautions are ranked as "DANGER", "WARNING" and "CAUTION" in this section.



DANGER

: When a dangerous situation may occur if handling is mistaken leading to fatal or serious injuries, or when there is a high degree of emergency to a warning.



WARNING

:When a dangerous situation may occur if handling is mistaken leading to fatal or serious injuries.



CAUTION

: When a dangerous situation may occur if handling is mistaken leading to minor injuries or physical damage.

Note that some items described as "CAUTION" may lead to serious results depending on the situation. In any case, important information that must be observed is explained.

Precautions with regard to guarantee

● **Guarantee period**

The guarantee period of our product shall be one (1) year after it is delivered to the place specified by the customer.

● **Guarantee coverage**

If any failure for which CKD CORPORATION is recognized to be responsible occurs within the above warranty period, a substitute or necessary replacement parts shall be provided free of charge, or the product shall be repaired free of charge at the plant of CKD CORPORATION.

However, the guarantee excludes following cases:

- ① Defects resulting from operation under conditions beyond those stated in the catalogue or specifications.
- ② Failure resulting from malfunction of the equipment and/or machine manufactured by other companies.
- ③ Failure resulting from wrong use of the product.
- ④ Failure resulting from modification or repairing that CKD CORPORATION is not involved in.
- ⑤ Failure resulting from causes that could not be foreseen by the technology available at the time of delivery.
- ⑥ Failure resulting from disaster that CKD is not responsible of.

Guarantee stated here covers only the delivered products. Any other damage resulting from failure of the delivered products is not covered by this guarantee.

● **Confirmation of product compatibility**

Our customer shall be responsible of confirming compatibility of our product used in our customer's system, machinery or device.


INDEX

DSC-S series

Speed control valve with adjusting dial

Manual No. SM-P00158-A

1. PRODUCT	
1.1 Specification	4
1.2 Flow characteristics	5
1.3 Internal structure and part list	6
1.4 Envelope dimensions and JIS symbol	7
1.5 Fundamental circuit diagram	8
2. SAFETY PRECAUTIONS FOR INSTALLATION AND REPLACEMENT	8
3. CAUTION	9
4. HOW TO ORDER	11

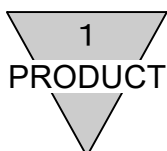

1. PRODUCT

1.1 Specification


Descriptions			DSC-S□-06		DSC-S□-08		DSC-S□-10		
Compatible tube O. D.		mm	φ 4	φ 6	φ 6	φ 8	φ 8	φ 10	φ 12
Working fluid			Compressed air						
Max. working pressure		MPa	1.0						
Min. working pressure		MPa	0.1						
Withstanding pressure		MPa	1.5						
Fluid temprerature		°C	5 to 60(there should be no freezing) (Note2)						
Ambient temperatur		°C	0 to 60(there should be no freezing)						
Needle control range			1 to 7 rotations						
Weight		g	24	18	30	31	52	57	60
Free flow	Flow L/min(ANR)		170	300	400	550	900	1100	1200
	Effecfive sectional area	mm ²	2.5	4.5	6	8	13.5	16.5	18
Controlled flow (Standard flow rate)	Flow L/min(ANR)		160	200	360	400	720	780	780
	Effecfive sectional area	mm ²	2.4	3	5	6	10.5	12	12
Controlled flow (Low flow rate)	Flow L/min(ANR)		60		130		270		
	Effecfive sectional area	mm ²	0.9		2		4		
Controlled flow (Fine flow rate)	Flow L/min(ANR)		13		-	-	-	-	-
	Effecfive sectional area	mm ²	0.2		-	-	-	-	-

Note1: The flow is the atmospheric pressure conversion value at 0.5MPa.


Note2: Freezing could occur by adiabatic expansion depended with air quality (dew point).

1.2 Flow characteristics


●DSC-S※-06-※

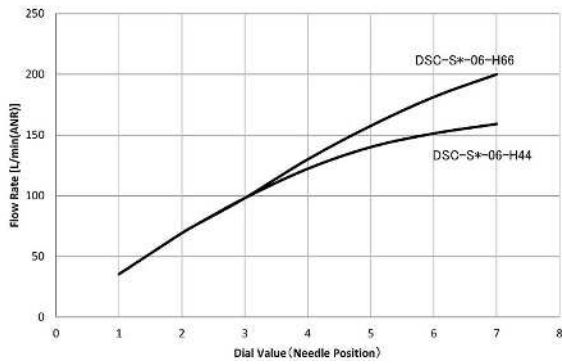


●DSC-S※-08-※

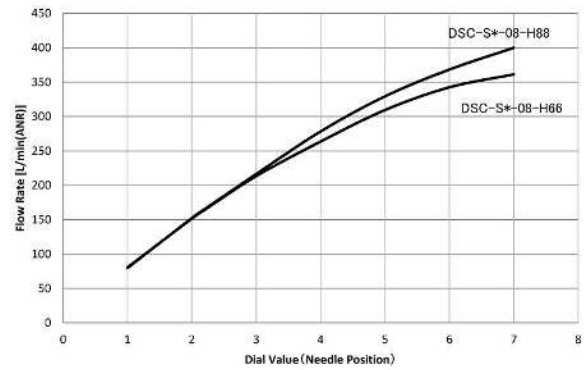


●DSC-S※-10-※

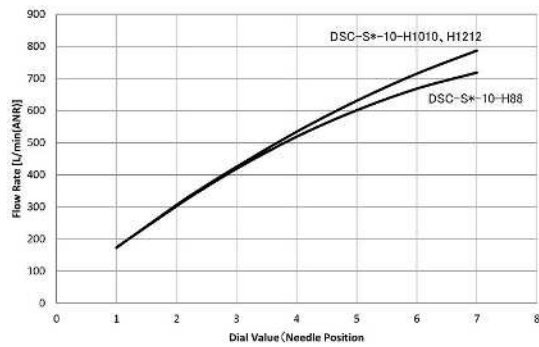


●DSC-S※-06-※-F

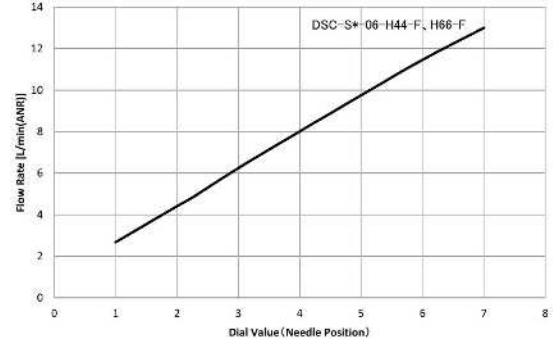


●DSC-S※-06-※-L

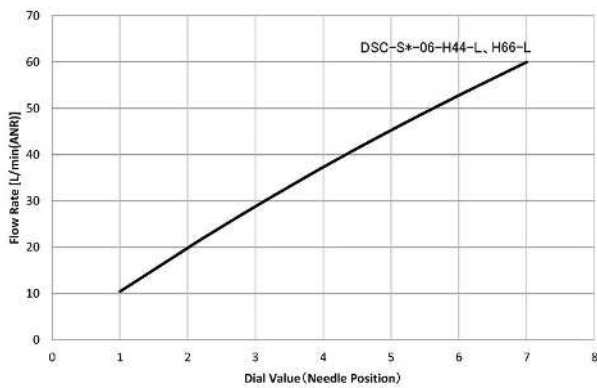


●DSC-S※-08-※-L

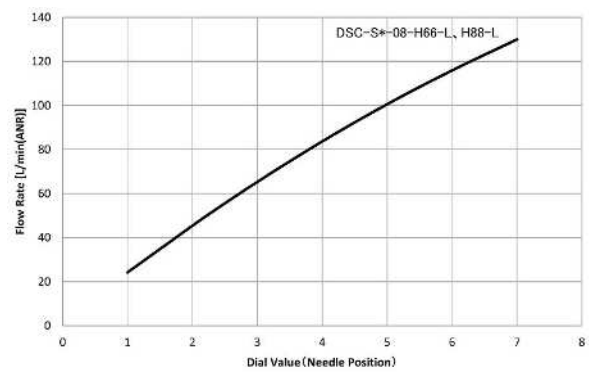

●DSC-S※-10-※-L

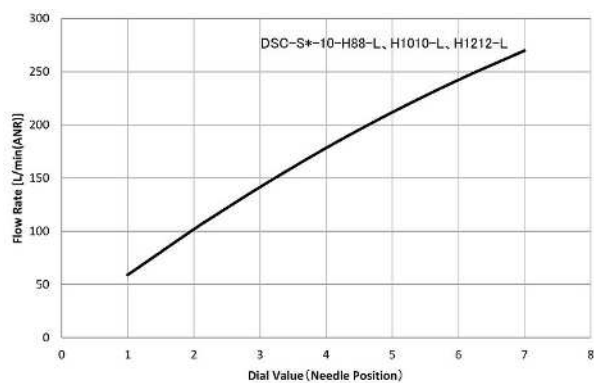





1.3 Internal structure and part list

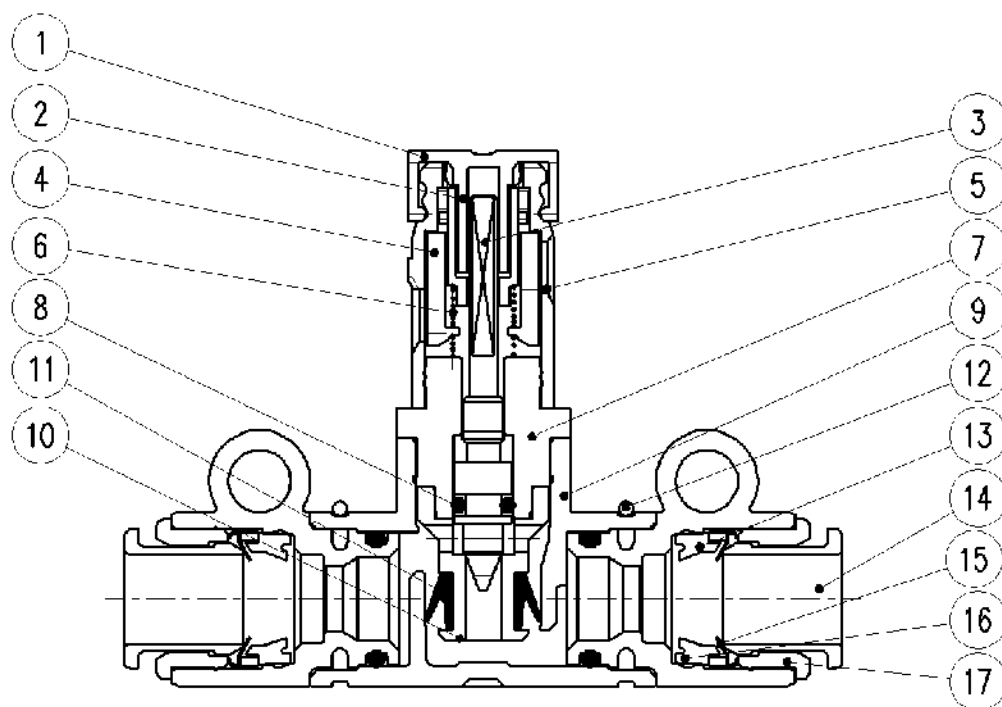

No.	Port name	Material	No.	Port name	Material
1	Knob	Polyavetal	10	Check bracket	Copper alloy
2	Slide gear	Polybutylene terephthalate	11	Check packing	Hydrogenated nitrile rubber
3	Needle	Stainless steel	12	Stopper ring	Stainless steel
4	Indication ring	Polybutylene terephthalate	13	Holder	Copper alloy or polyetherimide
5	Gear cover	Polybutylene terephthalate	14	Push ring	Polybutylene terephthalate
6	Spring	Stainless steel	15	Check holder	Polyethersulfone
7	Needle guide	Stainless steel	16	Packing	Nitrile rubber
8	O-ring	Nitrile rubber	17	Outer ring	Copper alloy
9	Body	Polybutylene terephthalate			

Note3: All the copper alloy parts valve electroless nickel plating.


1.4 Envelope dimensions and JIS symbol

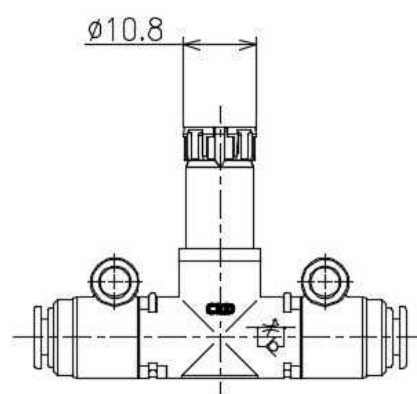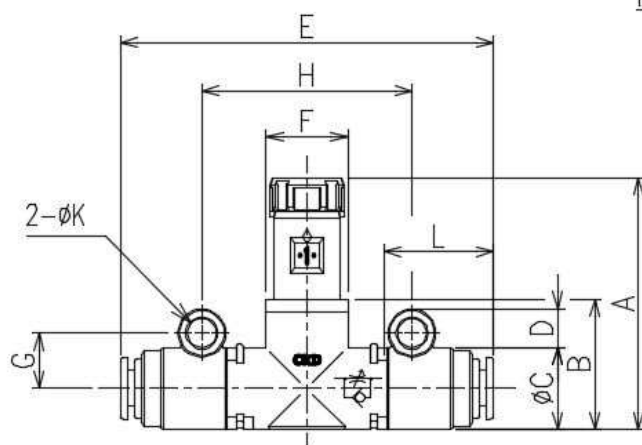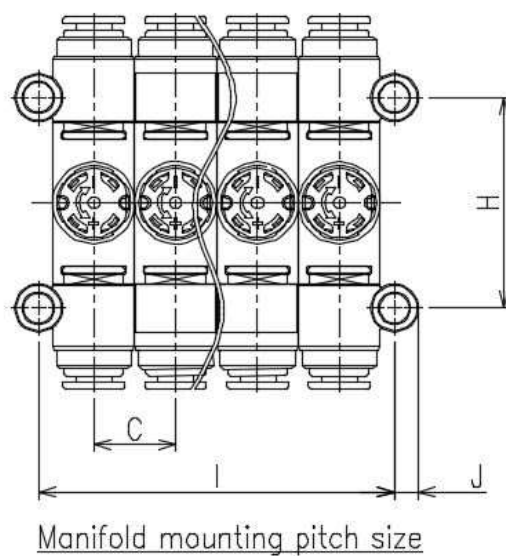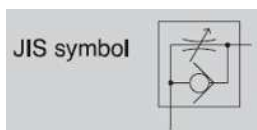

Model number	Applicable tube outer diameter	A		B	C	D	E	F	G	H	I	J	K (Mounting hole diameter)	L(Tube insertion length)
		Locked	Adjustment											
DSC-S□-06-H44-□	φ 4	36.8	38.3	19.1	12	5.6	55	12	8.1	30.8	12 × n+4.2	3.5	4.3	12.9
DSC-S□-06-H66-□	φ 6						49.4							13.7
DSC-S□-08-H66-□	φ 6	41.9	43.4	24.2	15	5.6	64	15	9.5	41	15 × n+4	3.6		18
DSC-S□-08-H88-□	φ 8						66.5							19
DSC-S□-10-H88-□	φ 8	48.4	49.9	30.7	20	5	71	19.4	11.5	47	20 × n+3			19
DSC-S□-10-H1010-□	φ 10						75							21
DSC-S□-10-H1212-□	φ 12						79				20.4 × n+3			22

1.5 Fundamental circuit diagram

The fundamental circuit diagram or speed controller is as per shown below.

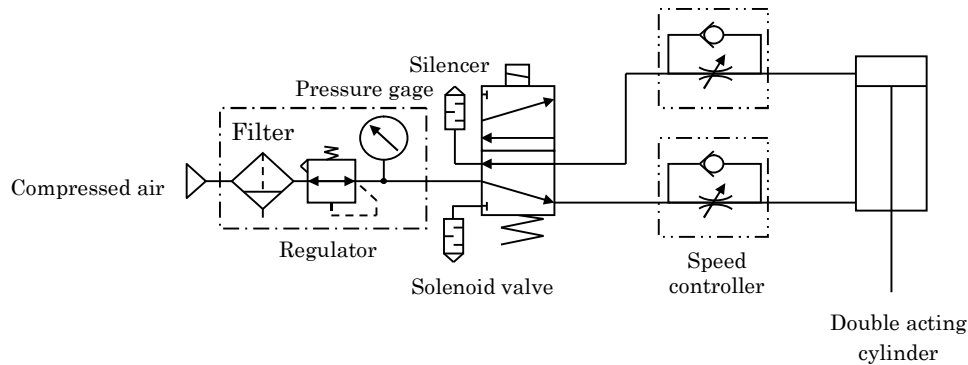

2. SAFETY PRECAUTIONS FOR INSTALLATION AND REPLACEMENT



WARNING :

- 1) Always use the product under the specified conditions.
- 2) Before starting the maintenance work, stop the air flow completely and make sure that no residual pressure remains inside the product.
- 3) When connecting a tube to the joint, insert the tube firmly until it makes contact with the tube end piece of the joint. Make sure that the tube will not come out of the joint before running the system.
- 4) When installing this product, always observe the flow direction. If the product is installed in the incorrect orientation, the speed cannot be controlled, causing the actuator to be projected.
- 5) To control the speed, gradually open the needle valve starting from the fully closed position. Turn the needle clockwise to close the valve; counter-clockwise to open.

3. CAUTION

Design & Selection

CAUTION

- This valve cannot be used as a stop valve that has no leakage.

Due to structure, a few leakage could occur.

- Care must be taken because the flow varies from the characteristics value on page 4 depending on the piping conditions before or after the product and temperature.

- Do not use this valve in circuits where ozone is generated intentionally.

Ozone resistance is sufficient for naturally generated ambient ozone. Packing deteriorates if ozone levels are high.

- This product is used with compressed air. Avoid use in other fluids.

- Use this product in accordance with the specifications range.

Consult with CKD when using the product outside specifications or for special applications.

- Use with exceeding the specifications range may result in insufficient performance, and safety cannot be secured.

- This product could not use in special applications and environment.

For example, use special applications including nuclear energy, railway, aircraft, marine vessel, vehicle, medical equipment, equipment, or applications coming into contact with beverage or food, amusement equipment, emergency shutoff circuits, press machine, brake circuits, or for safeguard.

- Confirm that the product will withstand the working environment.

- This product cannot be used in environments where functional obstacles could occur.

Special environments reaching high temperatures, having chemical atmospheres, or having chemicals, vibration, humidity, moisture, dripping, or gas are present. Environments where ozone is generated.

- Do not the product in the place that the product could directly contact with coolant or spatter, etc*.,.


- Understand compressed air features before designing a pneumatic circuit.

- The same functions as mechanical, hydraulic, and electrical methods cannot be anticipated if instantaneous service interruption and holding are required during an emergency stop.

- Pop-out, air discharge, or leakage due to air compression and expansion could occur.

- Install the pressure switch and “the shut-off valve” compressed air inlet side of a device.

- The pressure switch will disable operation until set pressure is reached. The shut-off valve will exhaust compressed air in the pneumatic pressure circuit, and will prevent accidents caused by operation of pneumatic components by residual pressure.

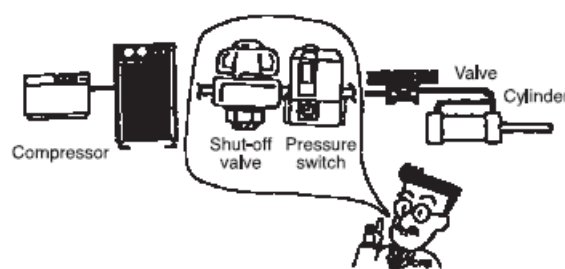

- Confirm that PTFE can be used. The sealant contains PTFE (polytetrafluoroethylene resin) powder. Check that this poses no problem during use.

- Indicate the maintenance conditions in the device's instruction manual.


- The product's function can drop markedly with working status, working environment, and maintenance, and can prevent safety from being attained. With correct maintenance, the product functions can be used to the fullest.

- Use in the ultra dry air is short service life depending on the deterioration of the rubber part.

- Do not continue pushing or give load to the push ring of push-in joint.

- There is a possibility that tube is able to grip.


- Note not to continue pushing the push ring, during transport with product assembly.

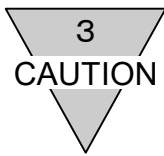

Installation & Adjustment

! CAUTION

- The needle lock is released when the knob is pulled, and is locked when pressed.
- The clockwise rotation makes the flow open and the counterclockwise rotation makes the flow close.

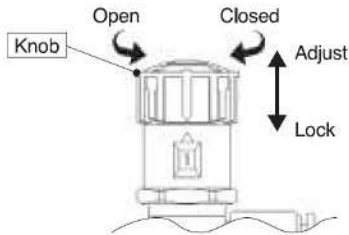

- After adjusting speed, press the knob and confirm that the needle is locked.
- Controllable range of needle is from 1 to 7 turning, operate with 0.05N·m less torque.
Turning the knob forcedly more than the above mentioned range may cause deviation of flow characteristics and trouble. Even when the needle is fully closed, the dial indication is not 0.
- Do not apply rotation torque to the dial display. This may result in distorted flow characteristics or malfunctions.
- Adjust speed by opening when the needle is nearly closed.
If the needle is open, the actuator could pop out suddenly and cause a hazard.
- Check flow direction with JIS symbol.
If installed in reverse, speed adjustment will not be applied and the actuator could pop out, creating a hazard.
- Final speed must be adjusted as necessary.
Speed differs greatly depending on product differences, working conditions, actuator differences, and temperature, so confirm the final as necessary.
- Install an air filter before the circuit.
The flow varies depending on clogging or foreign matters adhered in the orifice.
- Securely insert the tube until it contacts the joint's tube end, and check that it does not come off the joint.
- Do not take the product out of the packing bag until joint before piping.
 - It foreign matter enters into the pneumatic components internal, then a cause such as a failure and malfunction since a piping port.

- Do not take the product out of the packing bag until just before piping.

- It foreign matter enters into the pneumatic components internal, then a cause such as a failure and malfunction since a piping port.

- When connecting pipes, wrap sealing tape in the opposite direction from threads starting 2 mm margin from the end of piping threads.

- If sealing tape protrudes from pipe threads, it could be cut when screwed in. This could cause the tape to enter the pneumatic components and lead to faults.



- Handling push-in tube joint/tube

- Refer to Cautions of joint and tube, and "Pneumatic, Vacuum and Auxiliary Components" (No.CB-024S) for handling push-in joints and tubes.

- Always flush just before piping pneumatic component.

- Foreign matter that enters during piping must not enter pneumatic components.

- When supplying compressed air for the first time after connecting pipes, do not apply high pressure suddenly.

- Tube may come off and fly out, causing an accident.

- After connecting piping, check pipe connections for air leaks before supplying compressed air.

- Apply a leakage detection agent on pipe connections with a brush, and check for air leaks.

- When using the chuck holding mechanism, the chuck will be released creating a hazardous state.


- Ensure spaces around the pneumatic component for installation, removal, wiring, and piping work.

- Avoid use in applications involving continuous turning or swaying.

- Otherwise the joint could be damaged.

- Avoid use in places with high vibration or impact.

4. HOW TO ORDER

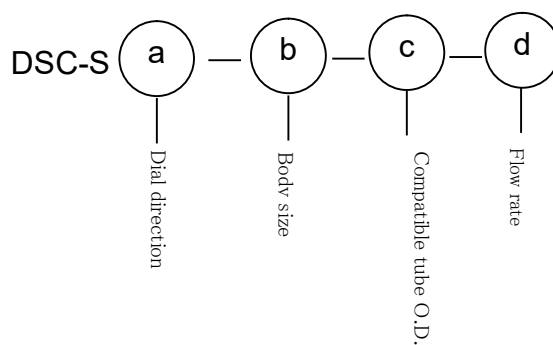

a: Dial direction	
1	Side
2	IN/OUT direction

b: Body size	
06	1/8 Thread equivalent
08	1/4 Thread equivalent
10	3/8 Thread equivalent

c: Compatible tube O.D.	
H44	φ 4
H66	φ 6
H88	φ 8
H1010	φ 10
H1212	φ 12

d: Flow rate	
Blank	Standard flow rate
L	Low flow rate
F	Fine flow rate