

## Environment-Resistant Guided Cylinder

STS·STL-G-HP1 Series

### INSTRUCTION MANUAL

SM-A10702-A/2



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

# PREFACE

Thank you for purchasing CKD's " **STS-STL-G-HP1 Series**" **Environment-Resistant Guided cylinder**.

This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, piping, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

# SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the fluid control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414, JIS B 8370, JFPS 2008 (the latest edition of each standard), the High Pressure Gas Safety Act, the Industrial Safety and Health Act, other safety rules, organization standards, relevant laws and regulations




In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:


## **Thoroughly read and understand this Instruction Manual before using the product.**

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 <b>DANGER</b>	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 <b>WARNING</b>	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 <b>CAUTION</b>	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.

	Indicates general precautions and tips on using the product.
---	--

## Precautions on Product Use

### WARNING

**The product must be handled by a qualified person who has extensive knowledge and experience.**

The product is designed and manufactured as a device or part for general industrial machinery.

**Use the product within the specifications.**

The product must not be used beyond its specifications. Also, the product must not be modified and additional work on the product must not be performed.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shut-off circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

**Do not handle the product or remove pipes and devices until confirming safety.**

- Inspect and service the machine and devices after confirming the safety of the entire system. Also, turn off the energy source (air supply or water supply) and power to the relevant facility. Release compressed air and fluid from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

## Precautions on Product Disposal

### CAUTION

**When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.**

# CONTENTS

<b>PREFACE</b> .....	<b>i</b>
<b>SAFETY INFORMATION</b> .....	<b>ii</b>
Precautions on Product Use .....	iii
Precautions on Product Disposal .....	iii
<b>CONTENTS</b> .....	<b>iv</b>
<b>1. PRODUCT OVERVIEW</b> .....	<b>1</b>
1.1 Model Number Indication.....	1
1.1.1 Product model number .....	1
1.1.2 How to order switch.....	2
1.2 Specifications.....	3
1.2.1 Product specifications .....	3
1.2.2 Switch specifications .....	4
<b>2. INSTALLATION</b> .....	<b>7</b>
2.1 Environment.....	7
2.2 Unpacking .....	8
2.3 Mounting .....	8
2.4 Piping .....	9
2.4.1 Piping joint .....	11
2.5 Wiring .....	12
<b>3. USAGE</b> .....	<b>13</b>
3.1 Using the Cylinder.....	13
3.2 Using the Switch .....	14
<b>4. MAINTENANCE AND INSPECTION</b> .....	<b>16</b>
4.1 Periodic Inspection.....	17
4.1.1 Inspection item .....	17
4.1.2 Maintenance of the product.....	17
4.1.3 Maintenance of the circuit .....	17
4.2 Disassembly method,Assembly method .....	18
<b>5. TROUBLESHOOTING</b> .....	<b>19</b>
5.1 Problems, Causes, and Solutions .....	19
5.1.1 Cylinder .....	19
5.1.2 Switch .....	20
<b>6. REFERENCE INFORMATION</b> .....	<b>21</b>
<b>7. WARRANTY PROVISIONS</b> .....	<b>22</b>
7.1 Warranty Conditions .....	22
7.2 Warranty Period .....	22

# 1. PRODUCT OVERVIEW

## 1.1 Model Number Indication

### 1.1.1 Product model number

#### ■ Example of model number indication : STS-STL-G-HP1 series

##### ● Short Stroke

Without switch (built-in magnet for switch)

STS - M G - 20 - 25 - F - HP1

With switch (built-in magnet for switch)

STS - M G - 20 - 25 - T2H - R - F - HP1

##### ● Long stroke

Without switch (built-in magnet for switch)

STL - M G - 20 - 50 - F - HP1

With switch (built-in magnet for switch)

STL - M G - 20 - 50 - T2H - R - F - HP1

A Bearing

B Model No.

C Bore size

D Port thread

E Stroke

■ Custom Stroke

Available in 5 mm increments. However, the total length is the same as that of the next longer standard Stroke.

F Switch model No.

\*1 \*2 \*4

For the 2-color display, T1H/V, T8H/V and AC magnetic field proof switches for ø40 and over, insert "L1" with "-" between Items B and C.  
Example) STS-MG-L1-63-50-T2YH3-D-F-HP1  
For ø 80 and ø100, the 2-color display, T1H/V, T8H/V and strong magnetic field proof switches cannot be retrofitted on a previously purchased standard product. In this case, order the model No. with "L1" inserted between Items B and C.  
Example) STS-MG-L1-80-50-F-HP1

G Switch quantity

H Option

Code	Description				
<b>A Bearing</b>					
M	Metal bush bearing				
B	Ball bearing				
<b>B Model No.</b>					
G	Rubber scraper				
<b>C Bore size (mm)</b>					
8	ø8				
12	ø12				
16	ø16				
20	ø20				
25	ø25				
32	ø32				
40	ø40				
50	ø50				
63	ø63				
80	ø80				
100	ø100				
<b>D Port thread</b>					
Blank	M5 (ø8 to ø25) Rc thread (ø32 to ø100)				
NN	NPT thread (ø32 and over) (made to order)				
GN	G thread (ø32 and over) (made to order)				
<b>E Stroke (mm)</b>					
Refer to the Stroke table on the following page.					
<b>F Switch model No.</b>					
Lead wire Straight	Lead wire L-shaped	Switch Contact	Voltage AC/DC	Indicator	Lead wire
T0H*	T0V*	Proximity	● ●	1-color display	2-wire
T5H*	T5V*		● ●	No indicator lamp	
T8H*	T8V*		● ●	1-color display	2-wire
T1H*	T1V*		● ●		
T2H*	T2V*		● ●		
T3H*	T3V*		● ●	1-color display (hard resistant lead wire)	2-wire
T2HR3	T2VR3		● ●		
T3PH*	T3PV*		● ●	1-color display (hard wire)	3-wire
T2WH*	T2WV*		● ●	2-color display	2-wire
T2YH*	T2YV*		● ●		
T3WH*	T3WV*	● ●			
T3YH*	T3YV*	● ●	2-color display for AC magnetic field	2-wire	
T2YD*	—	● ●			
T2YDT*	—	● ●			
T2JH*	T2JV*	● ●	1-color display/delay	2-wire	
<b>* Lead wire length</b>					
Blank	1 m (standard)				
3	3 m (option)				
5	5 m (option)				
<b>G Switch quantity</b>					
R	1 on rod side				
H	1 on head side				
D	2				
T	3				
<b>H Option</b>					
F	End plate material (Steel)				
M	Corrosion proof (piston rod, guide rod SUS) (made-to-order product)				
M1	Corrosion proof (M+ end plate SUS) (made-to-order product)				
P6 *3	Copper and PTFE free specification (made to order)				

Note 1: Switches other than "(F) switch model No." are also available. (Made to order)  
For details, refer to "Pneumatic Cylinders II" (No. CB-030SA).

Note 2: T8H/V switch cannot be installed on ø8 to ø16.

Note 3: ø8 to ø25 ball bearing B is copper and PTFE free as standard.

Note 4: Switches are shipped with the product. Contact CKD if assembling before shipment is necessary.

## ■ Stroke length

### Short Stroke STS

Bore size(mm)	Standard stroke length(mm)	Min.stroke length(mm)	Max.stroke length(mm)	Min. stroke with switch (mm)
φ8	10,20,30,40,50	5	50	5 With one or two switches
φ12				
φ16				
φ20	25,50			
φ25				
φ32				
φ40				
φ50				
φ63				
φ80	25,50,75,100		100	
φ100				

※ The custom stroke length is available in 5 mm increments.

However, the total dimensions are the same as the longer standard stroke length.

### Long Stroke STL

Bore size(mm)	Standard stroke length(mm)	Min.stroke length(mm)	Max.stroke length(mm)	Min. stroke with switch (mm)
φ8	50,75,100,125,150,175,200	50	200	50 With one or two switches
φ12				
φ16				
φ20	50,75,100,125,150, 175,200,225,250,275, 300,325,350,375,400	30	400	30 With one or two switches
φ25				
φ32				
φ40				
φ50				
φ63				
φ80	75,100,125,150, 175,200,225,250,275, 300,325,350,375,400	55	200	55 With one or two switches
φ100	75,100,125,150,175,200			

※ The custom stroke length is available in 5 mm increments.

However, the total dimensions are the same as the longer standard stroke length.

## 1.1.2 How to order switch

**SW - T0V**



Switch model No.

## 1.2 Specifications

### 1.2.1 Product specifications

Model	STS•STL-G-HP1											
Descriptions												
Bore size                      mm	φ8	φ12	φ16	φ20	φ25	φ32	φ40	φ50	φ63	φ80	φ100	
Actuation	Double acting											
Working fluid	Compressed air											
Max. working pressure    MPa	1.0											
Min. working pressure    MPa	0.25						0.2					
Proof pressure              MPa	1.6											
Ambient temperature      °C	-10 to 60 (no freezing)											
Port size	M5						Rc1/8		Rc1/4		Rc3/8	
Stroke tolerance            mm	$\begin{smallmatrix} +2.0 \\ 0 \end{smallmatrix}$											
Working piston speed      mm/s	50 to 500								50 to 300			
Cushion	With rubber cushion											
Lubrication	Not required											
Allowable absorbed energy   J	0.029	0.056	0.088	0.157	0.157	0.401	0.627	0.980	1.560	2.510	3.920	



## 1.2.2 Switch specifications

Descriptions	Reed 2-wire type						
	T0H/V		T5H/V		T8H/V		
Applications	For programmable controller, relay		For programmable controller,relay, IC circuit(without indicator), serial connection		For programmable controller, relay		
Load voltage	12/24 VDC	110 VAC	5/12/24VDC	110 VAC	12/24 VDC	110 VAC	220VAC
Load current	5mA to 50mA	7 mA to 20mA	50mA or less	20mA or less	5mA to 50mA	7mA to 20mA	7mA to 10mA
Current consumption	—						
Internal voltage drop	3V or less (For DC, when the load current is 30mA)		0.1V or less(Internal resistance 0.5 Ω or less.)		4V or less		
Indicator	Red LED (Lights up when turned on)		—		Red LED (Lights up when turned on)		
Leakage current	—						
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm <sup>2</sup> )				Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm <sup>2</sup> )		
Shock resistance	294m/s <sup>2</sup>						
Insulation resistance	20 MΩ or more with 500 VDC megger				100 MΩ or more with 500 VDC megger		
Withstand voltage	No abnormality after applying 1000 VAC for one minute				No abnormality after applying 1500 VAC for one minute		
Ambient temperature	-10°C to 60°C						
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant						

Descriptions	Proximity 2-wire type			
	1-color display		1-color display off-delay	2-color display
	T1H/V	T2H/V	T2JH/V	T2YH/V
Applications	For programmable controller, relay,compact solenoid valve	Only for programmable controller		
Load voltage	85 to 265VAC	10 to 30VDC		
Load current	5mA to 100mA	5mA to 20mA		
Current consumption	—			
Internal voltage drop	10% or less of load voltage	4V or less		
Indicator	Red LED (Lights up when turned on)			Red/green LED (Lights up when turned on)
Leakage current	1 mA or less with 100 VAC, 2 mA or less with 200 VAC	1 mA or less		
Lead wire	Standard is 1 m (Oil- resistant vinyl cabtyre 2 core cord, 0.3 mm <sup>2</sup> )	Standard is 1 m (Oil- resistant vinyl cabtyre 2 core cord, 0.2 mm <sup>2</sup> )	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm <sup>2</sup> )	
Shock resistance	980m/s <sup>2</sup>			
Insulation resistance	100 MΩ or more with 500 VDC megger	20 MΩ or more with 500 VDC megger	100 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1500 VAC for one minute	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C			
Degree of protection	IP 67 (IEC standard). JIS C 0920 (watertight). oil-resistant			

Descriptions	Proximity 3-wire type		
	1-color display	1-color display (PNP output)(made to order)	2-color display
	T3H/V	T3PH/V	T3YH/V
Applications	For programmable controller, relay		
Output method	NPN	PNP	NPN
Power supply voltage	10 to 28VDC		
Load voltage	30VDC or less		
Load current	100mA or less		50mA or less
Current consumption	10 mA or less at 24 VDC	10 mA or less at 24 VDC	10 mA or less at 24 VDC
Internal voltage drop	0.5V or less		
Indicator	Red LED (Lights up when turned on)	Yellow LED (Lights up when turned on)	Red/green LED (Lights up when turned on)
Leakage current	10 $\mu$ A or less		
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm <sup>2</sup> )		Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.3 mm <sup>2</sup> )
Shock resistance	980m/s <sup>2</sup>		
Insulation resistance	20 M $\Omega$ or more with 500 VDC megger		100 M $\Omega$ or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C		
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant		

Descriptions	Proximity 2-wire type	
	2-color display for AC magnetic field	
	T2YD	T2YDT
Applications	Only for programmable controller	
Load voltage	24VDC $\pm$ 10%	
Load current	5mA to 20mA	
Internal voltage drop	6V or less	
Indicator	Red/green LED (Lights up when turned on)	
Leakage current	1.0mA or less	
Output delay time (Delay ON, delay OFF)	60ms or less	
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.5 mm <sup>2</sup> )	Standard is 1 m (Flame-resistant vinyl cabtyre 2 core cord, 0.5 mm <sup>2</sup> )
Shock resistance	980m/s <sup>2</sup>	
Insulation resistance	100 M $\Omega$ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 2,3-wire type	
	T2WH/V	T3WH/V
Applications	Only for programmable controller	For programmable controller, relay
Power supply voltage	—	10 to 28VDC
Load voltage	24VDC±10%	30VDC or less
Load current	5 mA to 20 mA	50 mA or less
Current consumption	—	10 mA or less at 24 VDC
Internal voltage drop	4 V or less	0.5V or less
Output delay time (Delay ON, delay OFF)	—	—
Indicator	Red/green LED(Lights up when turned on)	
Leakage current	1 mA or less	10μA or less
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm <sup>2</sup> )	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm <sup>2</sup> )
Shock resistance	980m/s <sup>2</sup>	
Insulation resistance	20 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 2-wire type	
	T2HR3,T2VR3(Bend resist lead wire)	
Applications	Only for programmable controller	
Power supply voltage	—	
Load voltage	10 to 30VDC	
Load current	5mA to 20mA	
Current consumption	—	
Internal voltage drop	4V or less	
Indicator	Red LED (Lights up when turned on)	
Leakage current	1mA or less	
Lead wire	Standard is 3m (Elasticity, oilresistantvinyl cabtyre cable2-conductor 0.2 mm <sup>2</sup> )	
Shock resistance	980m/s <sup>2</sup>	
Insulation resistance	20 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

## 2. INSTALLATION

### 2.1 Environment


#### CAUTION

**When using the product in a cutting, casting, or welding plant, install a cover to prevent foreign matters such as cutting fluid, chips, powder, and dust from entering.**

**Do not use the equipment in the following environments.**

- Where cutting oil can splash onto the product (abrasives and polishing powder in the oil can abrade the sliding section)
- Where organic solvents, chemicals, acids, alkalis, and kerosene are present
- Where water can splash onto the product

- Use the product within the following ambient temperature range.  
–10°C to 60°C (no freezing)
- For compressed air, use clean and dry air that has been passed through an air filter. Use an air filter in the circuit and be careful with the filtration rate (a filter that removes particles exceeding 5 µm is desirable), flow rate, and mounting position (install the filter near the directional control valve).

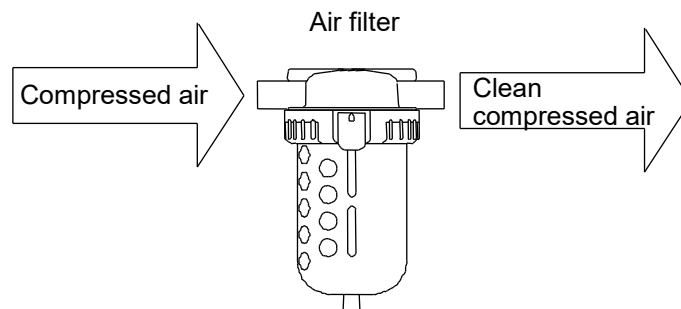

## 2.2 Unpacking

---

- Check that the model number ordered and the model number indicated on the product are the same.
- Check the exterior of the product for any damage.
- When storing the product, take proper measures to prevent foreign matters from entering the cylinder.

## 2.3 Mounting

---

- The mounting method of cylinder and switch are the same as the STS,STL standard type. For details, refer to the STS,STL standard type instruction manual described in Section 6 "Reference information".


## 2.4 Piping

### WARNING

**Insert the tube into the fitting until it firmly rests on the tube end and make sure that the tube does not come off before use.**




- Use pipes that are made of corrosion-resistant materials after the filter such as zinc-plated pipes, nylon tubes, and rubber tubes.
- Use pipes with an effective cross-sectional area that allows the cylinder to achieve the predetermined piston speed.
- Install the filter for removing rust, foreign matters, and drainage from the piping as close as possible to the solenoid valve.
- Observe the effective thread length for the gas pipes.
- In addition, chamfer the threaded end of the pipes by about a 1/2 pitch.

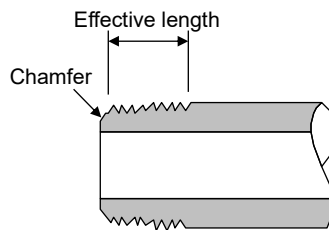

### ■ Pipe cleaning

Before piping, blow air into the pipes to clean the interior and to remove cutting chips and foreign matters.

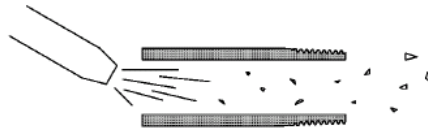

## ■ Seal material


Use a seal tape or a seal material to stop leakage from piping.

Apply a seal tape or seal material to the screw threads leaving two or more threads at the pipe end uncovered or uncoated. If the pipe end is fully covered or coated, a shred of seal tape or residue of seal material may enter inside of the pipes or device and cause a failure.

When using a seal tape, wind it around the screw threads in the direction opposite from the screw threads and press it down with your fingers to attach it firmly.


When using a liquid seal material, be careful not to apply it to resin parts. The resin parts can become damaged and this may lead to a failure or malfunction.

Also, do not apply seal material to the internal threads.

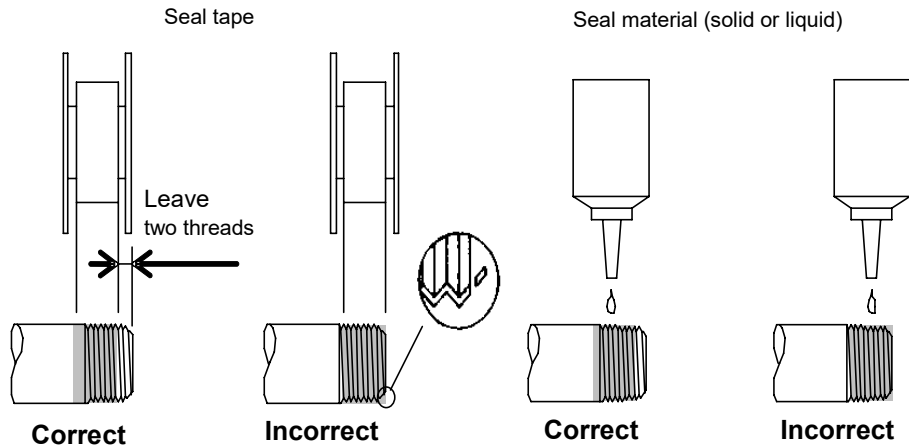

## 2.4.1 Piping joint

Be sure to attach a speed controller during piping before use. The available fittings are as below.  
 $\phi 80$  does not allow side piping such as shown in The figure below.

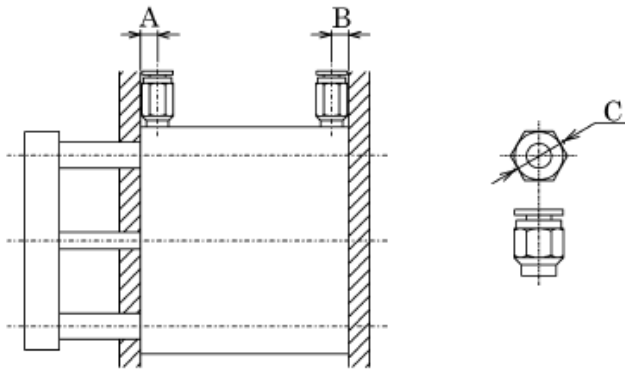

Descriptions Bore size(mm)	Port size	Port position		Applicable fittings	Fitting O.D
		A	B		$\phi C$
$\phi 8$	M5	11	14.5	SC3W-M5-4 SC3W-M5-6	$\phi 12$ or less
$\phi 12$		7.5	14.5	GWS4-M5-S GWS4-M5 GWL4-M5	
$\phi 16$		7.5	17	GWL6-M5 GWS6-M5	
$\phi 20$		12	8	SC3W-M5-4 SC3W-M5-6	$\phi 15$ or less
$\phi 25$		12	9	GWS4-M5-S GWS4-M5 GWL4-M5 GWL6-M5	
$\phi 32$	Rc1/8	14	10.5	SC3W-6-4,6,8 GWS4-6 GWS6-6	$\phi 15$ or less
$\phi 40$		14.5	12	GWS8-6 GWL4-6 GWL6-6	
$\phi 50$	Rc1/4	16	12.5	SC3W-8-6,8,10 GWS4-8 GWS6-8	$\phi 21$ or less
$\phi 63$		17.5	17.5	GWS10-8 GWS12-8 GWL4 to 12-8	
$\phi 80$	Rc3/8	25	26	SC3W-10-8,10,12 GWS6-10 GWS8-10	$\phi 21$ or less
$\phi 100$		24	25.5	GWS10-10 GWL6 to 12-10	



## 2.5 Wiring

---

- The switch wiring method is the same as the STS,STL standard type.  
For details, refer to the STS,STL standard type instruction manual described in Section 6 "Reference information".

## 3. USAGE

### 3.1 Using the Cylinder

#### ■ Working pressure range

Use the cylinder within the following pressure range:

Model	Bore size (mm)	Pressure range (MPa)
STS-STL-G-HP1	φ8 to φ25	0.25 to 1.0
	φ32 to φ100	0.2 to 1.0

#### ■ How to adjust the cushion


Although a rubber cushion is internally provided for this type of cylinder, it is advisable to install an additional external stopper when the kinetic energy is excessive. Tolerable kinetic energy is as the graphs below indicate.

Bore size(mm)	φ8	φ12	φ16	φ20	φ25	φ32	φ40	φ50	φ63	φ80	φ100
Allowable energy absorption (J)	0.029	0.056	0.088	0.157	0.157	0.401	0.627	0.980	1.560	2.510	3.920

#### ■ Adjustment of the piston speed

Mount a speed controller to adjust the piston speed.

< Basic circuit diagram >

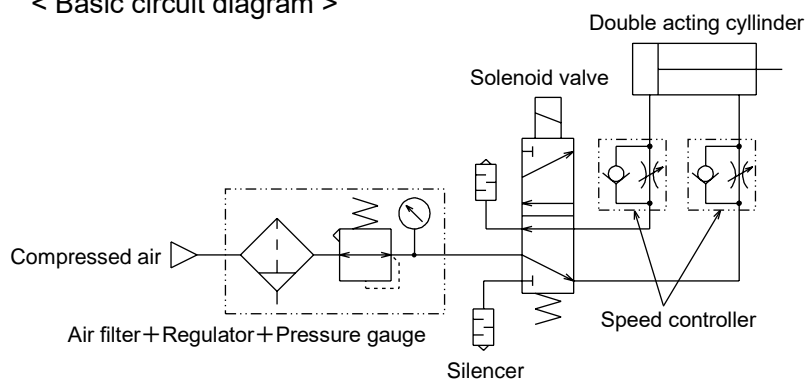


## 3.2 Using the Switch


### ■ Magnetic environment

Do not use the switch in a place where there is a strong magnetic field or large current (such as a large magnet or welding machine). If switch mounted cylinders are installed close to each other and in parallel or if magnetic substances are moving close to the cylinder, the magnetic forces may interfere with each other and affect the detection accuracy.

- The cylinder switch may malfunction if there is a magnetic object such as a steel plate installed nearby. Make sure that there is a distance of at least 10 mm between the magnetic object and the surface of the cylinder.

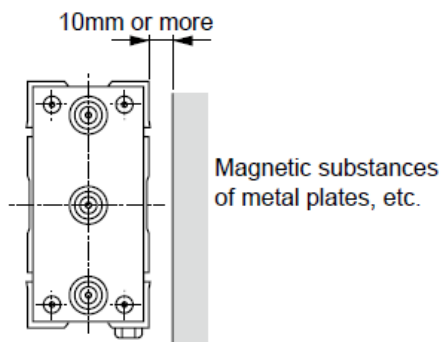

- The cylinder switch may malfunction if the cylinder units are placed adjacently. Make sure to provide the following distance between each unit.

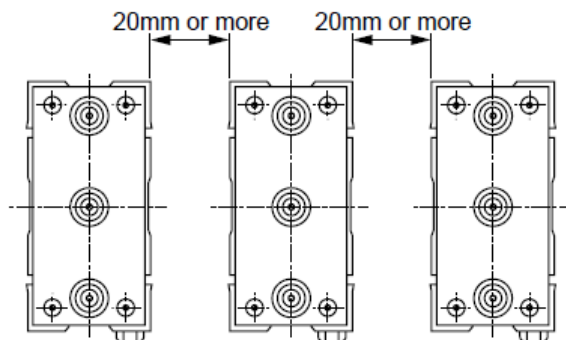

### ■ Wiring of lead wires

When wiring, be careful not to apply bending stress and tension repeatedly to lead wires.  
For movable sections, use wiring material with the same level of bending resistance as the robot wire.

### ■ Ambient temperature

Do not use the switch in a high temperature environment (60°C or more).  
Using the switch in a high temperature environment may affect its performance due to the temperature characteristics of magnetic parts and electronic parts.

### ■ Intermediate position detection

When the switch is operated at an intermediate position in the length of the stroke, the relay will not respond if the piston speed is too high.  
If the operation time of the relay is 20 ms, keep the piston speed at 500 mm/s or less.

### ■ Shock

Do not subject the product to strong vibrations and shocks when transporting the cylinder and mounting and adjusting the switch.

## 4. MAINTENANCE AND INSPECTION

### WARNING

**Do not touch electrical wiring connections (bare live parts) of cylinders equipped with switches, and other such cylinders.**

**Do not touch live parts with bare hands.**

An electric shock may occur.

**Turn off the power, release the residual pressure and make sure that there is no residual pressure before disassembling or inspecting the cylinders.**

### CAUTION

**Plan and perform daily and periodic inspections so that maintenance can be managed properly.**

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunction) or accidents.

## 4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection once or twice a year.

### 4.1.1 Inspection item

- Actuation state
- Change in the piston speed and cycle time
- External and internal leakages
- Damage and deformation of the piston rod
- Stroke abnormality


Check the items above and refer to "5. TROUBLESHOOTING" to correct any abnormality found. If there are loose threaded connections, tighten them.

### 4.1.2 Maintenance of the product

This cylinder does not require lubrication.

### 4.1.3 Maintenance of the circuit

- Discharge the drainage accumulated in the air filter periodically before it exceeds the specified line.
- Since foreign matters such as carbide (carbon or tar substance) from the compressor oil may contaminate the circuit and cause an operation fault of the solenoid valve or the cylinder, be careful when performing maintenance or inspection of the compressor.

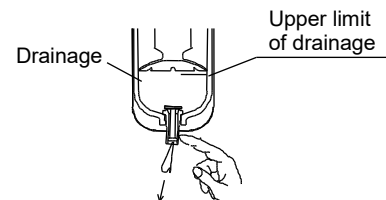

## 4.2 Disassembly method, Assembly method

If any failure occurs such as air leakage, disassemble the product, referring to the internal structural diagram and instruction manual of STS/STL (standard), then exchange the parts in the consumable parts list.



- Remove piston rod and rod metal after removing C type snap ring for the purpose of disassembly.
- Use appropriate pliers (C type snap ring mounting tool) to install and remove rod metal. Even in cases when appropriate pliers (C type snap ring mounting tool) are used, be careful as the snap ring may pop out at the tip of the pliers (C type snap ring mounting tool) and cause physical or equipment damage.
- The end plate and guide rod cannot be disassembled. Forcibly disassembling may cause damage or malfunction.
- Follow reverse steps of disassembling during the process of assembling after cleaning parts. Carefully avoid giving damage to packings to prevent malfunction or air leakage.
- When mounting the unit, be sure that the unit fits securely into the C type snap ring groove and confirm that each packing is installed in the correct direction.

### Consumable parts list

#### ●STS-MG-HP1·STL-MG-HP1 (rubber scraper)

Bore size (mm)	Kit no.	Repair parts
φ8	STS-MG-8K-HP1	Metal gasket Rod packing Cushion rubber Piston packing O-ring Wear ring Scraper (for piston rod) Scraper (for guide) Lub-keeper (for piston rod) Lub-keeper (for guide)
φ12	STS-MG-12K-HP1	
φ16	STS-MG-16K-HP1	
φ20	STS-MG-20K-HP1	
φ25	STS-MG-25K-HP1	
φ32	STS-MG-32K-HP1	
φ40	STS-MG-40K-HP1	
φ50	STS-MG-50K-HP1	
φ63	STS-MG-63K-HP1	
φ80	STS-MG-80K-HP1	
φ100	STS-MG-100K-HP1	

#### ●STS-BG-HP1·STL-BG-HP1 (rubber scraper)

Bore size (mm)	Kit no.	Repair parts
φ8	STS-BG-8K-HP1	Metal gasket Rod packing Cushion rubber Piston packing O-ring Wear ring Scraper (for piston rod) Scraper (for guide) Lub-keeper (for piston rod) Lub-keeper (for guide)
φ12	STS-BG-12K-HP1	
φ16	STS-BG-16K-HP1	
φ20	STS-BG-20K-HP1	
φ25	STS-BG-25K-HP1	
φ32	STS-BG-32K-HP1	
φ40	STS-BG-40K-HP1	
φ50	STS-BG-50K-HP1	
φ63	STS-BG-63K-HP1	
φ80	STS-BG-80K-HP1	
φ100	STS-BG-100K-HP1	

## 5. TROUBLESHOOTING

### 5.1 Problems, Causes, and Solutions

If the product does not operate properly, check the table below for a possible solution.

#### 5.1.1 Cylinder

Problem	Cause	Solution
Does not operate.	No pressure or insufficient pressure is applied.	Secure sufficient pressure.
	No signal is input to directional control valve.	Repair the control circuit.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Piston packing is damaged.	Replace the packing.
Does not operate smoothly.	Speed is lower than minimum working piston speed.	Mitigate load fluctuation.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.
	Load is too large.	Increase the pressure. Enlarge the bore size.
	Speed control valve has meter-in circuit.	Change the mounting direction of the speed control valve.
Damaged or deformed.	Force of shock due to high-speed actuation is excessive.	Decrease the speed. Lighten the load. Install a more effective cushion mechanism (external cushion mechanism).
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.



## 5.1.2 Switch

Problem	Cause	Solution
Switch turns on but indicator does not blink.	Contact is welded.	Replace the switch.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Indicator is damaged.	Replace the switch.
	External signal is faulty.	Check the external circuit.
Switch does not turn on.	Cables are disconnected.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Voltage is wrong.	Use specified voltage.
	Switch is not mounted in right place.	Mount the switch in right place.
	Switch is not positioned correctly.	Position and tighten the switch correctly.
	Switch is facing opposite direction.	Mount the switch so that it faces the correct direction.
	Load (relay) cannot respond for intermediate position detection.	Lower the speed. Replace the relay with one recommended by CKD.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
Switch does not turn off.	Piston is not moving.	Move the piston.
	Contact is welded.	Replace the switch.
	Rating of relay is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Ambient temperature is too high or too low.	Use the switch at an ambient temperature of $-10^{\circ}\text{C}$ to $60^{\circ}\text{C}$ .
	Magnetic field is nearby.	Install a magnetic shield.
	External signal is faulty.	Check the external circuit.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

## 6. REFERENCE INFORMATION

- STS,STL standard type instruction manual No....SM-193327-A  
The mounting method of cylinder and switch, switch wiring method, disassembly and assembly method are the same as the STS,STL standard type. So please also confirm the above STS,STL standard type instruction manual.

## 7. WARRANTY PROVISIONS

### 7.1 Warranty Conditions

#### ■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

#### ■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

#### ■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

### 7.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.