

Environment-Resistant Round Shaped Cylinder CMK2-G-HP1 Series

INSTRUCTION MANUAL

SM-A12050-A/3



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

PREFACE

Thank you for purchasing CKD's **"CMK2-G-HP1 Series" Environment-Resistant Round Shaped Cylinder**.

This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, piping, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the fluid control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414, JIS B 8370, JFPS 2008 (the latest edition of each standard), the High Pressure Gas Safety Act, the Industrial Safety and Health Act, other safety rules, organization standards, relevant laws and regulations




In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:


**Thoroughly read and understand this Instruction Manual
before using the product.**

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.

	Indicates general precautions and tips on using the product.
-------------------------------------------------------------------------------------	--------------------------------------------------------------

Precautions on Product Use

WARNING

The product must be handled by a qualified person who has extensive knowledge and experience.

The product is designed and manufactured as a device or part for general industrial machinery.

Use the product within the specifications.

The product must not be used beyond its specifications. Also, the product must not be modified and additional work on the product must not be performed.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shut-off circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

Do not handle the product or remove pipes and devices until confirming safety.

- Inspect and service the machine and devices after confirming the safety of the entire system. Also, turn off the energy source (air supply or water supply) and power to the relevant facility. Release compressed air and fluid from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

Precautions on Design and Selection

CAUTION

FP Series: Cautions

Bearings used in cylinders contain trace amounts of mineral oil. Within the product specifications range, it is processed so as not to discharge, but please carefully consider the installation location.

Precautions on Product Disposal

CAUTION

When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.

CONTENTS

PREFACE	i
SAFETY INFORMATION	ii
Precautions on Product Use.....	iii
Precautions on Design and Selection	iv
Precautions on Product Disposal	iv
CONTENTS	v
1. PRODUCT OVERVIEW	1
1.1 Model Number Indication.....	1
1.1.1 Product model number	1
1.1.2 How to order mounting brackets	4
1.1.3 How to order switch.....	5
1.2 Specifications.....	6
1.2.1 Product specifications	6
1.2.2 Switch specifications	7
2. INSTALLATION	10
2.1 Environment.....	10
2.2 Unpacking	10
2.3 Mounting	10
2.4 Piping	11
2.5 Wiring	12
3. USAGE	13
3.1 Using the Cylinder.....	13
3.1 Using the Switch	14
4. MAINTENANCE AND INSPECTION	15
4.1 Periodic Inspection.....	16
4.1.1 Inspection item	16
4.1.2 Maintenance of the product.....	16
4.1.3 Maintenance of the circuit	16
5. TROUBLESHOOTING	17
5.1 Problems, Causes, and Solutions	17
5.1.1 Cylinder	17
5.1.2 Switch	18
6. REFERENCE INFORMATION	19
7. WARRANTY PROVISIONS	20
7.1 Warranty Conditions	20
7.2 Warranty Period	20

1. PRODUCT OVERVIEW

1.1 Model Number Indication

1.1.1 Product model number

■ Example of model number indication : CMK2-G-HP1 series

Without switch (built-in magnet for switch)
CMK2-G-00-20-100-Y-HP1

With switch (built-in magnet for switch)
CMK2-G-00-20-100-T0H-R-VY-HP1

A Mounting
*1

B Bore size

C Port thread

D Stroke

E Switch model No.

F Switch quantity
*6

G Option
*3

H Accessory
*4

Code	Description
A Mounting	
00	Basic
LB	Axial foot (both sides)
LS	Axial foot (one side)
FA	Rod side flange
FB	Head side flange
CA	Eye bracket
CC	Eye bracket integrated
CC1	Eye bracket, bush pressfit
CB	Clevis Bracket (pin and split washer pin included)
TA	Rod side trunnion
TB	Head side trunnion

B Bore size (mm)	
20	ø20
25	ø25
32	ø32
40	ø40

C Port thread	
Blank	Rc thread
NN	NPT thread (made to order)
GN	G thread (made to order)

D Stroke (mm)	
Stroke *2	Custom Stroke
5 to 750	In 1 mm increments

E Switch model No.					
Lead wire	Lead wire	Control	Voltage	Display	Lead wire
Straight	L-shaped	Reed	AC	DC	
T0H*	T0V*	●	●	1-color display	2-wire
T5H*	T5V*	●	●	No indicator lamp	2-wire
T8H*	T8V*	●	●	1-color display	2-wire
T1H*	T1V*	●	●	1-color display	2-wire
T2H*	T2V*	●	●	1-color display	2-wire
T3H*	T3V*	●	●	1-color display	3-wire
T2HR3	T2VR3	●	●	1-color display Bending resistant lead wire	2-wire
T3PH*	T3PV*	●	●	1-color display (made to order)	3-wire
T2WH*	T2WV*	●	●	2-color display	2-wire
T2YH*	T2YV*	●	●	2-color display	3-wire
T3WH*	T3WV*	●	●	2-color display	3-wire
T3YH*	T3YV*	●	●	2-color display	3-wire
T2JH*	T2JV*	●	●	1-color display w/ delay	2-wire

* Lead wire length	
Blank	1 m (standard)
3	3 m (option)
5	5 m (option)

F Switch quantity	
R	1 on rod side
H	1 on head side
D	2
T	3

G Option	
F	With push-in fitting (straight)
FE	With push-in fitting (elbow)
M	Piston rod material (stainless steel) *7
V	Boss cutoff
P6	Copper and PTFE free *8

H Accessory	
I	Rod eye
Y	Rod clevis (pin and split washer pin attached)
B2	Clevis bracket (pin and snap ring attached)

Note 1: One side foot (LS) has the max. stroke length of 50mm.

Note 2: Refer to page 3 for min. stroke length with switch.

Note 3: F; with push-in fitting (straight), FE; The compatible tube O.D. of push-in fitting (elbow) is ø6.

Note 4: "I" and "Y" cannot be selected together.

Note 5: Refer to "Pneumatic Cylinders I (Catalog No.CB-029SA)" for made-to-order specifications of rod end form.

Note 6: Up to three switches can be installed. If four or more switches are required, switch mounting brackets for the extra switches must be prepared separately.

Note 7: For 20 or 25 bore size, the rod is stainless steel as standard and the rod nut is zinc chromate. If a stainless steel rod nut is necessary, select the "M" option code.

Note 8: "CC1" mounting is not available for copper and PTFE free (P6).

■ Example of model number indication : CMK2-G-FP1-HP1 series

Without switch (built-in magnet for switch)

CMK2-G-00-20-100-FP1 Y-HP1

With switch (built-in magnet for switch)

CMK2-G-00-20-100-T0H-R-V-FP1 Y-HP1

A Mounting
*1

B Bore size

C Port thread

D Stroke

E Switch model No.

F Switch quantity
*5

G Option

H Accessory
*3

Code	Description	
A Mounting		
00	Basic	
LB	Axial foot (both sides)	
LS	Axial foot (one side)	
FA	Rod side flange	
FB	Head side flange	
CA	Eye bracket	
CC	Eye bracket integrated	
CC1	Eye bracket, bush pressfit	
CB	Clevis Bracket (pin and split washer pin included)	
TA	Rod side trunnion	
TB	Head side trunnion	
B Bore size (mm)		
20	ø20	*6
25	ø25	*6
32	ø32	
40	ø40	
C Port thread		
Blank	Rc thread	
NN	NPT thread (made to order)	
GN	G thread (made to order)	
D Stroke (mm)		
Stroke *2		Custom Stroke
5 to 750		In 1 mm increments
E Switch model No.		
Lead wire Straight	Lead wire L-shaped	3 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3

Note 1: One side foot (LS) has the max. stroke length of 50mm.

Note 2: Refer to page 3 for min. stroke length with switch.

Note 3: "I" and "Y" cannot be selected together.

Note 4: Refer to "Pneumatic Cylinders I (Catalog No.CB-029SA)" for made-to-order specifications of rod end form.

Note 5: Up to three switches can be installed. If four or more switches are required, switch mounting brackets for the extra switches must be prepared separately.

Note 6: For 20 or 25 bore size, the rod is stainless steel as standard and the rod nut is zinc chromate. If a stainless steel rod nut is necessary, select the "M" option code.

■ Stroke length

Bore size(mm)	Standard stroke length(mm)	Min. stroke length (mm)	Max. stroke length (mm)
φ20	25,50,75,100,150,200,250,300	5	750 ^{Note1}
φ25			
φ32			
φ40			

Note 1: One side foot (LS) has the max. stroke length of 50 mm.

※ The custom stroke length is available in 1 mm increments.

■ Min. stroke length with switch

Switches	1					2					3				
	Proximity			Reed		Proximity			Reed		Proximity			Reed	
Bore size (mm)	T2, T3	T2W T3W	T1 T※Y	T0, T5	T8	T2, T3	T2W T3W	T1 T※Y	T0, T5	T8	T2, T3	T2W T3W	T1 T※Y	T0, T5	T8
φ20	10					25	30	35	25	35	50	55	55	50	55
φ25	10					25	30	35	25	35	50	55	55	50	55
φ32	10					25	30	35	25	35	50	55	55	50	55
φ40	10					25	30	35	25	35	50	55	55	50	55

※Up to 3 switches can be mounted.

(Unit:mm)

1.1.2 How to order mounting brackets

■ CMK2-G-HP1 Series

Bore size (mm)	φ20	φ25	φ32	φ40 ^{Note1}
Mounting brackets ^{Note2}				
Basic (00) ^{Note4}	M1-00-20	M1-00-30	M1-00-30	M1-00-30 (for head side)
Axial foot (LB/LS) ^{Note3}	M1-LB-20	M1-LB-30	M1-LB-30	M1-LB-30 (for head side) CMK2-G2-40-LS (LS, LB rod side)
Flange (FA/FB)	M1-FA-20	M1-FA-30	M1-FA-30	CMK2-G2-40-FA(FA) M1-FA-30(FB)
Trunnion (TA/TB)	M1-TA-20	M1-TA-30	M1-TA-30	CMK2-G2-40-TA(TA) M1-TA-40(TB)
Eye bracket (CA)	M1-CA-20	M1-CA-30	M1-CA-30	M1-CA-30
Clevis bracket (CB)	M1-CB-20	M1-CB-30	M1-CB-30	M1-CB-30

Note 1: The rod cover nut, LS bracket (LB rod side), FA bracket and TA bracket for φ40 bore size are not the standard type.

Note 2: Mounting nuts and toothed washers are included with the axial foot and flange types. The trunnion type includes mounting nuts. However, toothed washers are not included with φ40, 00, LB (rod side), LS and FA.

Note 3: For the axial foot (both sides), two sets of the "M1-LB-*1" shown in table above are required. For φ40, the brackets used on the rod side and head side are different. Refer to the table above for details.

Note 4: Mounting nut, toothed washer only. Although 1 set is included with the basic product (00) (only mounting nuts are included with the φ40), use them when needed.

■ CMK2-G-FP1-HP1 Series

Bore size (mm)	φ20	φ25	φ32	φ40 ^{Note1}
Mounting brackets ^{Note2}				
Basic (00) ^{Note4}	M1-00-20	M1-00-30	M1-00-30	M1-00-30 (for head side)
Axial foot (LB/LS) ^{Note3}	M1-LB-20	M1-LB-30	M1-LB-30	M1-LB-30 (for head side) CMK2-G2-40-LS (LS, LB rod side)
Flange (FA/FB)	M1-FA-20	M1-FA-30	M1-FA-30	CMK2-G2-40-FA(FA) M1-FA-30(FB)
Trunnion (TA/TB)	M1-TA-20	M1-TA-30	M1-TA-30	CMK2-G2-40-TA(TA) M1-TA-40(TB)
Eye bracket (CA)	M1-CA-20-FP1	M1-CA-30-FP1	M1-CA-30-FP1	M1-CA-30-FP1
Clevis bracket (CB)	M1-CB-20-FP1	M1-CB-30-FP1	M1-CB-30-FP1	M1-CB-30-FP1


Note 1: The rod cover nut, LS bracket (LB rod side), FA bracket and TA bracket for φ40 bore size are not the standard type.

Note 2: Mounting nuts and toothed washers are included with the axial foot and flange types. The trunnion type includes mounting nuts. However, toothed washers are not included with φ40, 00, LB (rod side), LS and FA.

Note 3: For the axial foot (both sides), two sets of the "M1-LB-*1" shown in table above are required. For φ40, the brackets used on the rod side and head side are different. Refer to the table above for details.

Note 4: Mounting nut, toothed washer only. Although 1 set is included with the basic product (00) (only mounting nuts are included with the φ40), use them when needed.

1.1.3 How to order switch

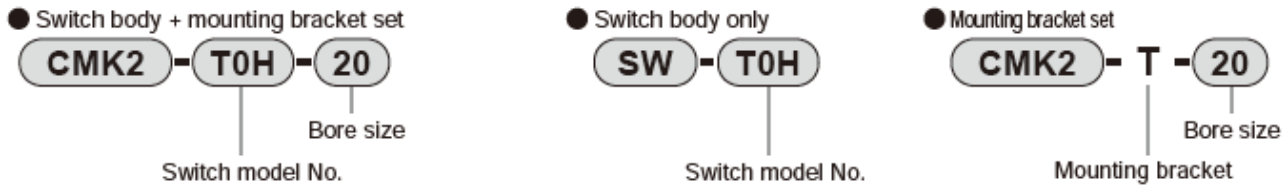

1.2 Specifications

1.2.1 Product specifications

Model	CMK2-G-HP1			
Descriptions	CMK2-G-FP1-HP1			
Bore size mm	φ20	φ25	φ32	φ40
Actuation	Double acting			
Working fluid	Compressed air			
Max. working pressure MPa	1.0			
Min. working pressure MPa	0.15			
Proof pressure MPa	1.6			
Ambient temperature °C	-10 to 60 (no freezing)			
Port size	Rc1/8			
Stroke tolerance mm	$\begin{smallmatrix} +2.0 \\ 0 \end{smallmatrix}$ (up to 200), $\begin{smallmatrix} +2.4 \\ 0 \end{smallmatrix}$ (More than 200)			
Working piston speed mm/s	50 to 500			
Cushion	With rubber cushion			
Lubrication	Not required			
Allowable energy absorption J	0.166	0.308	0.424	0.639

1.2.2 Switch specifications

Descriptions	Reed 2-wire type						
	T0H/V		T5H/V		T8H/V		
Applications	For programmable controller, relay		For programmable controller, relay, IC circuit(without indicator), serial connection		For programmable controller, relay		
Load voltage	12/24 VDC	110 VAC	5/12/24 VDC	110 VAC	12/24 VDC	110 VAC	220 VAC
Load current	5 mA to 50 mA	7 mA to 20 mA	50 mA or less	20 mA or less	5 mA to 50 mA	7 mA to 20 mA	7 mA to 10 mA
Current consumption	—						
Internal voltage drop	3 V or less (For DC, when the load current is 30mA)		0.1 V or less (Internal resistance 0.5 Ω or less.)		4V or less		
Indicator	Red LED (Lights up when turned on)		—		Red LED (Lights up when turned on)		
Leakage current	—						
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)				Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)		
Shock resistance	294m/s ²						
Insulation resistance	20 MΩ or more with 500 VDC megger				100 MΩ or more with 500 VDC megger		
Withstand voltage	No abnormality after applying 1000 VAC for one minute				No abnormality after applying 1500 VAC for one minute		
Ambient temperature	-10°C to 60°C						
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant						

Descriptions	Proximity 2-wire type		
	T2H/V	T2HR3,T2VR3	T2YH/V
Applications	Only for programmable controller		
Power supply voltage	—		
Load voltage	10 VDC to 30 VDC		
Load current	5 mA to 20 mA		
Current consumption	—		
Internal voltage drop	4 V or less		
Output delay time	—		
Indicator	Red LED (Lights up when turned on)		Red/green LED (Lights up when turned on)
Leakage current	1 mA or less		
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)	Standard is 3 m (Elasticity,Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)
Shock resistance	980 m/s ² or less		
Insulation resistance	20 M Ω or more with 500 VDC megger		100 M Ω or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C		
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant		

Descriptions	Proximity 2-wire type	
	T2JH/V	T1H/V
Applications	Only for programmable controller	For programmable controller, relay, small solenoid valve
Power supply voltage	—	—
Load voltage	10 VDC to 30 VDC	85 VAC to 265 VAC
Load current	5 mA to 20 mA	5 mA to 100 mA
Current consumption	—	—
Internal voltage drop	4 V or less	10% or less of load voltage
Output delay time	200±50ms	—
Indicator	Red LED (Lights up when turned on)	
Leakage current	1 mA or less	1 mA or less at 100 VAC 2 mA or less at 200 VAC
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)	
Shock resistance	980 m/s ² or less	
Insulation resistance	100 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	No abnormality after applying 1500 VAC for one minute
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 2,3-wire type	
	T2WH/V	T3WH/V
Applications	Only for programmable controller	For programmable controller, relay
Output method	—	NPN
Power supply voltage	—	10 VDC to 28 VDC
Load voltage	24 VDC ± 10%	30 VDC or less
Load current	5 mA to 20 mA	50 mA or less
Current consumption	—	10 mA or less at 24 VDC
Internal voltage drop	4 V or less	0.5 V or less
Output delay time	—	—
Indicator	Red/green LED(Lights up when turned on)	
Leakage current	1 mA or less	10 μA or less
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm ²)
Shock resistance	980 m/s ² or less	
Insulation resistance	20 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 3-wire type		
	1-color display	1-color display (PNP output)(made to order)	2-color display
	T3H/V	T3PH/V	T3YH/V
Applications	For programmable controller, relay		
Output method	NPN	PNP	NPN
Power supply voltage	10 VDC to 28 VDC		
Load voltage	30 VDC or less		
Load current	100 mA or less		50 mA or less
Current consumption	10 mA or less at 24 VDC	10 mA or less at 24 VDC	10 mA or less at 24 VDC
Internal voltage drop	0.5 V or less		
Indicator	Red LED (Lights up when turned on)	Yellow LED (Lights up when turned on)	Red/green LED (Lights up when turned on)
Leakage current	10 μ A or less		
Lead wire	Standard is 1 m(Oil-resistant vinyl cable 3 core cord, 0.2 mm ²)		Standard is 1 m(Oil-resistant vinyl cable 3 core cord, 0.3 mm ²)
Shock resistance	980 m/s ² or less		
Insulation resistance	20 M Ω or more with 500 VDC megger		100 M Ω or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C		
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant		

2. INSTALLATION


2.1 Environment

⚠ CAUTION

When using the product in a cutting, casting, or welding plant, install a cover to prevent foreign matters such as cutting fluid, chips, powder, and dust from entering.

Do not use the equipment in the following environments.

- Where cutting oil can splash onto the product (abrasives and polishing powder in the oil can abrade the sliding section)
 - Where organic solvents, chemicals, acids, alkalis, and kerosene are present
 - Where water can splash onto the product
- Use the product within the following ambient temperature range.
–10°C to 60°C (no freezing)
 - For compressed air, use clean and dry air that has been passed through an air filter.
Use an air filter in the circuit and be careful with the filtration rate (a filter that removes particles exceeding 5 µm is desirable), flow rate, and mounting position (install the filter near the directional control valve).

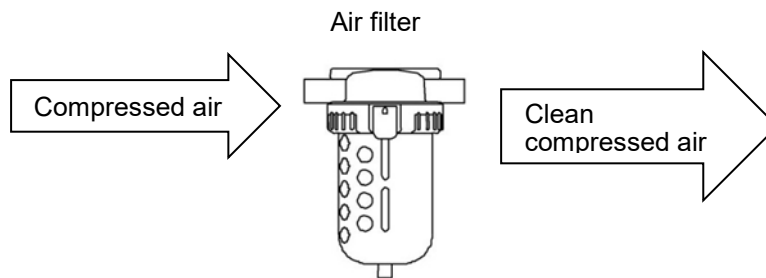

2.2 Unpacking

- Check that the model number ordered and the model number indicated on the product are the same.
- Check the exterior of the product for any damage.
- When storing the product, attach a sealing plug to the piping port to prevent foreign matters from entering the cylinder. Remove the sealing plug before piping.

2.3 Mounting

- The mounting method of cylinder and switch are the same as the CMK2 standard type.
For details, refer to the CMK2 standard type instruction manual described in Section 6 "Reference information".


2.4 Piping

WARNING

Insert the tube into the fitting until it firmly rests on the tube end and make sure that the tube does not come off before use.




- Use pipes that are made of corrosion-resistant materials after the filter such as zinc-plated pipes, nylon tubes, and rubber tubes.
- Use pipes with an effective cross-sectional area that allows the cylinder to achieve the predetermined piston speed.
- Install the filter for removing rust, foreign matters, and drainage from the piping as close as possible to the solenoid valve.
- Observe the effective thread length for the gas pipes.
- In addition, chamfer the threaded end of the pipes by about a 1/2 pitch.

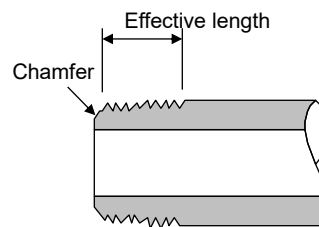

■ Pipe cleaning

Before piping, blow air into the pipes to clean the interior and to remove cutting chips and foreign matters.

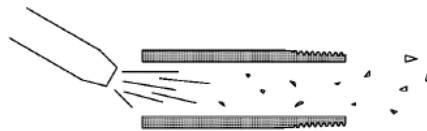

■ Seal material


Use a seal tape or a seal material to stop leakage from piping.

Apply a seal tape or seal material to the screw threads leaving two or more threads at the pipe end uncovered or uncoated. If the pipe end is fully covered or coated, a shred of seal tape or residue of seal material may enter inside of the pipes or device and cause a failure.

When using a seal tape, wind it around the screw threads in the direction opposite from the screw threads and press it down with your fingers to attach it firmly.

When using a liquid seal material, be careful not to apply it to resin parts. The resin parts can become damaged and this may lead to a failure or malfunction.

Also, do not apply seal material to the internal threads.

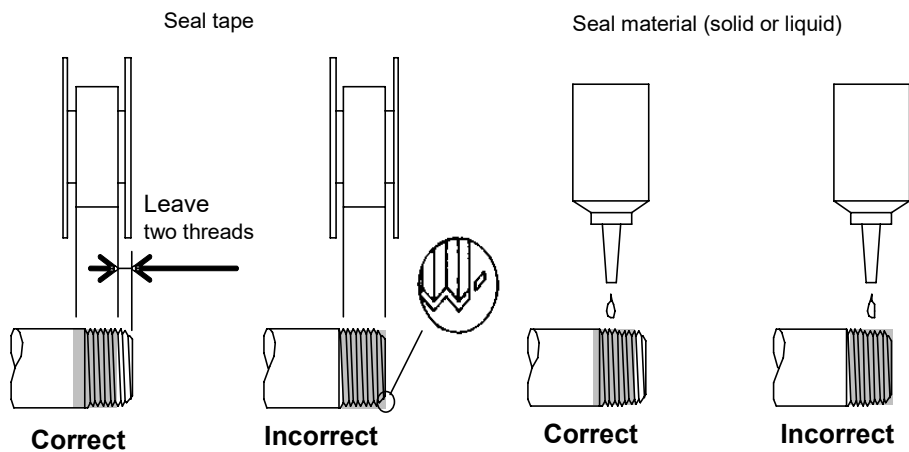

2.5 Wiring

- The switch wiring method is the same as the CMK2 standard type. For details, refer to the CMK2 standard type instruction manual described in Section 6 "Reference information".

3. USAGE

3.1 Using the Cylinder

■ Working pressure range

Use the cylinder within the following pressure range:

Model	Pressure range (MPa)
CMK2-G-HP1 CMK2-G-FP1-HP1	0.15 to 1.0

■ How to adjust the cushion


The cushion of the cylinder of this type is unadjustable its cushion effect because of being made of rubber. Intend using additional cushion in the event that the kinetic energy is estimated exceeding the value shown in the graphs below.

Bore size (mm)	φ20	φ25	φ32	φ40
Allowable energy absorption (J)	0.166	0.308	0.424	0.639

■ Adjustment of the piston speed

Mount a speed controller to adjust the piston speed.

< Basic circuit diagram >

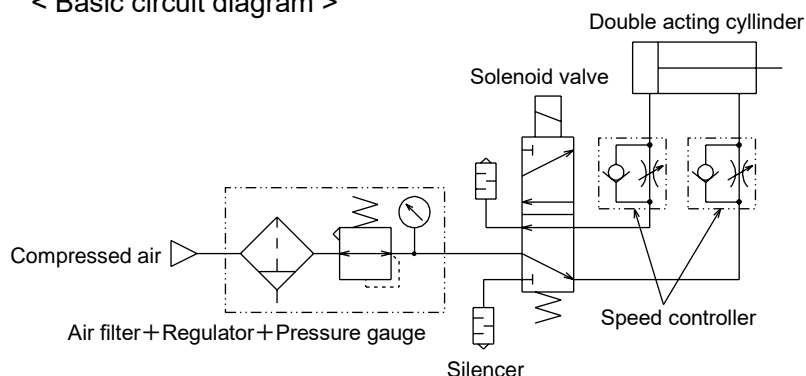

3.1 Using the Switch

■ Magnetic environment

Do not use the switch in a place where there is a strong magnetic field or large current (such as a large magnet or welding machine). If switch mounted cylinders are installed close to each other and in parallel or if magnetic substances are moving close to the cylinder, the magnetic forces may interfere with each other and affect the detection accuracy.

■ Wiring of lead wires

When wiring, be careful not to apply bending stress and tension repeatedly to lead wires. For movable sections, use wiring material with the same level of bending resistance as the robot wire.

■ Ambient temperature

Do not use the switch in a high temperature environment (60°C or more).

Using the switch in a high temperature environment may affect its performance due to the temperature characteristics of magnetic parts and electronic parts.

■ Intermediate position detection

When the switch is operated at an intermediate position in the length of the stroke, the relay will not respond if the piston speed is too high.

If the operation time of the relay is 20 ms, keep the piston speed at 500 mm/s or less.

■ Shock

Do not subject the product to strong vibrations and shocks when transporting the cylinder and mounting and adjusting the switch.

4. MAINTENANCE AND INSPECTION

WARNING

Do not disassemble the product.

Do not touch electrical wiring connections (bare live parts) of actuators equipped with solenoid valves, actuators equipped with switches, and other such actuators.

Do not touch live parts with bare hands.

An electric shock may occur.

CAUTION

Plan and perform daily and periodic inspections so that maintenance can be managed properly.

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunction) or accidents.

4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection once or twice a year.

4.1.1 Inspection item

- Actuation state
- Change in the piston speed and cycle time
- External and internal leakages
- Damage and deformation of the piston rod
- Abnormality in the stroke


Check the items above and refer to "5. TROUBLESHOOTING" to correct any abnormality found. If there are loose threaded connections, tighten them.

4.1.2 Maintenance of the product

This cylinder does not require lubrication.

4.1.3 Maintenance of the circuit

- Discharge the drainage accumulated in the air filter periodically before it exceeds the specified line.
- Since foreign matters such as carbide (carbon or tar substance) from the compressor oil may contaminate the circuit and cause an operation fault of the solenoid valve or the cylinder, be careful when performing maintenance or inspection of the compressor.

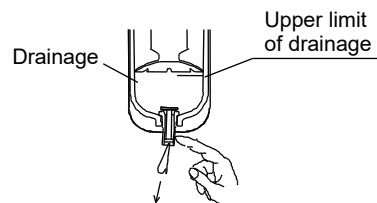

5. TROUBLESHOOTING

5.1 Problems, Causes, and Solutions

If the product does not operate properly, check the table below for a possible solution.

5.1.1 Cylinder

Problem	Cause	Solution
Does not operate.	No pressure or insufficient pressure is applied.	Secure sufficient pressure.
	No signal is input to directional control valve.	Repair the control circuit.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Piston packing is damaged.	Replace the cylinder.
Does not operate smoothly.	Speed is lower than minimum working piston speed.	Mitigate load fluctuation.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.
	Load is too large.	Increase the pressure. Enlarge the bore size.
	Speed control valve has meter-in circuit.	Change the mounting direction of the speed control valve.
Cylinder is damaged or deformed.	Force of shock due to high-speed actuation is excessive.	Decrease the speed. Lighten the load. Install a more effective cushion mechanism. (external cushion mechanism)
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.

5.1.2 Switch

Problem	Cause	Solution
Switch turns on but indicator does not blink.	Contact is welded.	Replace the switch.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Indicator is damaged.	Replace the switch.
	External signal is faulty.	Check the external circuit.
Switch does not turn on	Cables are disconnected.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Voltage is wrong.	Use specified voltage.
	Switch is not mounted in right place.	Mount the switch in right place.
	Switch is not positioned correctly.	Position and tighten the switch correctly
	Switch is facing opposite direction.	Mount the switch so that it faces the correct direction.
	Load (relay) cannot respond for intermediate position detection.	Lower the speed. Replace the relay with one recommended by CKD.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
Switch does not turn off	Piston is not moving.	Move the piston.
	Contact is welded.	Replace the switch.
	Rating of relay is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Ambient temperature is too high or too low.	Use the switch at an ambient temperature of -10°C to 60°C .
	Magnetic field is nearby.	Install a magnetic shield.
	External signal is faulty.	Check the external circuit.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

6. REFERENCE INFORMATION

- CMK2 standard type instruction manual No....SM-3271-A
The mounting method of cylinder and switch, switch wiring method, disassembly and assembly method are the same as the CMK2 standard type. So please also confirm the above CMK2 standard type instruction manual.

7. WARRANTY PROVISIONS

7.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

7.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.