

Environment-Resistant Tie Rod Cylinder SCG-G-HP1 Series

INSTRUCTION MANUAL

SM-A10865-A/3



- · Read this Instruction Manual before using the product.
- · Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

SM-A10865-A/3 PREFACE

PREFACE

Thank you for purchasing CKD's " SCG-G-HP1 Series" Environment-Resistant Tie Rod Cylinder. This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all
 of them. Depending on the application or usage, the product may not be able to exercise its full
 performance or an accident may occur due to fluid, piping, or other conditions. It is the
 responsibility of the customer to check the product specifications and decide how the product shall
 be used in accordance with the application and usage.

i 2022-05-24

SM-A10865-A/3 SAFETY INFORMATION

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the fluid control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414, JIS B 8370, JFPS 2008 (the latest edition of each standard), the High Pressure Gas Safety Act, the Industrial Safety and Health Act, other safety rules, organization standards, relevant laws and regulations

In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:

Thoroughly read and understand this Instruction Manual before using the product.

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

△ DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
⚠ WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
▲ CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.



Indicates general precautions and tips on using the product.

ii 2022-05-24

SM-A10865-A/3 SAFETY INFORMATION

Precautions on Product Use

⚠ WARNING

The product must be handled by a qualified person who has extensive knowledge and experience.

The product is designed and manufactured as a device or part for general industrial machinery.

Use the product within the specifications.

The product must not be used beyond its specifications. Also, the product must not be modified and additional work on the product must not be performed.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shutoff circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

Do not handle the product or remove pipes and devices until confirming safety.

- Inspect and service the machine and devices after confirming the safety of the entire system.
 Also, turn off the energy source (air supply or water supply) and power to the relevant facility.
 Release compressed air and fluid from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

iii 2022-05-24

SM-A10865-A/3 SAFETY INFORMATION

Precautions on Design and Selection

ACAUTION

FP Series: Cautions

Bearings used in cylinders contain trace amounts of mineral oil. Within the product specifications range, it is processed so as not to discharge, but please carefully consider the installation location.

Precautions on Product Disposal

⚠ CAUTION

When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.

iv 2022-05-24

CONTENTS

PREFACE	i
SAFETY INFORMATION	ii
Precautions on Product Use	iii
Precautions on Design and Selection	iv
Precautions on Product Disposal	iv
CONTENTS	v
1. PRODUCT OVERVIEW	1
1.1 Model Number Indication	
1.1.1 Product model number	
1.1.2 How to order mounting brackets	
1.2 Specifications	
1.2.2 Switch specifications	
2. INSTALLATION	
2.1 Environment	11
2.2 Unpacking	11
2.3 Mounting	
2.4 Piping	
2.5 Wiring	
3. USAGE	14
3.1 Using the Cylinder	14
3.2 Using the Switch	
4. MAINTENANCE AND INSPECTION	16
4.1 Periodic Inspection	17
4.1.1 Inspection item	17
4.1.2 Maintenance of the product	
4.1.3 Maintenance of the circuit	
4.2 Disassembly method, Assembly method	
5. TROUBLESHOOTING	
5.1 Problems, Causes, and Solutions	
5.1.1 Cylinder 5.1.2 Switch	
6. REFERENCE INFORMATION	
7. WARRANTY PROVISIONS	
7.1 Warranty Conditions	
7.2 Warranty Period	22


٧

1. PRODUCT OVERVIEW

1.1 Model Number Indication

1.1.1 Product model number


■ Example of model number indication: SCG-G-HP1 series

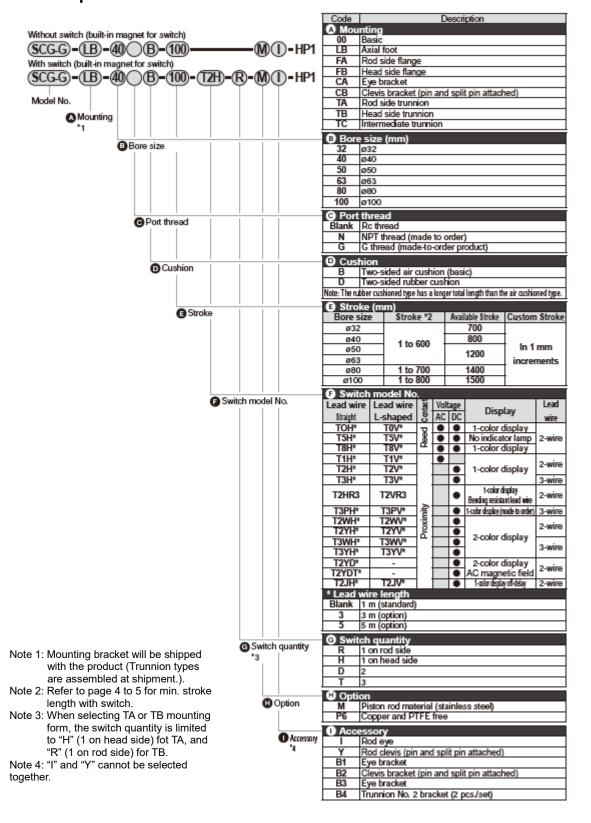

1

2022-05-24

■ Example of model number indication: SCG-G-FP1-HP1 series

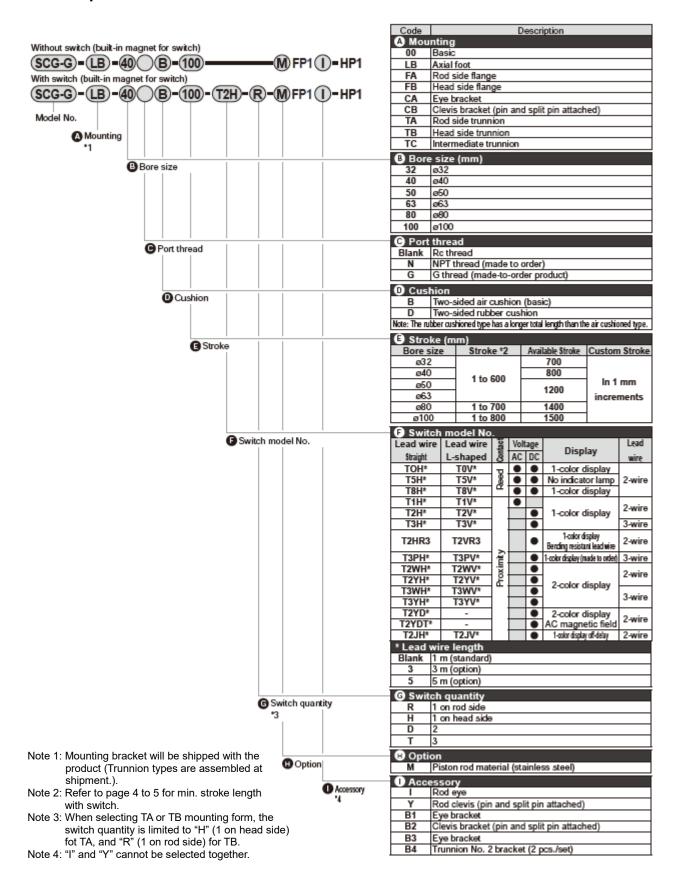

■ Stroke length

Bore size (mm)	Standard stroke length (mm)	Min. stroke length (mm)	Max. stroke length (mm) Note 1	Available stroke length (mm)
φ32				700
φ40			000	800
φ50	25,50,75,100,150,200,	4	600	1200
φ63	250,300,350,400,450,500	1		1200
φ80			700	1400
φ100			800	1500

Note 1: If the max. stroke length is exceeded, product specifications may not be met, depending on operating conditions. ** The custom stroke length is available in 1 mm increments.

Min. stroke with T0/T5 switches

Switch quantity	Di	fferen mou	t surfa	ice	Samo	e surfa	ce mou	nting	Center trunnion mounting			nting	Rod side trunnion mounting	Head side trunnion mounting
bore size (mm)	1	2	3	4	1	2	3	4	1	2	3	4	1	1
φ32	9	17	34	51	9	48 (33)	78 (64)	109 (94)	94 (94)	94 (94)	169 (155)	169 (155)	42	42
φ40	9	18	36	54	9	48 (33)	78 (64)	109 (94)	81 (81)	81 (81)	164 (142)	164 (142)	38	38
φ50	9	18	36	54	9	18	36	54	112 (112)	112 (112)	121 (121)	121 (121)	51	53
φ63	10	19	38	57	10	19	38	57	85 (73)	85 (73)	91 (91)	91 (91)	41	42
φ80	10	20	39	59	10	20	39	59	96 (79)	96 (79)	99 (99)	99 (99)	41	47
φ100	10	20	40	60	10	20	40	60	101 (84)	101 (84)	105 (105)	105 (105)	47	53

Note1: The values in () are of T*V (radial lead wire).

Note2: When the stroke length is 15 mm or less, the two switches could turn ON at the same time. In this case, adjust switch mounting positions to be as far apart as possible.

Min. stroke with T8 switches

Switch quantity	Di	fferen	t surfa nting	ice	Samo	e surfa	ce mou	nting	Center trunnion mounting		nting	Rod side trunnion mounting	Head side trunnion mounting	
bore size (mm)	1	2	3	4	1	2	3	4	1	2	3	4	1	1
φ32	9	17	34	51	9	54 (31)	84 (62)	115 (92)	100 (100)	100 (100)	191 (161)	191 (161)	45	45
φ40	9	18	36	54	9	54 (31)	84 (62)	115 (92)	87 (87)	87 (87)	178 (148)	178 (148)	41	41
φ50	9	18	36	54	9	18	36	54	116 (116)	116 (116)	121 (121)	121 (121)	54	55
φ63	10	19	38	57	10	19	38	57	89 (77)	89 (77)	99 (99)	99 (99)	44	44
φ80	10	20	39	59	10	20	39	59	100 (75)	100 (75)	111 (111)	111 (111)	43	49
φ100	10	20	40	60	10	20	40	60	105 (80)	105 (80)	117 (117)	117 (117)	49	55

Note1: The values in () are of T*V (radial lead wire).

Note2: When the stroke length is 15 mm or less, the two switches could turn ON at the same time. In this case, adjust switch mounting positions to be as far apart as possible.

Min. stroke with T2/T3 switches

Switch quantity	Di		t surfa nting	ce	Samo	e surfac	ce mou	nting	Cente	Center trunnion mounting			Rod side trunnion mounting	Head side trunnion mounting
bore size (mm)	1	2	3	4	1	2	3	4	1	2	3	4	1	1
φ32	5	10	20	30	5	40 (33)	70 (64)	101 (94)	64 (55)	64 (55)	131 (116)	131 (116)	27	27
φ40	5	10	20	30	5	40 (33)	70 (64)	101 (94)	69 (60)	69 (60)	152 (121)	152 (121)	32	32
φ50	5	10	20	30	5	10	20	30	71 (62)	71 (62)	71 (61)	71 (61)	31	32
φ63	6	11	21	32	6	11	21	32	77 (68)	77 (68)	77 (68)	77 (68)	37	38
φ80	6	11	22	33	6	11	22	33	88 (79)	88 (79)	88 (80)	88 (80)	37	43
φ100	6	11	22	33	6	11	22	33	93 (84)	93 (84)	93 (85)	93 (85)	43	49

Note1: The values in () are of T*V (radial lead wire).

Note2: When the stroke length is 15 mm or less, the two switches could turn ON at the same time. In this case, adjust switch mounting positions to be as far apart as possible.

Min. stroke with T1/T2Y/ T3Y/T2YD/T2W/T3W switches

Switch quantity	Dit		t surfa nting	ice	Sam	e surfa	ice moi	unting	Center trunnion mounting			ınting	Rod side trunnion mounting	Head side trunnion mounting
bore size (mm)	1	2	3	4	1	2	3	4	1	2	3	4	1	1
φ32	6	11	22	33	6	62 (49)	92 (80)	123 (110)	86 (61)	86 (61)	177 (122)	177 (122)	38	38
φ40	6	11	22	33	6	62 (49)	92 (80)	123 (110)	91 (66)	91 (66)	182 (127)	182 (127)	43	43
φ50	6	12	24	36	6	12	24	36	93 (68)	93 (68)	93 (68)	93 (68)	42	43
φ63	6	12	24	36	6	12	24	36	99 (74)	99 (74)	99 (74)	99 (74)	48	49
φ80	7	13	25	38	7	13	25	38	110 (85)	110 (85)	110 (86)	110 (86)	48	54
φ100	7	13	26	39	7	13	26	39	115 (90)	115 (90)	115 (92)	115 (92)	54	60

Note1: The values in () are of T*V (radial lead wire).

Note2: When the stroke length is 15 mm or less, the two switches could turn ON at the same time. In this case, adjust switch mounting positions to be as far apart as possible.



When the rod side trunnion is mounted, position cannot be detected at the rod side stroke end. When the head side trunnion is mounted, position cannot be detected at the head side stroke end.

2022-05-24

1.1.2 How to order mounting brackets

■ SCG-G-HP1 series

Bore size (mm) Mounting bracket	φ32	φ40	φ50	φ63	φ80	φ100
Foot (LB)	SCG-LB-32	SCG-LB-40	SCG-LB-50	SCG-LB-63	SCG-LB-80	SCG-LB-100
Flange (FA/FB)	SCG-FA-32	SCG-FA-40	SCG-FA-50	SCG-FA-63	SCG-FA-80	SCG-FA-100
Eye bracket (CA)	SCG-CA-32	SCG-CA-40	SCG-CA-50	SCG-CA-63	SCG-CA-80	SCG-CA-100
Clevis bracket (CB)	SCG-CB-32	SCG-CB-40	SCG-CB-50	SCG-CB-63	SCG-CB-80	SCG-CB-100


[※] All mounting brackets have mounting bolts included. The foot mounting bracket (LB) is provided as 2 pcs./set.

■ SCG-G-FP1-HP1 series

Bore size (mm) Mounting bracket	φ32	φ40	φ50	φ63	φ80	φ100
Foot (LB)	SCG-LB-32	SCG-LB-40	SCG-LB-50	SCG-LB-63	SCG-LB-80	SCG-LB-100
Flange (FA/FB)	SCG-FA-32	SCG-FA-40	SCG-FA-50	SCG-FA-63	SCG-FA-80	SCG-FA-100
Eye bracket (CA)	SCG-CA-32-FP1	SCG-CA-40-FP1	SCG-CA-50-FP1	SCG-CA-63-FP1	SCG-CA-80-FP1	SCG-CA-100-FP1
Clevis bracket (CB)	SCG-CB-32-FP1	SCG-CB-40-FP1	SCG-CB-50-FP1	SCG-CB-63-FP1	SCG-CB-80-FP1	SCG-CB-100-FP1

[※] All mounting brackets have mounting bolts included. The foot mounting bracket (LB) is provided as 2 pcs./set.

1.1.3 How to order switch

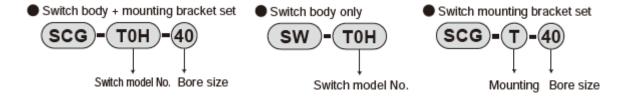

1.2 Specifications

1.2.1 Product specifications

Model Descriptions					G-HP1 FP1-HP1					
Bore size	mm	φ32	φ40	φ50	φ63	φ80	φ100			
Actuation		Double acting								
Working fluid		Compressed air								
Max. working pressure	MPa			1	.0					
Min. working pressure	MPa			0.	15					
Proof pressure	MPa			1	.6					
Ambient temperature	°C	-10 to 60 (no freezing)								
Port size		Rc1/8 Rc1/4 Rc3/8 Rc					Rc1/2			
Stroke tolerance mm	With rubber cushion	+1.4 (Up to 1000), +1.8 (1001 to 1500)								
Stroke tolerance mini	With air cushion	+1.0 (Up to 360), +1.4 (361 to 1000), +1.8 (1001 to 1500)								
Working piston speed	mm/s		50 to 1000 (O	perate within th	e allowable abs	orbed energy.)				
Cushion			Either air c	ushion or rubbe	er cushion can b	oe selected				
Effective air cushion ler	ngth mm	8.6	8.6	13.4	13.4	15.4	15.4			
Lubrication				Not re	equired					
Allowable absorbed	With rubber cushion	0.5	0.9	1.6	1.6	3.3	5.8			
energy J	With air cushion	2.5	3.7	8.0	14.4	25.4	45.6			

1.2.2 Switch specifications

Descriptions				Reed 2-wire ty	ре		
Descriptions	TOI	1 /V	T5I	1 /V		T8H/V	
Applications	For progr controlle		For programmable controller,relay, IC circuit(without indicator), serial connection		For programmable controller, relay		ller, relay
Load voltage	12/24 VDC	110 VAC	5/12/24VDC	110 VAC	12/24 VDC	110 VAC	220VAC
Load current	5mA to 50mA	7 mA to 20mA	50mA or less	20mA or less	5mA to 50mA	7mA to 20mA	7mA to 10mA
Current consumption				_			
Internal voltage drop	-	3V or less (For DC, when the load current is 30mA) the load current is 30mA) resistance 0.5 Ω or less.)					
Indicator	Red (Lights up wh		_	_	Red LED (Lights up when turned on)		
Leakage current				_			
Lead wire	(Oil-resis		rd is 1 m re 2 core cord,	0.2 mm²)	(Oil-resistant	Standard is 1 m vinyl cabtyre 2 o mm²)	
Shock resistance				294m/s ²			
Insulation resistance	20 1	MΩ or more wit	h 500 VDC meg	ger	100 MΩ or	more with 500 V	DC megger
Withstand voltage	No abnorma	lity after applyir	ng 1000 VAC fo	r one minute	No abnormali	ity after applying one minute	1500 VAC for
Ambient temperature	-10°C to 60°C						
Degree of protection		IP 6	7 (IEC standard), JIS C 0920 (\	watertight), oil-re	sistant	

		Proximity :	2-wire type							
Descriptions	1-color	display	1-color display off-delay	2-color display						
	T1H/V	T2H/V	T2JH/V	T2YH/V						
Applications	For programmable controller, relay,compact solenoid valve	Or	nly for programmable contr	oller						
Load voltage	85 to 265VAC		10 to 30VDC							
Load current	5mA to 100mA		5mA to 20mA							
Current consumption			_							
Internal voltage drop	10% or less of load voltage		4V or less							
Indicator	Red	d on)	Red/green LED (Lights up when turned on)							
Leakage current	1 mA or less with 100 VAC, 2 mA or less with 200 VAC		1 mA or less							
Lead wire	Standard is 1 m (Oil- resistant vinyl cabtyre 2 core cord, 0.3 mm²)	Standard is 1 m (Oil- resistant vinyl cabtyre 2 core cord, 0.2 mm²)	,	sistant vinyl cabtyre 2 core 0.3 mm²)						
Shock resistance		980	m/s ²							
Insulation resistance	100 MΩ or more with 500 VDC megger	20 MΩ or more with 500 VDC megger	100 M Ω or more with 500 VDC megger							
Withstand voltage	No abnormality after applying 1500 VAC for one minute	No abnormali	No abnormality after applying 1000 VAC for one minute							
Ambient temperature		-10°C	to 60°C							
Degree of protection	- IF	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant								

	Proximity 3-wire type				
Descriptions	1-color display	1-color display (PNP output)(made to order)	2-color display		
	T3H/V	T3PH/V	T3YH/V		
Applications		For programmable controller, relay			
Output method	NPN	PNP	NPN		
Power supply voltage		10 to 28VDC			
Load voltage		30VDC or less			
Load current	100m/	A or less	50mA or less		
Current consumption	10 mA or less at 24 VDC	10 mA or less at 24 VDC	10 mA or less at 24 VDC		
Internal voltage drop		0.5V or less			
In all a skare	Red LED	Yellow LED	Red/green LED		
Indicator	(Lights up when turned on)	(Lights up when turned on)	(Lights up when turned on)		
Leakage current	10 μA or less				
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm²)		Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.3 mm²)		
Shock resistance	980m/s²				
Insulation resistance	$20~\text{M}\Omega$ or more with 500 VDC megger		100 MΩ or more with 500 VDC megger		
Withstand voltage	No abnormality after applying 1000 VAC for one minute				
Ambient temperature	−10°C to 60°C				
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant				

	Proximity 2-wire type			
Descriptions	2-color display for AC magnetic field			
	T2YD	T2YDT		
Applications	Only for program	nmable controller		
Load voltage	24VD0	C±10%		
Load current	5mA to	20mA		
Internal voltage drop	6V or	rless		
Indicator	Red/green LED (Light	ts up when turned on)		
Leakage current	1.0mA or less			
Output delay time (Delay ON, delay OFF)	60ms or less			
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.5 mm²) Standard is 1 m (Flame-resistant vinyl cabtyre 2 core cord, 0.5 mm²)			
Shock resistance	980m/s ²			
Insulation resistance	100 MΩ or more with 500 VDC megger			
Withstand voltage	No abnormality after applying 1000 VAC for one minute			
Ambient temperature	−10°C to 60°C			
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant			

Descriptions	Proximity 2,3-wire type		
Descriptions	T2WH/V	T3WH/V	
Applications	Only for programmable controller	For programmable controller, relay	
Power supply voltage	_	10 to 28VDC	
Load voltage	24VDC±10%	30VDC or less	
Load current	5 mA to 20 mA	50 mA or less	
Current consumption	_	10 mA or less at 24 VDC	
Internal voltage drop	4 V or less	0.5V or less	
Output delay time (Delay ON,delay OFF)	_	_	
Indicator	Red/green LED(Lights up when turned on)		
Leakage current	1 mA or less 10µA or less		
Lead wire	Standard is 1 m (Oil-resistant	Standard is 1 m (Oil-resistant	
Leau wire	vinyl cabtyre 2 core cord, 0.2 mm²)	vinyl cabtyre 3 core cord, 0.2 mm ²)	
Shock resistance	980m/s ²		
Insulation resistance	20 MΩ or more with 500 VDC megger		
Withstand voltage	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C		
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant		

Descriptions	Proximity 2-wire type
Descriptions	T2HR3,T2VR3(Bend resist lead wire)
Applications	Only for programmable controller
Power supply voltage	_
Load voltage	10 to 30VDC
Load current	5mA to 20mA
Current consumption	_
Internal voltage drop	4V or less
Indicator	Red LED (Lights up when turned on)
Leakage current	1mA or less
Lead wire	Standard is 3m (Elasticity, oilresistantvinyl cabtyre cable2-conductor 0.2 mm²)
Shock resistance	980m/s²
Insulation resistance	20 M Ω or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute
Ambient temperature	−10°C to 60°C
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant

SM-A10865-A/3 2. INSTALLATION

2. INSTALLATION

2.1 Environment

⚠ CAUTION


When using the product in a cutting, casting, or welding plant, install a cover to prevent foreign matters such as cutting fluid, chips, powder, and dust from entering.

Do not use the equipment in the following environments.

- Where cutting oil can splash onto the product (abrasives and polishing powder in the oil can abrade the sliding section)
- · Where organic solvents, chemicals, acids, alkalis, and kerosene are present
- · Where water can splash onto the product
- Use the product within the following ambient temperature range.

-10°C to 60°C (no freezing)

For compressed air, use clean and dry air that has been passed through an air filter.
 Use an air filter in the circuit and be careful with the filtration rate (a filter that removes particles exceeding 5 µm is desirable), flow rate, and mounting position (install the filter near the directional control valve).

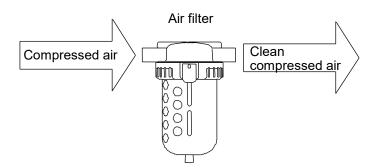

2.2 Unpacking

- Check that the model number ordered and the model number indicated on the product are the same.
- · Check the exterior of the product for any damage.
- When storing the product, take proper measures to prevent foreign matters from entering the cylinder.

2.3 Mounting

The mounting method of cylinder and switch are the same as the SCG standard type.
 For details, refer to the SCG standard type instruction manual described in Section 6 "Reference information".

SM-A10865-A/3 2. INSTALLATION


2.4 Piping


MARNING

Insert the tube into the fitting until it firmly rests on the tube end and make sure that the tube does not come off before use.

• Use pipes that are made of corrosion-resistant materials after the filter such as zinc-plated pipes, nylon tubes, and rubber tubes.


- Use pipes with an effective cross-sectional area that allows the cylinder to achieve the predetermined piston speed.
- Install the filter for removing rust, foreign matters, and drainage from the piping as close as possible to the solenoid valve.
- Observe the effective thread length for the gas pipes.

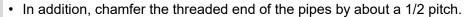

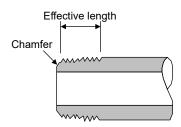

■ Pipe cleaning

Before piping, blow air into the pipes to clean the interior and to remove cutting chips and foreign matters.

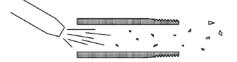

SM-A10865-A/3 2. INSTALLATION

■ Seal material


Use a seal tape or a seal material to stop leakage from piping.

Apply a seal tape or seal material to the screw threads leaving two or more threads at the pipe end uncovered or uncoated. If the pipe end is fully covered or coated, a shred of seal tape or residue of seal material may enter inside of the pipes or device and cause a failure.

When using a seal tape, wind it around the screw threads in the direction opposite from the screw threads and press it down with your fingers to attach it firmly.

When using a liquid seal material, be careful not to apply it to resin parts. The resin parts can become damaged and this may lead to a failure or malfunction.

Also, do not apply seal material to the internal threads.

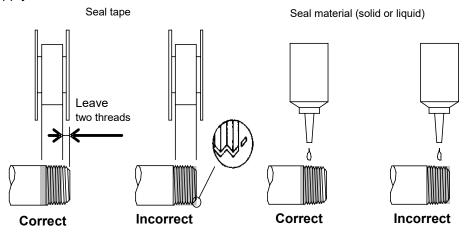

2.5 Wiring

The switch wiring method is the same as the SCG standard type.
 For details, refer to the SCG standard type instruction manual described in Section 6 "Reference information".

SM-A10865-A/3 3. USAGE

3. USAGE

3.1 Using the Cylinder

■ Working pressure range

Use the cylinder within the following pressure range:

Model	Pressure range (MPa)
SCG-G-HP1	0.1 to 1.0
SCG-G-FP1-HP1	0.1 to 1.0

■ How to adjust the cushion

Either air cushion or rubber cushion can be selected for this type of cylinder.

The adjustment method of the air cushion is the same as the SCG standard type.

For details, refer to the SCG standard type instruction manual described in Section 6 "Reference information".

The rubber cushion cannot be adjusted.


It is advisable to install an additional external stopper when the kinetic energy is excessive. Tolerable

kinetic energy is as the graphs below indicate.

Bore size(mm)		φ32	φ40	φ50	φ63	φ80	φ100
Allowable absorbed	With rubber cushion	0.5	0.9	1.6	1.6	3.3	5.8
energy (J)	With air cushion	2.5	3.7	8.0	14.4	25.4	45.6

■ Adjustment of the piston speed

Mount a speed controller to adjust the piston speed.

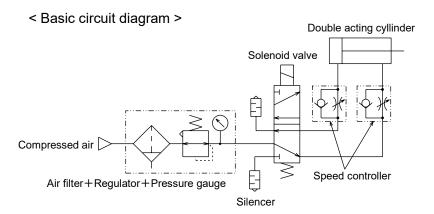

SM-A10865-A/3 3. USAGE

3.2 Using the Switch

■ Magnetic environment

Do not use the switch in a place where there is a strong magnetic field or large current (such as a large magnet or welding machine). If switch mounted cylinders are installed close to each other and in parallel or if magnetic substances are moving close to the cylinder, the magnetic forces may interfere with each other and affect the detection accuracy.

■ Wiring of lead wires

When wiring, be careful not to apply bending stress and tension repeatedly to lead wires. For movable sections, use wiring material with the same level of bending resistance as the robot wire.

■ Ambient temperature

Do not use the switch in a high temperature environment (60°C or more). Using the switch in a high temperature environment may affect its performance due to the temperature characteristics of magnetic parts and electronic parts.

■ Intermediate position detection

When the switch is operated at an intermediate position in the length of the stroke, the relay will not respond if the piston speed is too high.

■ Shock

Do not subject the product to strong vibrations and shocks when transporting the cylinder and mounting and adjusting the switch.

4. MAINTENANCE AND INSPECTION

MARNING

Do not touch electrical wiring connections (bare live parts) of cylinders equipped with switches, and other such cylinders.

Do not touch live parts with bare hands.

An electric shock may occur.

Turn off the power, release the residual pressure and make sure that there is no residual pressure before disassembling or inspecting the cylinders.

ACAUTION

Plan and perform daily and periodic inspections so that maintenance can be managed properly.

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunction) or accidents.

4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection once or twice a year.

4.1.1 Inspection item

- · Actuation state
- · Change in the piston speed and cycle time
- · External and internal leakages
- · Damage and deformation of the piston rod
- · Stroke abnormality

Check the items above and refer to "5. TROUBLESHOOTING" to correct any abnormality found. If there are loose threaded connections, tighten them.

4.1.2 Maintenance of the product

This cylinder does not require lubrication.

4.1.3 Maintenance of the circuit

- Discharge the drainage accumulated in the air filter periodically before it exceeds the specified line.
- Since foreign matters such as carbide (carbon or tar substance) from the compressor oil may contaminate the circuit and cause an operation fault of the solenoid valve or the cylinder, be careful when performing maintenance or inspection of the compressor.

Upper limit of drainage

4.2 Disassembly method, Assembly method

If any failure occurs such as air leakage, disassemble the product, referring to the internal structural diagram and instruction manual of SCG (standard), then exchange the parts in the consumable parts list.



- Follow reverse steps of disassembling during the process of assembling after cleaning parts. Carefully avoid giving damage to packings to prevent malfunction or air leakage.
- When mounting the unit, confirm that each packing is installed in the correct direction.

Consumable parts list

With air cushion

Tube bore (mm)	Kit No	Repair parts
ø32	SCG-G-32BK-HP1	Rod packing
ø40	SCG-G-40BK-HP1	Cylinder gasket
ø50	SCG-G-50BK-HP1	Cushion packing Piston packing
ø63	SCG-G-63BK-HP1	Wear ring
ø80	SCG-G-80BK-HP1	Needle gasket Scraper
ø100	SCG-G-100BK-HP1	Lub-keeper

With rubber cushion

Tube bore (mm)	Kit No	Repair parts	
ø32	SCG-G-32DK-HP1	Rod packing	
ø40	SCG-G-40DK-HP1	Cylinder gasket	
ø50	SCG-G-50DK-HP1	Piston packing Wear ring	
ø63	SCG-G-63DK-HP1	Needle gasket Cushion rubber	
ø80	SCG-G-80DK-HP1	Scraper	
ø100	SCG-G-100DK-HP1	Lub-keeper	

SM-A10865-A/3 5. TROUBLESHOOTING

5. TROUBLESHOOTING

5.1 Problems, Causes, and Solutions

If the product does not operate properly, check the table below for a possible solution.

5.1.1 Cylinder

Problem	Cause	Solution
	No pressure or insufficient pressure is applied.	Secure sufficient pressure.
Finger does not	No signal is input to directional control valve.	Repair the control circuit.
operate.	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Piston packing is damaged.	Replace the packing.
	Speed is lower than minimum working piston speed.	Mitigate load fluctuation.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
Finger does not operate smoothly.	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.
	Load is too large.	Increase the pressure. Enlarge the bore size.
	Speed control valve has meter-in circuit.	Change the mounting direction of the speed control valve.
Finger is damaged or deformed.	Force of shock due to high-speed actuation is excessive.	Decrease the speed. Lighten the load. Install a more effective cushion mechanism (external cushion mechanism).
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.

SM-A10865-A/3 5. TROUBLESHOOTING

5.1.2 Switch

Problem	Cause	Solution
	Contact is welded.	Replace the switch.
Switch turns on but indicator does not	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
blink.	Indicator is damaged.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Cables are disconnected.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Voltage is wrong.	Use specified voltage.
Ouritale dans mat	Switch is not mounted in right place.	Mount the switch in right place.
Switch does not turn on.	Switch is not positioned correctly.	Position and tighten the switch correctly.
	Switch is facing opposite direction.	Mount the switch so that it faces the correct direction.
	Load (relay) cannot respond for intermediate position detection.	Lower the speed. Replace the relay with one recommended by CKD.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Piston is not moving.	Move the piston.
	Contact is welded.	Replace the switch.
Switch does not turn off.	Rating of relay is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Ambient temperature is too high or too low.	Use the switch at an ambient temperature of −10°C to 60°C.
	Magnetic field is nearby.	Install a magnetic shield.
_	External signal is faulty.	Check the external circuit.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

6. REFERENCE INFORMATION

SCG standard type instruction manual No....SM-363444-A
 The mounting method of cylinder and switch, switch wiring method, disassembly and assembly method are the same as the SCG standard type. So please also confirm the above SCG standard type instruction manual.

SM-A10865-A/3 7. WARRANTY PROVISIONS

7. WARRANTY PROVISIONS

7.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- · Failure caused by incorrect use such as careless handling or improper management.
- · Failure not caused by the product.
- · Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

7.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.