

Environment-Resistant Round Shaped Cylinder

SCM-G-HP1 Series

INSTRUCTION MANUAL

SM-A12094-A/3



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

PREFACE

Thank you for purchasing CKD's **"SCM-G-HP1 Series" Environment-Resistant Round shaped cylinder**.

This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, piping, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the fluid control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414, JIS B 8370, JFPS 2008 (the latest edition of each standard), the High Pressure Gas Safety Act, the Industrial Safety and Health Act, other safety rules, organization standards, relevant laws and regulations




In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:

**Thoroughly read and understand this Instruction Manual
before using the product.**

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.



Indicates general precautions and tips on using the product.

Precautions on Product Use

WARNING

The product must be handled by a qualified person who has extensive knowledge and experience.

The product is designed and manufactured as a device or part for general industrial machinery.

Use the product within the specifications.

The product must not be used beyond its specifications. Also, the product must not be modified and additional work on the product must not be performed.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shut-off circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

Do not handle the product or remove pipes and devices until confirming safety.

- Inspect and service the machine and devices after confirming the safety of the entire system. Also, turn off the energy source (air supply or water supply) and power to the relevant facility. Release compressed air from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

Precautions on Design and Selection

CAUTION

FP Series: Cautions

Bearings used in cylinders contain trace amounts of mineral oil. Within the product specifications range, it is processed so as not to discharge, but please carefully consider the installation location.

Precautions on Product Disposal

CAUTION

When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.

CONTENTS


PREFACE.....	i
SAFETY INFORMATION	ii
Precautions on Product Use.....	iii
Precautions on Design and Selection	iv
Precautions on Product Disposal	iv
CONTENTS.....	v
1. PRODUCT OVERVIEW	1
1.1 Model Number Indication.....	1
1.1.1 Product model number	1
1.1.2 How to order mounting brackets	4
1.1.3 How to order switch.....	5
1.2 Specifications.....	6
1.2.1 Product specifications	6
2. INSTALLATION	10
2.1 Environment.....	10
2.2 Unpacking	10
2.3 Mounting	10
2.4 Piping	11
2.5 Wiring	12
3. USAGE.....	13
3.1 Using the Cylinder.....	13
3.2 Using the Switch	14
4. MAINTENANCE AND INSPECTION.....	15
4.1 Periodic Inspection.....	16
4.1.1 Inspection item	16
4.1.2 Maintenance of the product.....	16
4.1.3 Maintenance of the circuit	16
4.2 Disassembly method,Assembly method	17
5. TROUBLESHOOTING.....	18
5.1 Problems, Causes, and Solutions	18
5.1.1 Cylinder	18
5.1.2 Switch	19
6. REFERENCE INFORMATION.....	20
7. WARRANTY PROVISIONS	21
7.1 Warranty Conditions	21
7.2 Warranty Period	21

1. PRODUCT OVERVIEW

1.1 Model Number Indication

1.1.1 Product model number

■ Example of model number indication : SCM-G-HP1 series

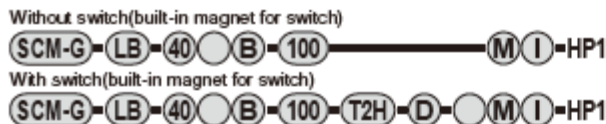

A Mounting
*1

B Bore size

C Port thread

D Cushion

E Stroke

F Switch model No.
*3
*4

G Switch quantity

H Switch mounting

I Option
*6

J Accessory
*7

Code	Description								
A Mounting									
	Bore size (ø)	20	25	32	40	50	63	80	100
00	Basic	●	●	●	●	●	●	●	●
LB	Axial foot	●	●	●	●	●	●	●	●
FA	Rod side flange	●	●	●	●	●	●	●	●
FB	Head side flange	●	●	●	●	●	●	●	●
CA	Eye bracket	●	●	●	●	●	●	●	●
CB	Clevis bracket (pin and snap ring attached)	●	●	●	●	●	●	●	●
TA	Rod side trunnion	●	●	●	●	●	●	●	●
TB	Head side trunnion	●	●	●	●	●	●	●	●
B Bore size (mm)									
20	ø20								
25	ø25								
32	ø32								
40	ø40								
50	ø50								
63	ø63								
80	ø80								
100	ø100								
C Port thread									
Blank	Rc thread								
N	NPT thread (made to order) With air cushion: ø32 and over								
G	G thread (made to order) With air cushion: ø32 and over								
D Cushion									
B	With two-sided air cushion								
R	Rod side air cushioned								
H	Head side air cushioned								
D	With two-sided rubber cushion								
E Stroke (mm)									
Bore size		Stroke *2		Custom Stroke					
ø20 to ø32		10 to 1000		In 1 mm increments					
ø40 to ø100		10 to 1500							
F Switch model No.									
Lead wire Straight	Lead wire L-shaped	Real Port Proximity	Voltage AC	DC	Display			Lead wire	
T0H*	T0V*		●	●	1-color display			2-wire	
T5H*	T5V*		●	●	No indicator lamp				
T8H*	T8V*		●	●	1-color display				
T1H*	T1V*		●	●	1-color display			2-wire	
T2H*	T2V*		●	●					
T3H*	T3V*		●	●					
T2HR3	T2VR3		●	●	1-color display			2-wire	
T3PH*	T3PV*		●	●	Bending resistant lead wire				
T2WH*	T2WV*		●	●	1-color display (made to order)			3-wire	
T2YH*	T2YV*	●	●	2-color display					
T3WH*	T3WV*	●	●						
T3YH*	T3YV*	●	●						
T2YD*	-	●	●	2-color display			2-wire		
T2YDT*	-	●	●	AC magnetic field					
T2JH*	T2JV*	●	●	1-color display off-delay			2-wire		
* Lead wire length									
Blank	1 m (standard)								
3	3 m (option)								
5	5 m (option)								
G Switch quantity									
R	1 on rod side								
H	1 on head side								
D	2								
T	3								
4	4 (when there are more than 4 switches, indicate switch quantity.)								
H Switch mounting									
Blank	Rail method								
Z	Band method								
I Option									
Q	Switch rail attached at shipment								
M	Piston rod material (stainless steel)								
P6	Copper and PTFE free								
J Accessory									
	Bore size (ø)	20	25	32	40	50	63	80	100
I	Rod eye	●	●	●	●	●	●	●	●
Y	Rod clevis (pin and snap ring attached)	●	●	●	●	●	●	●	●
B1	Eye bracket								
B2	Clevis bracket	●	●	●	●	●	●	●	●

Note 1: Mounting bracket will be shipped with the product. However, mounting types: LB and FA are assembled at shipment. In addition, when the mounting type is 00, it cannot be installed on the rod side.

Note 2: Refer to page 3 for the min. stroke length with switch.

Note 3: Switches other than "[F : Switch model No.] are also available. (Made-to-order) Refer to "Pneumatic Cylinders I (No. CB-029SA)" for details.

Note 4: T8H/V switches cannot be mounted when the bore size is ø20 to ø40 and switch mounting is the rail type.

Note 5: Refer to "Pneumatic Cylinders I" (CB-029SA) for made-to-order specifications of rod end form.

Note 6: "Q" (switch rail attached at shipment) is not available for "Z" switch mounting.

Note 7: "I" and "Y" cannot be selected together.

Note 8: Switches are shipped with the product. Contact CKD if assembling before shipment is necessary.

■ Example of model number indication : SCM-G-FP1-HP1 series

Without switch (built-in magnet for switch)
SCM-G-LB-40-B-100-M-FP1-I-HP1

With switch (built-in magnet for switch)
SCM-G-LB-40-B-100-T2H-D-M-FP1-I-HP1

A Mounting
 *1

B Bore size

C Port thread

D Cushion

E Stroke

F Switch model No.
 *3
 *4

G Switch quantity

H Switch mounting

I Option
 *6

J Accessory
 *7

Note 1: Mounting bracket will be shipped with the product. However, mounting types: LB and FA are assembled at shipment. In addition, when the mounting type is 00, it cannot be installed on the rod side.

Note 2: Refer to page 3 for the min. stroke length with switch.

Note 3: Switches other than "[F: Switch model No.]" are also available. (Made-to-order) Refer to "Pneumatic Cylinders I (No. CB-029SA)" for details.

Note 4: T8H/V switches cannot be mounted when the bore size is ø20 to ø40 and switch mounting is the rail type.

Note 5: Refer to "Pneumatic Cylinders I" (CB-029SA) for made-to-order specifications of rod end form.

Note 6: "Q" (switch rail attached at shipment) is not available for "Z" switch mounting.

Note 7: "I" and "Y" cannot be selected together.

Note 8: Switches are shipped with the product. Contact CKD if assembling before shipment is necessary.

Code	Description
A Mounting	
	Bore size (ø)
00	Basic
LB	Axial foot
FA	Rod side flange
FB	Head side flange
CA	Eye bracket
CB	Clevis bracket (pin and snap ring attached)
TA	Rod side trunnion
TB	Head side trunnion

B Bore size (mm)	
20	ø20
25	ø25
32	ø32
40	ø40
50	ø50
63	ø63
80	ø80
100	ø100

C Port thread	
Blank	Rc thread
N	NPT thread (made to order) With air cushion: ø32 and over
G	G thread (made to order) With air cushion: ø32 and over

D Cushion	
B	With two-sided air cushion
R	Rod side air cushioned
H	Head side air cushioned
D	With two-sided rubber cushion

E Stroke (mm)		
Bore size	Stroke *2	Custom Stroke
ø20 to ø32	10 to 1000	In 1 mm increments
ø40 to ø100	10 to 1500	

F Switch model No.					
Lead wire	Lead wire	Lead wire	Voltage	Display	Lead wire
Straight	L-shaped		AC DC		
T0H*	T0V*	Rod	● ●	1-color display	2-wire
T5H*	T5V*		● ●	No indicator lamp	
T8H*	T8V*		● ●	1-color display	
T1H*	T1V*		● ●	1-color display	
T2H*	T2V*	Proximity	● ●	1-color display	2-wire
T3H*	T3V*		● ●	1-color display	3-wire
T2HR3	T2VR3		● ●	1-color display	2-wire
T3PH*	T3PV*		● ●	Bending resistant lead wire	
T2WH*	T2WV*		● ●	1-color display (made to order)	3-wire
T2YH*	T2YV*		● ●	2-color display	2-wire
T3WH*	T3WV*		● ●	2-color display	3-wire
T3YH*	T3YV*		● ●	2-color display	2-wire
T2YD*	-		● ●	AC magnetic field	
T2YDT*	-		● ●	1-color display off-delay	
T2JH*	T2JV*		● ●		2-wire

* Lead wire length	
Blank	1 m (standard)
3	3 m (option)
5	5 m (option)

G Switch quantity	
R	1 on rod side
H	1 on head side
D	2
T	3
4	4 (when there are more than 4 switches, indicate switch quantity.)

H Switch mounting	
Blank	Rail method
Z	Band method

I Option	
Q	Switch rail attached at shipment
M	Piston rod material (stainless steel)

J Accessory	
	Bore size (ø)
I	Rod eye
Y	Rod clevis (pin and snap ring attached)
B1	Eye bracket
B2	Clevis bracket

■ Stroke length

Bore size (mm)	Standard stroke (mm)	Min. stroke length (mm)	Max. stroke length (mm)
φ20	25,50,75,100,125,150,200,250,300	10	1000
φ25			
φ32			
φ40			1500
φ50			
φ63			
φ80			
φ100			

※ The custom stroke length is available in 1 mm increments.

■ Min. stroke length with switch

● Switch mounting: Rail

Switch quantity	1				2			3				4			
	Proximity			Reed	Proximity		Reed	Proximity			Reed	Proximity			Reed
	T2 T3	T2W T3W	T※Y		T2 T3	T※Y		T2 T3	T2W T3W	T※Y		T2 T3	T2W T3W	T※Y	
Bore size (mm)															
φ20	10				25			50	70	70	55	55	70	70	55
φ25	10				25			50	70	70	55	55	70	70	55
φ32	10				25			50	70	70	55	55	70	70	55
φ40	10				25			50	70	70	55	55	70	70	55
φ50	10				25			50	65	65	55	55	65	65	55
φ63	10				25			50	65	65	55	55	65	65	55
φ80	10				25			50	65	65	55	55	65	65	55
φ100	10				25			50	65	65	55	55	65	65	55

※ For types with one switch and a Stroke of 10mm or more and less than 25mm, trunnion mounting is not available since the switch rail mounting position is changed. For the mounting position, refer to "Pneumatic Cylinders I (No. CB-029SA)".

● Switch mounting: Band

Switch mounting: Band																
Switch quantity		1			2				3				4			
		Proximity			Reed	Proximity			Reed	Proximity			Reed	Proximity		
Bore size (mm)	T2 T3	T2W T3W	T※Y	T0 T5 T2 T3		T2W T3W	T※Y	T0 T5 T2 T3		T2W T3W	T※Y	Reed		T0 T5 T2 T3	T2W T3W	T※Y
φ20	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ25	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ32	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ40	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ50	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ63	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ80	10			25	30	35	25	50	55	55	50	70	75	80	70	
φ100	10			25	30	35	25	50	55	55	50	70	75	80	70	

1.1.2 How to order mounting brackets

■ SCM-G-HP1 Series

Bore size (mm)	φ20	φ25	φ32	φ40
Mounting bracket				
Foot (LB)	SCM-LB-20-HP1	SCM-LB-25-HP1	SCM-LB-32-HP1	SCM-LB-40-HP1
Flange (FA/FB)	SCM-FA-20-HP1	SCM-FA-25-HP1	SCM-FA-32-HP1	SCM-FA-40-HP1
Eye bracket (CA)	SCM-CA-20	SCM-CA-25	SCM-CA-32	SCM-CA-40
Clevis bracket (CB)	—	—	—	—
Trunnion (TA/TB)	SCM-TA-20	SCM-TA-25	SCM-TA-32	SCM-TA-40

Bore size (mm)	φ50	φ63	φ80	φ100
Mounting bracket				
Foot (LB)	SCM-LB-50-HP1	SCM-LB-63-HP1	SCM-LB-80-HP1	SCM-LB-100-HP1
Flange (FA/FB)	SCM-FA-50-HP1	SCM-FA-63-HP1	SCM-FA-80-HP1	SCM-FA-100-HP1
Eye bracket (CA)	SCM-CA-50	SCM-CA-63	—	—
Clevis bracket (CB)	—	—	SCM-CB-80	SCM-CB-100
Trunnion (TA/TB)	SCM-TA-50	SCM-TA-63	—	—

※ All mounting brackets have mounting bolts included.
The foot mounting bracket (LB) is provided as 2 pcs./set.

■ SCM-G-FP1-HP1 Series

Bore size (mm)	φ20	φ25	φ32	φ40
Mounting bracket				
Foot (LB)	SCM-LB-20-HP1	SCM-LB-25-HP1	SCM-LB-32-HP1	SCM-LB-40-HP1
Flange (FA/FB)	SCM-FA-20-HP1	SCM-FA-25-HP1	SCM-FA-32-HP1	SCM-FA-40-HP1
Eye bracket (CA)	SCM-CA-20	SCM-CA-25	SCM-CA-32	SCM-CA-40
Clevis bracket (CB)	—	—	—	—
Trunnion (TA/TB)	SCM-TA-20-FP1	SCM-TA-25-FP1	SCM-TA-32-FP1	SCM-TA-40-FP1


Bore size (mm)	φ50	φ63	φ80	φ100
Mounting bracket				
Foot (LB)	SCM-LB-50-HP1	SCM-LB-63-HP1	SCM-LB-80-HP1	SCM-LB-100-HP1
Flange (FA/FB)	SCM-FA-50-HP1	SCM-FA-63-HP1	SCM-FA-80-HP1	SCM-FA-100-HP1
Eye bracket (CA)	SCM-CA-50	SCM-CA-63	—	—
Clevis bracket (CB)	—	—	SCM-CB-80-FP1	SCM-CB-100-FP1
Trunnion (TA/TB)	SCM-TA-50-FP1	SCM-TA-63-FP1	—	—

※ All mounting brackets have mounting bolts included.
The foot mounting bracket (LB) is provided as 2 pcs./set.


1.1.3 How to order switch

[Switch mounting: Rail]

● Switch body + mounting rail set

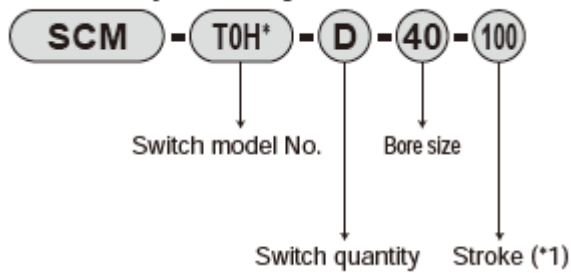

● Mounting rail only

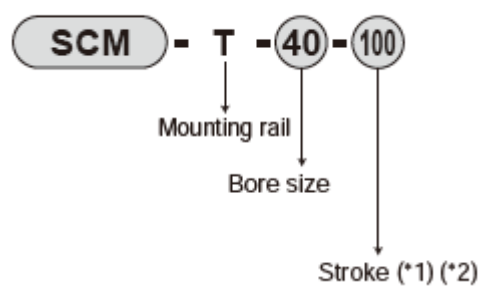


Note 1: Indicate X if the stroke length exceeds 300 mm. If exceeding 300 mm, a short rail (with 100mm switch adjustment travel distance) will be included per switch.

Note 2: If indicating X when ordering mounting rails only, order the same number of rails as that of applicable switches.

[Switch mounting: Band]


● Switch body + mounting bracket set + band

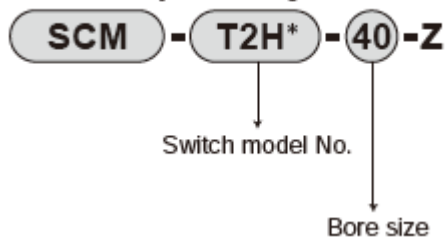

● Mounting bracket set + band



[Switch body only]

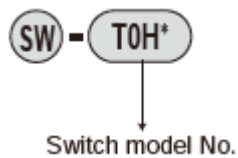

1.2 Specifications

1.2.1 Product specifications

Model		SCM-G-HP1							
Descriptions		SCM-G-FP1-HP1							
Bore size mm		φ20	φ25	φ32	φ40	φ50	φ63	φ80	φ100
Actuation		Double acting							
Working fluid		Compressed air							
Max. working pressure MPa		1.0							
Min. working pressure MPa		0.1			0.15	0.1			
Proof pressure MPa		1.6							
Ambient temperature °C		－10 to 60 (no freezing)							
Port size	With rubber cushion	Rc1/8				Rc1/4		Rc3/8	Rc1/2
	With air cushion	M5		Rc1/8		Rc1/4		Rc3/8	Rc1/2
Stroke tolerance mm	With rubber cushion	$+1.4_0$ (Up to 1000)			$+1.4_0$ (Up to 1500)	$+2.3_0$ (Up to 1000), $+2.7_0$ (1001 to 1500)			
	With air cushion	$+1.4_0$ (Up to 1000)			$+1.4_0$ (Up to 1500)	$+1.4_0$ (Up to 1000), $+1.8_0$ (1001 to 1500)			
Working piston speed mm/s		30 to 1000 (Operate within the allowable absorbed energy.)							
Cushion		Either air cushion or rubber cushion can be selected							
Effective air cushion length mm		8.1	8.1	8.6	8.6	13.4	13.4	15.4	15.4
Lubrication		Not required							
Allowable absorbed energy J	With rubber cushion	0.1	0.2	0.5	0.9	1.6	1.6	3.3	5.8
	With air cushion	0.8	1.2	2.5	3.7	8.0	14.4	25.4	45.6
	No cushion	—	—	—	—	0.057	0.057	0.112	0.153

Note 1: The values of allowable absorbed energy for "No cushion" are the allowable absorbed energy on the non-specified side when an air cushion is selected for the other side ("R" Head side, "H" Rod side).

Note 2: Without a cushion, large energy generated by the external load cannot be absorbed. Please provide an external shock absorber.

■ Switch specifications

Descriptions	Reed 2-wire type						
	T0H/V		T5H/V		T8H/V		
Applications	For programmable controller, relay		For programmable controller, relay, IC circuit(without indicator), serial connection		For programmable controller, relay		
Power supply voltage	—						
Load voltage	12/24VDC	110VAC	5/12/24VDC	110VAC	12/24VDC	110VAC	220VAC
Load current	5mA to 50mA	7mA to 20mA	50mA or less	20mA or less	5mA to 50mA	7mA to 20mA	7mA to 10mA
Current consumption	—						
Internal voltage drop	3V or less (For DC, when the load current is 30mA)		0.1V or less (Internal resistance 0.5Ω or less)		4V or less		
Indicator	Red LED (Lights up when turned on)		No indicator		Red LED (Lights up when turned on)		
Leakage current	—						
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)				Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)		
Shock resistance	294m/s ²						
Insulation resistance	20 MΩ or more with 500 VDC megger				100 MΩ or more with 500 VDC megger		
Withstand voltage	No abnormality after applying 1000 VAC for one minute				No abnormality after applying 1500 VAC for one minute		
Ambient temperature	-10°C to 60°C						
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant						

Descriptions	Proximity 2-wire type			
	1-color display		1-color display off-delay	2-color display
	T1H/V	T2H/V	T2JH/V	T2YH/V
Applications	For programmable controller, relay,compact solenoid valve	Only for programmable controller		
Power supply voltage	—			
Load voltage	85 to 265VAC	10 to 30VDC		
Load current	5mA to 100mA	5mA to 20mA		
Current consumption	—			
Internal voltage drop	10% or less of load voltage	4V or less		
Indicator	Red LED (Lights up when turned on)			Red/green LED (Lights up when turned on)
Leakage current	1 mA or less with 100 VAC,2 mA or less with 200 VAC	1 mA or less		
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.3 mm ²)	
Shock resistance	980m/s ²			
Insulation resistance	100 MΩ or more with 500 VDC megger	20 MΩ or more with 500 VDC megger	100 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1500 VAC for one minute	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C			
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant			

Descriptions	Proximity 3-wire type		
	1-color display	1-color display (PNP output)(made to order)	2-color display
	T3H/V	T3PH/V	T3YH/V
Applications	For programmable controller, relay		
Output method	NPN	PNP	NPN
Power supply voltage	10 to 28VDC		
Load voltage	30VDC or less		
Load current	100mA or less		50mA or less
Current consumption	10 mA or less at 24 VDC	10 mA or less at 24 VDC	10 mA or less at 24 VDC
Internal voltage drop	0.5V or less		
Indicator	Red LED (Lights up when turned on)	Yellow LED (Lights up when turned on)	Red/green LED (Lights up when turned on)
Leakage current	10 μ A or less		
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm ²)		Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.3 mm ²)
Shock resistance	980m/s ²		
Insulation resistance	20 M Ω or more with 500 VDC megger		100 M Ω or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute		
Ambient temperature	-10°C to 60°C		
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant		

Descriptions	Proximity 2-wire type	
	2-color display for AC magnetic field	
	T2YD	T2YDT
Applications	Only for programmable controller	
Load voltage	24VDC \pm 10%	
Load current	5mA to 20mA	
Internal voltage drop	6V or less	
Indicator	Red/green LED (Lights up when turned on)	
Leakage current	1.0mA or less	
Output delay time (Delay ON, delay OFF)	60ms or less	
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.5 mm ²)	Standard is 1 m (Flame-resistant vinyl cabtyre 2 core cord, 0.5 mm ²)
Shock resistance	980m/s ²	
Insulation resistance	100 M Ω or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 2,3-wire type	
	T2WH/V	T3WH/V
Applications	Only for programmable controller	For programmable controller, relay
Power supply voltage	—	10 to 28VDC
Load voltage	24VDC±10%	30VDC or less
Load current	5mA to 20mA	50mA or less
Current consumption	—	10 mA or less at 24 VDC
Internal voltage drop	4V or less	0.5V or less
Indicator	Red/green LED (Lights up when turned on)	
Leakage current	1mA or less	10 µA or less
Lead wire	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)	Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm ²)
Shock resistance	980m/s ²	
Insulation resistance	20 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

Descriptions	Proximity 2-wire type	
	T2HR3,T2VR3(Bend resist lead wire)	
Applications	Only for programmable controller	
Power supply voltage	—	
Load voltage	10 to 30VDC	
Load current	5mA to 20mA	
Current consumption	—	
Internal voltage drop	4V or less	
Indicator	Red LED (Lights up when turned on)	
Leakage current	1mA or less	
Lead wire	Standard is 3m (Elasticity, oilresistantvinyl cabtyre cable2-conductor 0.2 mm ²)	
Shock resistance	980m/s ²	
Insulation resistance	20 MΩ or more with 500 VDC megger	
Withstand voltage	No abnormality after applying 1000 VAC for one minute	
Ambient temperature	-10°C to 60°C	
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant	

2. INSTALLATION

2.1 Environment


CAUTION

When using the product in a cutting, casting, or welding plant, install a cover to prevent foreign matters such as cutting fluid, chips, powder, and dust from entering.

Do not use the equipment in the following environments.

- Where cutting oil can splash onto the product (abrasives and polishing powder in the oil can abrade the sliding section)
- Where organic solvents, chemicals, acids, alkalis, and kerosene are present
- Where water can splash onto the product

- Use the product within the following ambient temperature range.
–10°C to 60°C (no freezing)
- For compressed air, use clean and dry air that has been passed through an air filter. Use an air filter in the circuit and be careful with the filtration rate (a filter that removes particles exceeding 5 µm is desirable), flow rate, and mounting position (install the filter near the directional control valve).

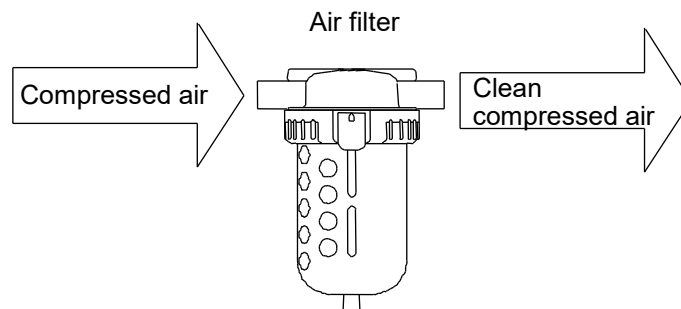

2.2 Unpacking

- Check that the model number ordered and the model number indicated on the product are the same.
- Check the exterior of the product for any damage.
- When storing the product, take proper measures to prevent foreign matters from entering the cylinder.

2.3 Mounting


- The mounting method of cylinder and switch are the same as the SCM standard type. For details, refer to the SCM standard type instruction manual described in Section 6 "Reference information".

2.4 Piping

WARNING


Insert the tube into the fitting until it firmly rests on the tube end and make sure that the tube does not come off before use.

- Use pipes that are made of corrosion-resistant materials after the filter such as zinc-plated pipes, nylon tubes, and rubber tubes.
- Use pipes with an effective cross-sectional area that allows the cylinder to achieve the predetermined piston speed.
- Install the filter for removing rust, foreign matters, and drainage from the piping as close as possible to the solenoid valve.
- Observe the effective thread length for the gas pipes.
- In addition, chamfer the threaded end of the pipes by about a 1/2 pitch.

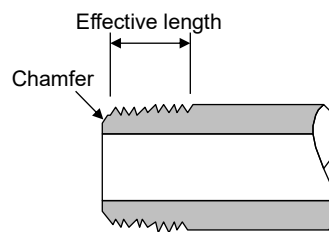

■ Pipe cleaning

Before piping, blow air into the pipes to clean the interior and to remove cutting chips and foreign matters.

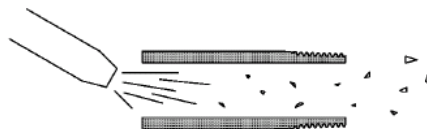

■ Seal material


Use a seal tape or a seal material to stop leakage from piping.

Apply a seal tape or seal material to the screw threads leaving two or more threads at the pipe end uncovered or uncoated. If the pipe end is fully covered or coated, a shred of seal tape or residue of seal material may enter inside of the pipes or device and cause a failure.

When using a seal tape, wind it around the screw threads in the direction opposite from the screw threads and press it down with your fingers to attach it firmly.

When using a liquid seal material, be careful not to apply it to resin parts. The resin parts can become damaged and this may lead to a failure or malfunction.

Also, do not apply seal material to the internal threads.

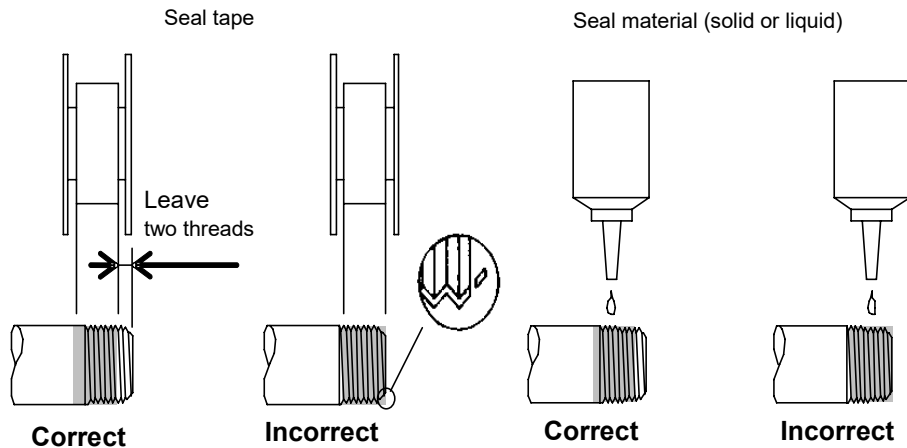

2.5 Wiring

- The switch wiring method is the same as the SCM standard type. For details, refer to the SCM standard type instruction manual described in Section 6 "Reference information".

3. USAGE

3.1 Using the Cylinder

■ Working pressure range

Use the cylinder within the following pressure range:

Model	Bore size(mm)	Pressure range (MPa)
SCM-G-HP1 SCM-G-FP1-HP1	φ20 to φ32	0.1 to 1.0
	φ40	0.15 to 1.0
	φ50 to φ100	0.1 to 1.0

■ How to adjust the cushion

Either air cushion or rubber cushion can be selected for this type of cylinder.

The adjustment method of the air cushion is the same as the SCM standard type.

For details, refer to the SCM standard type instruction manual described in Section 6 "Reference information".

The rubber cushion cannot be adjusted.


It is advisable to install an additional external stopper when the kinetic energy is excessive. Tolerable kinetic energy is as the graphs below indicate.

Bore size (mm)		φ20	φ25	φ32	φ40	φ50	φ63	φ80	φ100
Allowable absorbed energy (J)	With rubber cushion	0.1	0.2	0.5	0.9	1.6	1.6	3.3	5.8
	With air cushion	0.8	1.2	2.5	3.7	8.0	14.4	25.4	45.6

■ Adjustment of the piston speed

Mount a speed controller to adjust the piston speed.

< Basic circuit diagram >

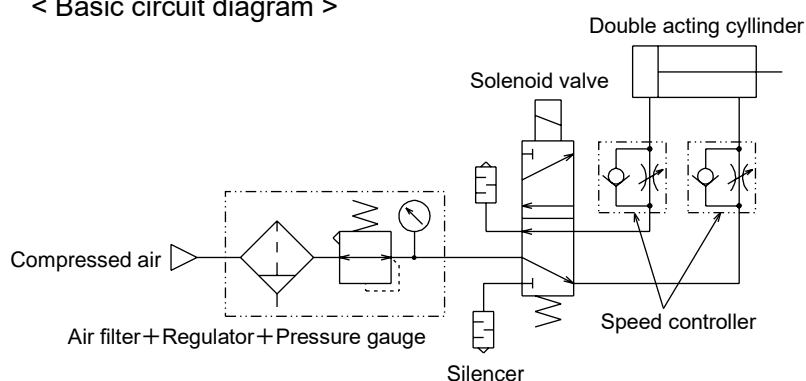

3.2 Using the Switch

■ Magnetic environment

Do not use the switch in a place where there is a strong magnetic field or large current (such as a large magnet or welding machine). If switch mounted cylinders are installed close to each other and in parallel or if magnetic substances are moving close to the cylinder, the magnetic forces may interfere with each other and affect the detection accuracy.

■ Wiring of lead wires

When wiring, be careful not to apply bending stress and tension repeatedly to lead wires. For movable sections, use wiring material with the same level of bending resistance as the robot wire.

■ Ambient temperature

Do not use the switch in a high temperature environment (60°C or more). Using the switch in a high temperature environment may affect its performance due to the temperature characteristics of magnetic parts and electronic parts.

■ Intermediate position detection

When the switch is operated at an intermediate position in the length of the stroke, the relay will not respond if the piston speed is too high.

■ Shock

Do not subject the product to strong vibrations and shocks when transporting the cylinder and mounting and adjusting the switch.

4. MAINTENANCE AND INSPECTION

WARNING

Do not touch electrical wiring connections (bare live parts) of cylinders equipped with switches, and other such cylinders.

Do not touch live parts with bare hands.

An electric shock may occur.

Turn off the power, release the residual pressure and make sure that there is no residual pressure before disassembling or inspecting the cylinder.

CAUTION

Plan and perform daily and periodic inspections so that maintenance can be managed properly.

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunction) or accidents.

4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection once or twice a year.

4.1.1 Inspection item

- Actuation state
- Change in the piston speed and cycle time
- External and internal leakages
- Damage and deformation of the piston rod
- Stroke abnormality


Check the items above and refer to "5. TROUBLESHOOTING" to correct any abnormality found. If there are loose threaded connections, tighten them.

4.1.2 Maintenance of the product

This cylinder does not require lubrication.

4.1.3 Maintenance of the circuit

- Discharge the drainage accumulated in the air filter periodically before it exceeds the specified line.
- Since foreign matters such as carbide (carbon or tar substance) from the compressor oil may contaminate the circuit and cause an operation fault of the solenoid valve or the cylinder, be careful when performing maintenance or inspection of the compressor.

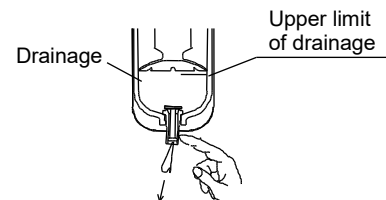

4.2 Disassembly method, Assembly method

If any failure occurs such as air leakage, disassemble the product, referring to the internal structural diagram and instruction manual of SCM (standard), then exchange the parts in the consumable parts list.



- Follow reverse steps of disassembling during the process of assembling after cleaning parts. Carefully avoid giving damage to packings to prevent malfunction or air leakage.
- When mounting the unit, confirm that each packing is installed in the correct direction.

Consumable parts list

●With air cushion

Bore size (mm)	Kit no	Remarks
φ20	SCM-G-20BK-HP1	Rod packing Cylinder gasket Cushion rubber <small>Note 1</small> Piston packing Wear ring Needle gasket Holder gasket Cushion packing Scraper Lub-keeper
φ25	SCM-G-25BK-HP1	
φ32	SCM-G-32BK-HP1	
φ40	SCM-G-40BK-HP1	
φ50	SCM-G-50BK-HP1	
φ63	SCM-G-63BK-HP1	
φ80	SCM-G-80BK-HP1	
φ100	SCM-G-100BK-HP1	

Note 1: Cushion rubber is not included in ø50 to ø100.

●With rubber cushion

Bore size (mm)	Kit no	Remarks
φ20	SCM-G-20DK-HP1	Rod packing Cylinder gasket Cushion rubber Piston packing Wear ring Scraper Lub-keeper
φ25	SCM-G-25DK-HP1	
φ32	SCM-G-32DK-HP1	
φ40	SCM-G-40DK-HP1	
φ50	SCM-G-50DK-HP1	
φ63	SCM-G-63DK-HP1	
φ80	SCM-G-80DK-HP1	
φ100	SCM-G-100DK-HP1	

5. TROUBLESHOOTING

5.1 Problems, Causes, and Solutions

If the product does not operate properly, check the table below for a possible solution.

5.1.1 Cylinder

Problem	Cause	Solution
Does not operate.	No pressure or insufficient pressure is applied.	Secure sufficient pressure.
	No signal is input to directional control valve.	Repair the control circuit.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Piston packing is damaged.	Replace the packing.
Does not operate smoothly.	Speed is lower than minimum working piston speed.	Mitigate load fluctuation.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.
	Load is too large.	Increase the pressure. Enlarge the bore size.
	Speed control valve has meter-in circuit.	Change the mounting direction of the speed control valve.
Damaged or deformed.	Force of shock due to high-speed actuation is excessive.	Decrease the speed. Lighten the load. Install a more effective cushion mechanism (external cushion mechanism).
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.

5.1.2 Switch

Problem	Cause	Solution
Switch turns on but indicator does not blink.	Contact is welded.	Replace the switch.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Indicator is damaged.	Replace the switch.
	External signal is faulty.	Check the external circuit.
Switch does not turn on.	Cables are disconnected.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Voltage is wrong.	Use specified voltage.
	Switch is not mounted in right place.	Mount the switch in right place.
	Switch is not positioned correctly.	Position and tighten the switch correctly.
	Switch is facing opposite direction.	Mount the switch so that it faces the correct direction.
	Load (relay) cannot respond for intermediate position detection.	Lower the speed. Replace the relay with one recommended by CKD.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
Switch does not turn off.	Piston is not moving.	Move the piston.
	Contact is welded.	Replace the switch.
	Rating of relay is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Ambient temperature is too high or too low.	Use the switch at an ambient temperature of -10°C to 60°C .
	Magnetic field is nearby.	Install a magnetic shield.
	External signal is faulty.	Check the external circuit.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

6. REFERENCE INFORMATION

- SCM standard type instruction manual No....SM-227259-A
The mounting method of cylinder and switch, switch wiring method, disassembly and assembly method are the same as the SCM standard type. So please also confirm the above SCM standard type instruction manual.

7. WARRANTY PROVISIONS

7.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

7.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.