

Pencil Shaped Cylinder SCPD3-HP1 Series

INSTRUCTION MANUAL

SM-A02490-A/3



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

PREFACE

Thank you for purchasing CKD's **"SCPD3-HP1 Series" Pencil Shaped Cylinder**.

This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, piping, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the fluid control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414, JIS B 8370, JFPS 2008 (the latest edition of each standard), the High Pressure Gas Safety Act, the Industrial Safety and Health Act, other safety rules, organization standards, relevant laws and regulations




In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:


**Thoroughly read and understand this Instruction Manual
before using the product.**

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

 DANGER	Indicates an imminent hazard. Improper handling will cause death or serious injury to people.
 WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.
 CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.

	Indicates general precautions and tips on using the product.
---	--

Precautions on Product Use

WARNING

The product must be handled by a qualified person who has extensive knowledge and experience.

The product is designed and manufactured as a device or part for general industrial machinery.

Use the product within the specifications.

The product must not be used beyond its specifications. Also, the product must not be modified and additional work on the product must not be performed.

The product is intended for use in devices or parts for general industrial machinery. It is not intended for use outdoors or in the conditions or environment listed below.

- In applications for nuclear power, railroad system, aviation, ship, vehicle, medical equipment, and equipment that directly touches beverage or food.
- For special applications that require safety including amusement equipment, emergency shut-off circuit, press machine, brake circuit, and safety measures.
- For applications where life or properties may be adversely affected and special safety measures are required.

(Exception is made if the customer consults with CKD prior to use and understands the specifications of the product. However, even in that case, safety measures must be taken to avoid danger in case of a possible failure.)

Do not handle the product or remove pipes and devices until confirming safety.

- Inspect and service the machine and devices after confirming the safety of the entire system. Also, turn off the energy source (air supply or water supply) and power to the relevant facility. Release compressed air from the system and use extreme care to avoid water or electric leakage.
- Since there may be hot or live parts even after operation has stopped, use extreme care when handling the product or removing pipes and devices.
- When starting or restarting a machine or device that incorporates pneumatic components, make sure that a safety measure (such as a pop-out prevention mechanism) is in place and system safety is secured.

Precautions on Product Disposal

CAUTION

When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.

CONTENTS


PREFACE	i
SAFETY INFORMATION	ii
Precautions on Product Use	iii
Precautions on Product Disposal	iii
CONTENTS	iv
1. PRODUCT OVERVIEW	1
1.1 Model Number Indication.....	1
1.1.1 Product model number	1
1.1.2 How to order mounting brackets	4
1.1.3 How to order switch.....	5
1.2 Specifications.....	7
1.2.1 Product specifications	7
1.2.2 Switch specifications	8
2. INSTALLATION	10
2.1 Environment.....	10
2.2 Unpacking	11
2.3 Mounting	11
2.3.1 Mounting the Body	11
2.3.2 Mounting the switch.....	12
2.4 Piping	15
2.5 Wiring	17
2.5.1 Proximity switch.....	17
2.5.2 Reed switch	20
3. USAGE	22
3.1 Using the Cylinder.....	22
3.2 Using the Switch	23
4. MAINTENANCE AND INSPECTION	24
4.1 Periodic Inspection.....	25
4.1.1 Inspection item	25
4.1.2 Maintenance of the product.....	25
4.1.3 Maintenance of the circuit	25
4.1.4 Internal structural diagram.....	26
5. TROUBLESHOOTING	27
5.1 Problems, Causes, and Solutions	27
5.1.1 Cylinder	27
5.1.2 Switch	28
6. WARRANTY PROVISIONS	29
6.1 Warranty Conditions	29
6.2 Warranty Period	29

1. PRODUCT OVERVIEW

1.1 Model Number Indication

1.1.1 Product model number

■ Example of model number indication: SCPD3-HP1 series

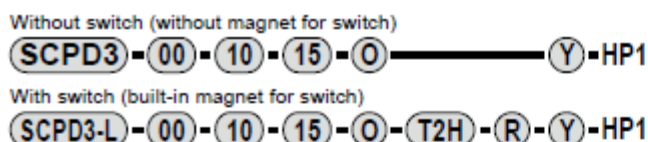

A Model No.	
B Mounting *1	
C Bore size	
D Stroke length	
E Head side port direction *1	
F Switch model No. *3, *6 * indicates the lead wire length.	
G Switch quantity	

Code	Description
Model No.	
SCPD3	Double acting
SCPD3-L	Double acting/with switch

Bore size (ø)		6	10	16
00	Basic	●	●	●
LS	Axial foot (one side) (rod side)	●	●	●
FA	Rod side flange	●	●	●
CB	Clevis bracket (pin and snap ring included)		●	●

C Bore size (mm)	
6	ø8
10	ø10
16	ø16

Stroke length (mm)		
Bore size	Stroke length *2	Custom stroke length
ø6	5 to 100	In 1 mm increments
ø10	5 to 150	
ø16	5 to 150	

E Head side port direction	
Blank	Vertical
0	Axial direction

F Switch model No.							
Lead wire straight type	Radial lead wire	Contact	Voltage		Indicator	Lead wire	
			AC	DC			
T0H*	T0V*	Reed	●	●	1-color display	2-wire	
T5H*	T5V*		●	●	Without indicator lamp		
T2H*	T2V*			●	1-color display		2-wire
T3H*	T3V*			●	display		3-wire
T2HR3	T2VR3	Proximity		●	1-color display Sensing resistant lead wire	2-wire	
T2WH*	T2WV*			●	2-color display	2-wire	
T3WH*	T3WV*			●	display	3-wire	

* Lead wire length	
Blank	1 m (standard)
3	3 m (option)
5	5 m (option)

e Switch quantity	
R	1 on rod side
H	1 on head side
D	2
T	3

Bore size (ø)		6	10	16
I	Rod eye		●	●
Y	Rod clevis (pin and snap ring included)		●	●
B1	Eye bracket		●	●
B2	Clevis bracket		●	●

Note1: The “CB” mounting is not available when the port direction is “0” (axial direction).

Note 2: Refer to page 3 for the min.stroke length with switch.

Note 3: Magnet is not built into the type without switch.

Note 4: “I” and “Y” cannot be selected together.

Note 5: Copper and PTFE free as standard.

Note 6: Switches are shipped with the product.

■ Example of model number indication : SCPD3-P4※-HP1 series

Without switch (without magnet for switch) *5

SCPD3 - 00 - 10 - 15 - O ————— P40 Y - HP1

With switch (built-in magnet for switch)

SCPD3-L - 00 - 10 - 15 - O - SW11 - R - P4 P40 Y - HP1

Code	Description
A Model No.	
SCPD3	Double acting
SCPD3-L	Double acting/with switch
B Mounting	
	Bore size (ø)
00	Basic
LS	Axial foot (one side) (rod side)
FA	Rod side flange
CB	Clevis bracket (pin and snap ring attached)
C Bore size (mm)	
6	ø6
10	ø10
16	ø16
D Stroke (mm)	
Bore size	Stroke
ø6	5 to 100
ø10	5 to 150
ø16	5 to 150
E Head side port direction	
Blank	Vertical
O	Axial direction
F Switch model No.	
For switch model number, refer to "Equipment related to rechargeable batteries P4* Series"(No.CC-1226A) .	
G Switch quantity	
R	1 on rod side
H	1 on head side
D	2
T	3
H Accessory	
	Bore size (ø)
I	Rod eye
Y	Rod clevis (pin and snap ring attached)
B1	Eye bracket
B2	Clevis bracket

Note 1: The "CB" mounting is not available when the port direction is "O" (axial direction).

Note 2: Magnet is not built into the type without switch.

Note 3: "I" and "Y" cannot be selected together.

Note 4: Switches are shipped with the product.





Note 5: Without switch type of HP1 is P4 specification.



■ Stroke length

Bore size(mm)	Standard stroke length(mm)	Min.stroke length(mm)
φ6	15,30,45,60	5
φ10		
φ16		

※ The custom stroke length is available in 1 mm increments.

■ Min.stroke length with switch

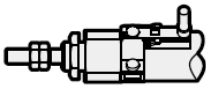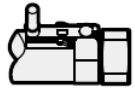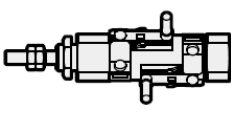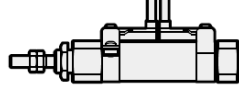Sketch	1		2	
	 Rod side mount	 Head side mount	 Defferent surface mounting	 Same surface mounting
Min.stroke length(mm)	5mm		10mm	28mm

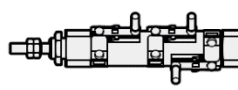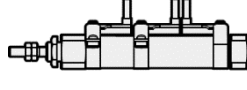Sketch	3	
	 Defferent surface mounting	 Same surface mounting
Min.stroke length(mm)	38mm	54mm

1.1.2 How to order mounting brackets

How to order mounting bracket

Bore size (mm)	$\phi 6$	$\phi 10$	$\phi 16$
Mounting bracket			
Foot (LS)	P2-LS-6	P2-LS-10	P2-LS-16
Flange (FA)	P2-FA-6	P2-FA-10	P2-FA-16

※The foot (LS) type mounting bracket is provided as 1 pc./set.

How to order mounting bracket P4

Bore size (mm)	$\phi 6$	$\phi 10$	$\phi 16$
Mounting bracket			
Foot (LS)	P2-LS-6	P2-LS-10	P2-LS-16
Flange (FA)	P2-FA-6	P2-FA-10	P2-FA-16

※The foot (LS) type mounting bracket is provided as 1 pc./set.


How to order mounting bracket P40

Bore size (mm)	$\phi 6$	$\phi 10$	$\phi 16$
Mounting bracket			
Foot (LS)	P2-LS-6-P40	P2-LS-10-P40	P2-LS-16-P40
Flange (FA)	P2-FA-6-P40	P2-FA-10-P40	P2-FA-16-P40

※The foot (LS) type mounting bracket is provided as 1 pc./set.


1.1.3 How to order switch

<Switch body + Mounting bracket set>

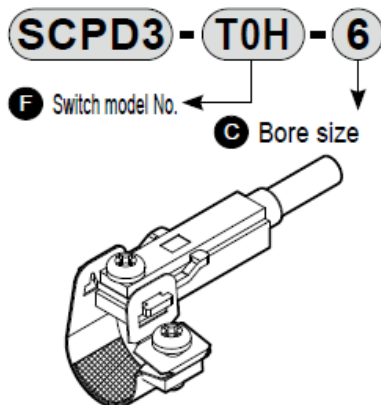


Please contact CKD for P40.

<Mounting bracket set + Fixing bracket >

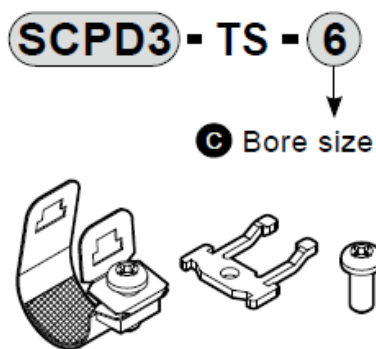


When 20 pcs or more are ordered, they will be packed together.
Please contact CKD for P40.

< Switch body (With fixing bracket) >

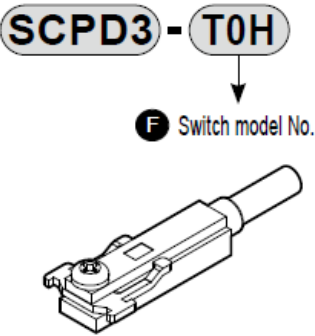

Note : The fixing bracket and cross-recessed pan head machinescrew are different from those for the T type standard switch.
Please contact CKD for P40.

<Mounting bracket set >

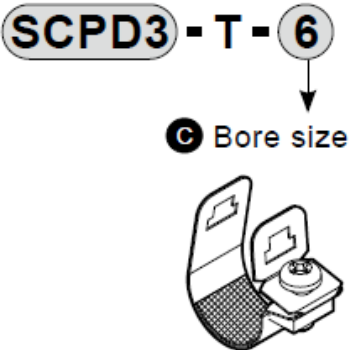

When 20 pcs or more are ordered, they will be packed together.

<How to order switch mounting bracket>

P4	SCP3D3-T-[Bore size]
P40	SCP3D3-T-[Bore size]-P40

1.2 Specifications

1.2.1 Product specifications

Model	SCPD3-HP1, SCPD3-L-HP1 SCPD3-P40-HP1, SCPD3-L-P40-HP1		
Descriptions			
Bore size	mm	φ6	φ10 φ16
Actuation		Double acting	
Working fluid		Compressed air	
Max. working pressure	MPa	1.0	
Min. working pressure	MPa	0.15	0.1
Proof pressure	MPa	1.6	
Ambient temperature	°C	-10 to 60 (no freezing)	
Port size		M5	
Stroke tolerance	mm	$\begin{smallmatrix} +1.0 \\ 0 \end{smallmatrix}$	
Working piston speed	mm/s	50 to 750	
Cushion		With rubber cushion	
Lubrication		Not required	
Allowable absorbed energy	J	0.012	0.041 0.162

1.2.2 Switch specifications

Descriptions	Reed 2-wire type			
	T0H/V		T5H/V	
Applications	For programmable controller, relay		For programmable controller, relay, IC circuit(without indicator), serial connection	
Power supply voltage	—			
Load voltage	12/24 VDC	110 VAC	5/12/24 VDC	110 VAC
Load current	5 mA to 50 mA	7 mA to 20 mA	50 mA or less	20 mA or less
Current consumption	—			
Internal voltage drop	3 V or less(For DC, when the load current is 30mA)		0.1 V or less(Internal resistance 0.5 Ω or less.)	
Indicator	Red LED (Lights up when turned on)		—	
Leakage current	—			
Lead wire ^{Note 1}	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)			
Shock resistance	294m/s ²			
Insulation resistance	20 MΩ or more with 500 VDC megger			
Withstand voltage	No abnormality after applying 1000 VAC for one minute			
Ambient temperature	-10°C to 60°C			
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant			

Descriptions	Proximity			
	2-wire type		3-wire type	
	T2H/V	T2WH/V	T3H/V	T3WH/V
Applications	Only for programmable controller		For programmable controller, relay	
Power supply voltage	—		10 to 28VDC	
Load voltage	10 VDC to 30 VDC	24VDC±10%	30VDC or less	
Load current	5 mA to 20 mA ^{Note 2}		100 mA or less	50 mA or less
Current consumption	—		10 mA or less at 24 VDC	
Internal voltage drop	4 V or less		0.5V or less	
Indicator	Red LED (Lights up when turned on)	Red/green LED (Lights up when turned on)	Red LED (Lights up when turned on)	Red/green LED (Lights up when turned on)
Leakage current	1 mA or less		10μA or less	
Lead wire ^{Note 1}	Standard is 1 m (Oil-resistant vinyl cabtyre 2 core cord, 0.2 mm ²)		Standard is 1 m (Oil-resistant vinyl cabtyre 3 core cord, 0.2 mm ²)	
Shock resistance	980m/s ²			
Insulation resistance	20 MΩ or more with 500 VDC megger			
Withstand voltage	No abnormality after applying 1000 VAC for one minute			
Ambient temperature	-10°C to 60°C			
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant			

Descriptions	Proximity 2-wire type
	T2HR3, T2VR3 (Bend resist lead wire)
Applications	Only for programmable controller
Power supply voltage	—
Load voltage	10 to 30VDC
Load current	5mA to 20mA ^{Note 2}
Current consumption	—
Internal voltage drop	4V or less
Indicator	Red LED (Lights up when turned on)
Leakage current	1mA or less
Lead wire ^{Note 1}	Standard is 3m (Elasticity, oilresistantvinyl cabtyre cable2-conductor 0.2 mm ²)
Shock resistance	980m/s ²
Insulation resistance	20 MΩ or more with 500 VDC megger
Withstand voltage	No abnormality after applying 1000 VAC for one minute
Ambient temperature	−10°C to 60°C
Degree of protection	IP 67 (IEC standard), JIS C 0920 (watertight), oil-resistant

Note 1: 3 m and 5 m lead wires are available as options. (Except 5m of F type switch)

Note 2: The maximum load current of 20 mA is the value when the ambient temperature is 25°C.

The current will be lower than 20 mA when the ambient temperature of the switch is higher than 25°C (5 mA to 10 mA at 60°C).

Note 3: Switches for P4 * series have different order model numbers from the standard ones.

Please refer to "Equipment related to rechargeable batteries P4* Series"(No.CC-1226A).

2. INSTALLATION


2.1 Environment

CAUTION

When using the product in a cutting, casting, or welding plant, install a cover to prevent foreign matters such as cutting fluid, chips, powder, and dust from entering.

Do not use the equipment in the following environments.

- Where cutting oil can splash onto the product (abrasives and polishing powder in the oil can abrade the sliding section)
 - Where organic solvents, chemicals, acids, alkalis, and kerosene are present
 - Where water can splash onto the product
- Use the product within the following ambient temperature range.
–10°C to 60°C (no freezing)
 - For compressed air, use clean and dry air that has been passed through an air filter. Use an air filter in the circuit and be careful with the filtration rate (a filter that removes particles exceeding 5 µm is desirable), flow rate, and mounting position (install the filter near the directional control valve).

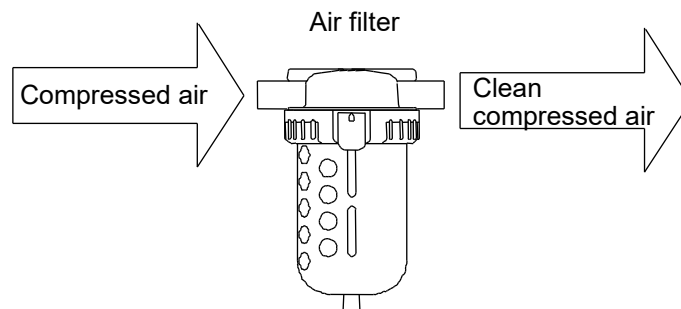

2.2 Unpacking

- Check that the model number ordered and the model number indicated on the product are the same.
- Check the exterior of the product for any damage.
- When storing the product, take proper measures to prevent foreign matters from entering the cylinder.

2.3 Mounting

⚠ CAUTION

Do not turn the cover.

When install the cylinder or turn the piping joint into the port, it may be damaged from joint of cover for turning the cover.

When fix the work on the piston rod end, perform so that tightening torque does not apply the cylinder main body.

To avoid irregular wear and tear of rod cover or rod itself.

When tightening the hexagon nut (4.1.4 Internal structural diagram and parts list), use the torque within the tightening torque range as below.

Bore size(mm)	Tightening torque
φ 6	1.46N·m±10%
φ10	4.09N·m±10%
φ16	8.78N·m±10%

2.3.1 Mounting the Body

< When cylinder is fixed and rod end is connected with pin joint >

In case the load acting direction is not parallel with the rod axial center, the rod and tube may get entangled causing seizure, etc. Hence, make sure that the rod axial center and the load transfer direction are aligned to each other.



< When the load acting direction changes with the cylinder operation >

Use an oscillating cylinder (clevis type) capable of making revolution to a certain angle. Furthermore, install the rod and connecting metal (knuckle) so that it moves in the same direction as the cylinder main body does.



2.3.2 Mounting the switch

■ Location of mounting switch

< Mounting the switch at the stroke end >


Mount switches within the rod side dimension RD as well as the head side dimension HD for the purpose of having switches function at the points of the maximum sensitive position.

■ Operating range

This is the range from where the switch is turned on when the piston moves and to where the switch is turned off when the piston moves farther in the same direction.

■ Hysteresis

This is the distance from where the switch is turned on when the piston moves and to where the switch is turned off when the piston moves in the opposite direction.

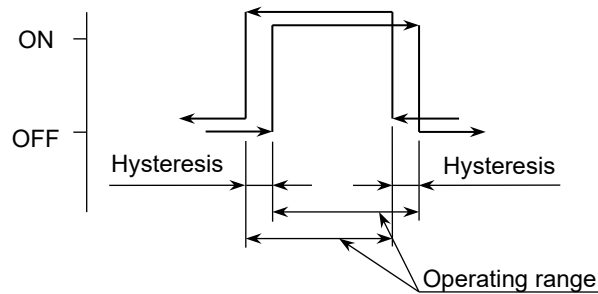

■ The maximum sensitivity position (HD,RD),Operating range, Hysteresis (unit:mm)

Proximity switch (T2H/V,T3H/V,T2WH/V,T3WH/V,T2HR3,T2VR3)								
Bore size (mm)	The maximum sensitivityposition				Operating range		Hysteresis	
	HD(mm)		RD(mm)					
	1-color display	2-color display	1-color display	2-color display	1-color display	2-color display	1-color display	2-color display
φ6	2	3.5	2	4	1.5 to 4	2.5 to 5	1.5 or less	1 or less
φ10	2.5	4	3.5	5.5	1.5 to 5.5	2.5 to 6		
φ16	3.5	5	2	3.5	2 to 6	2.5 to 6		


Reed switch(T0H/V,T5H/V)				
Bore size (mm)	The maximum sensitivity position		Operating range	Hysteresis
	HD(mm)	RD(mm)		
φ6	2	2	4 to 6	3 or less
φ10	2.5	3.5	3.5 to 7	
φ16	3.5	2	3.5 to 7.5	

Note 1: Switches for P4 * series have different order model numbers from the standard ones.
Please refer to "Equipment related to rechargeable batteries P4* Series"(No.CC-1226A).


■ How to mount the switch

When use the standard T type switch(SW-T※),start from step(1).
When use the switches for SCPD3(SCPD3-T※),start from step(3).


- 1** Remove the nut and screw.

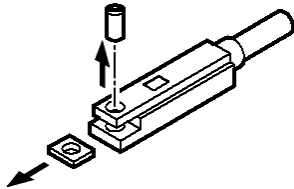

- 2** Assemble the mounting bracket and screw.

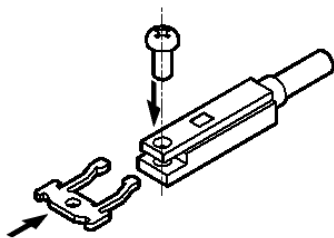


- 3** Put the angle hole of the band into the mounting bracket and fix to the cylinder.

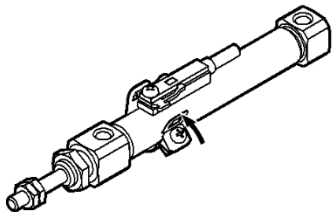


If difficult to fix, follow the below procedure.


- ① Tighten the screw of switch side.
- ② Put the angle hole of the band into the mounting bracket.

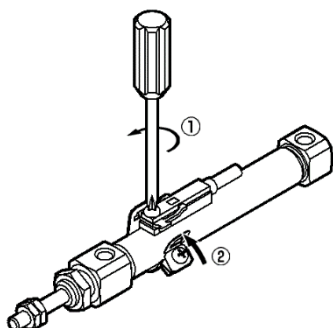


- 4** Tighten the screw of switch side.
Tightening torque : 0.1 to 0.15N•m

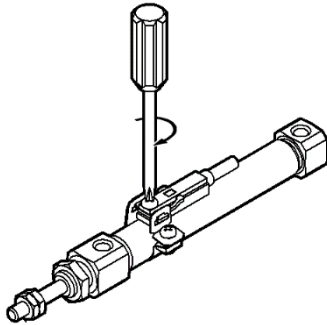

- 5** Tighten the screw of band side.
Tightening torque : 0.1 to 0.15N•m

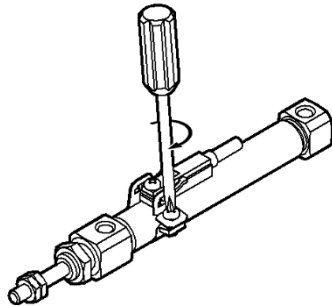

- 6** When adjust the location of mounting switch on a cylinder :
Loosen a screw of the switch, and adjust the position, then tighten the screw of switch again on the best position.
Tightening torque:0.1 to 0.15N•m

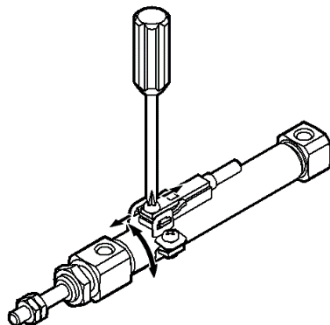


2.4 Piping

WARNING


Insert the tube into the fitting until it firmly rests on the tube end and make sure that the tube does not come off before use.

- Use pipes that are made of corrosion-resistant materials after the filter such as zinc-plated pipes, nylon tubes, and rubber tubes.
- Use pipes with an effective cross-sectional area that allows the cylinder to achieve the predetermined piston speed.
- Install the filter for removing rust, foreign matters, and drainage from the piping as close as possible to the solenoid valve.
- Observe the effective thread length for the gas pipes.
- In addition, chamfer the threaded end of the pipes by about a 1/2 pitch.

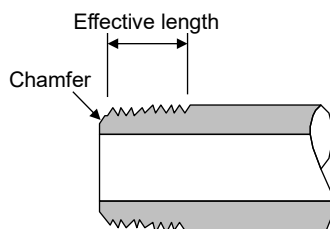

■ Pipe cleaning

Before piping, blow air into the pipes to clean the interior and to remove cutting chips and foreign matters.

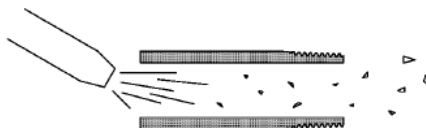

■ Seal material


Use a seal tape or a seal material to stop leakage from piping.

Apply a seal tape or seal material to the screw threads leaving two or more threads at the pipe end uncovered or uncoated. If the pipe end is fully covered or coated, a shred of seal tape or residue of seal material may enter inside of the pipes or device and cause a failure.

When using a seal tape, wind it around the screw threads in the direction opposite from the screw threads and press it down with your fingers to attach it firmly.

When using a liquid seal material, be careful not to apply it to resin parts. The resin parts can become damaged and this may lead to a failure or malfunction.

Also, do not apply seal material to the internal threads.

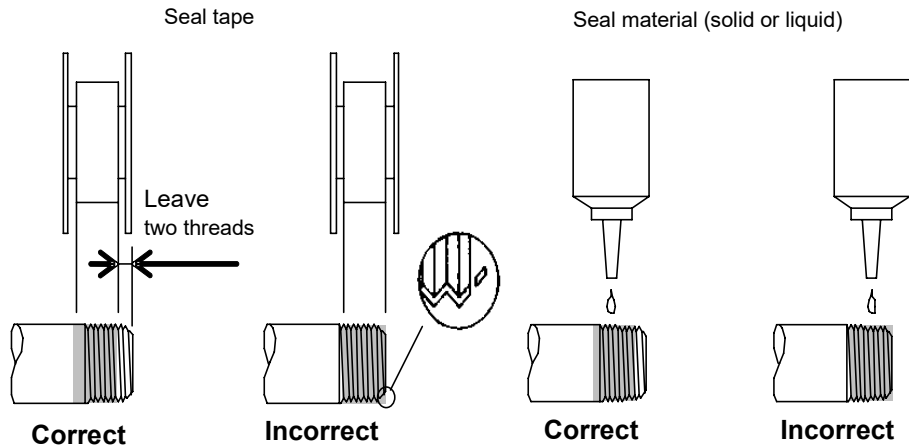


2.5 Wiring

2.5.1 Proximity switch


■ Connection of lead wires

Turn off the power to the device in the electric circuit to which the switch is to be connected and connect the lead wires according to their color. Not turning off the power may cause damage to the electric circuit of the switch load.


If the switch is not wired correctly or the load is short-circuited, it may cause damage not only to the switch but also to the electric circuit on the load side.

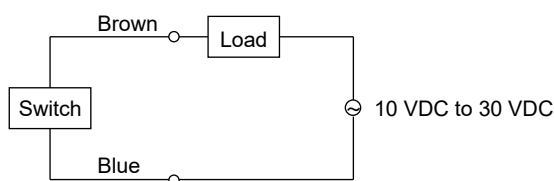

Example of 2-wire basic circuit

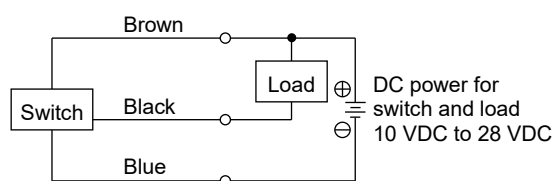

Example of 3-wire basic circuit (1)
(When same power is used for switch and load)

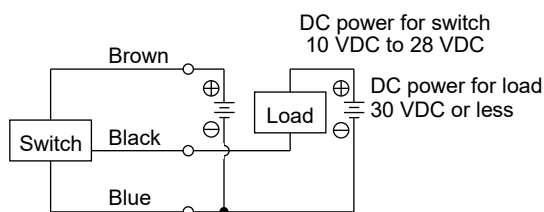


Example of 3-wire basic circuit (2)
(When separate power is used for switch and load)


■ Protection of the output circuit

For the following cases, refer to the figures below and install a protection circuit:

- When an inductive load (relay or solenoid valve) is connected and used: See Ex. 1
Use a surge absorption element since a surge voltage is generated when the switch is turned off.
- When a capacious load (capacitor) is connected and used: See Ex. 2
Use a current regulating resistor since a starting current is generated when the switch is turned on.
- When the lead wire length exceeds 10 m: See Ex. 3 and 4 (2-wire type), Ex. 5 (3-wire type)

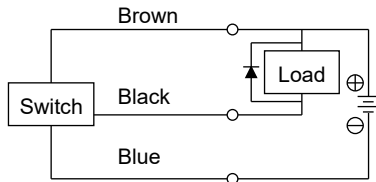


Ex. 1 Using inductive load with surge absorption element (diode). (For diode, use V06C manufactured by Hitachi or equivalent.)

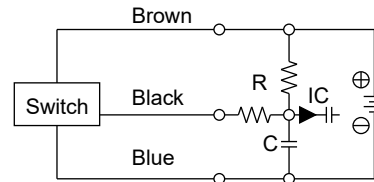


Ex. 2 Using capacious load with current regulating resistor R.
Use the following formula to figure out resistance R (Ω).

$$\frac{V}{0.05} = R (\Omega)$$

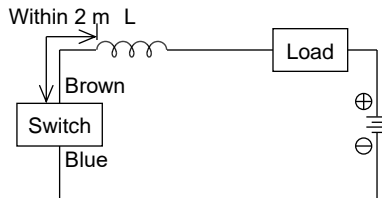


Ex. 3 - Choke coil
L = Several hundred μH to several mH
Excellent high frequency characteristic

- Wire near the switch (within 2 m).

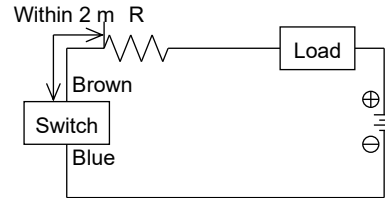

Ex. 4 - Starting current restriction resistor
R = Highest possible resistance for the load circuit.


- Wire near the switch (within 2 m).

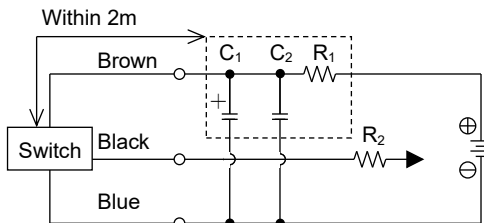


Ex. 5 - Power supply noise absorption circuit
C₁=20 μF to 50 μF electrolytic capacitor (withstand voltage 50V or more)
C₂=0.01 μF to 0.1 μF ceramic capacitor
R₁=20 Ω to 30 Ω
- Starting current restriction resistor
R₂= Highest possible resistance for the load circuit.
- Wire near the switch (within 2 m)

■ Connection to the programmable controller


The connection method depends on the type of the programmable controller. Connect as shown below.

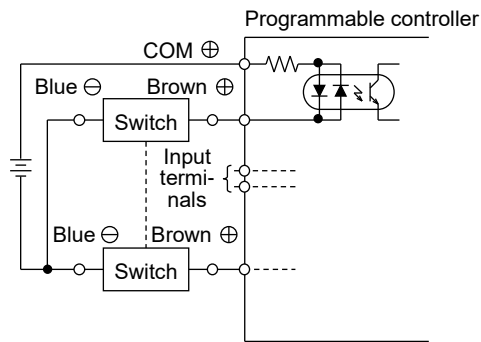


2-wire connection to source input
(external power)

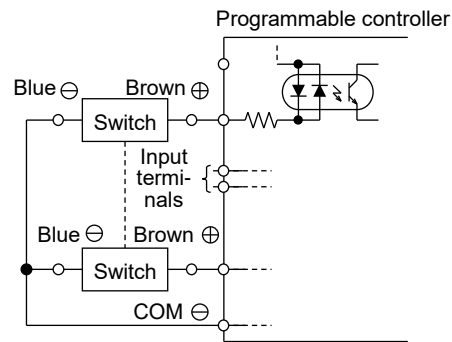


2-wire connection to source input
(internal power)

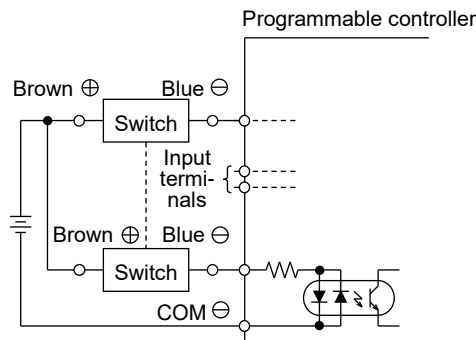

2-wire connection to sink input
(external power)

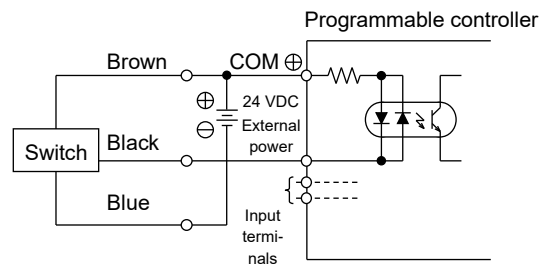

3-wire connection to source input
(external power)

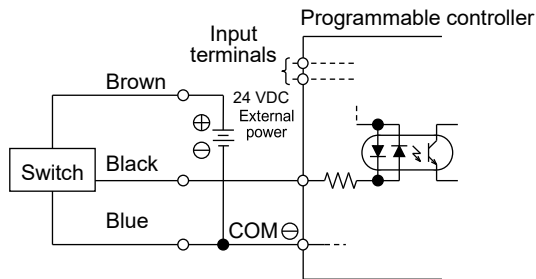

3-wire connection to source input
(internal power)

■ Parallel connection

Since the leakage current of a 2-wire type switch increases according to the number of connected units, check the input specifications of the programmable controller, which is a connected load, to determine the number of switches to connect. For the 2-wire type switch, the indicator may become dim or not light up.

Although the leakage current of a 3-wire type switch increases according to the number of connected units, the leakage current is very small (10 μ A or less) and can generally be ignored. For the 3-wire type switch, the indicator will light up without dimming.

2.5.2 Reed switch

■ Connection of lead wires

Do not connect the lead wire of the switch to the power directly. Make sure that the lead wire and the load are connected in serial.

For T0 switches, observe the following instructions as well:


- When the switch is used with DC power, connect the brown wire to the positive side and the blue wire to the negative side. If the polarity of the connection of wires is reversed, the switch will turn on but the indicator will not light up.
- When the switch is connected to the input of a relay or a programmable controller for AC power and the half-wave rectification is performed in those circuits, the indicator on the switch may not light up. In that case, reversing the polarity of the connection of the lead wires of the switch will light up the indicator.

■ Contact protection measures


When the switch is used with an inductive load such as a relay or when the wiring length exceeds the value shown in the table to the right, install a contact protection circuit.

Power	Wiring length
DC	100 m
AC	10 m

<Protection when connecting an inductive load>


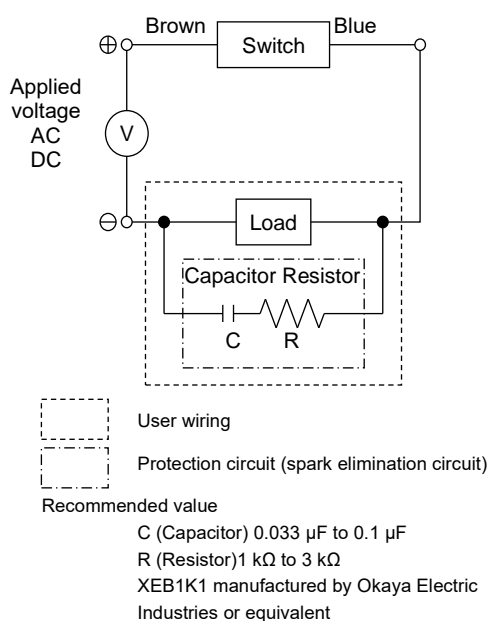


When capacitor and resistor are used

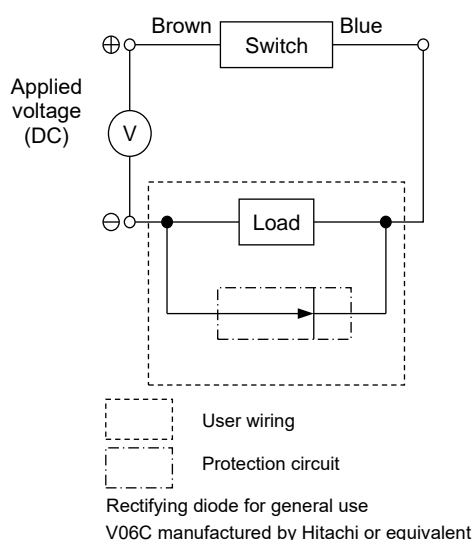

When diode is used

<Protection when the wiring length exceeds the value shown in the table above>

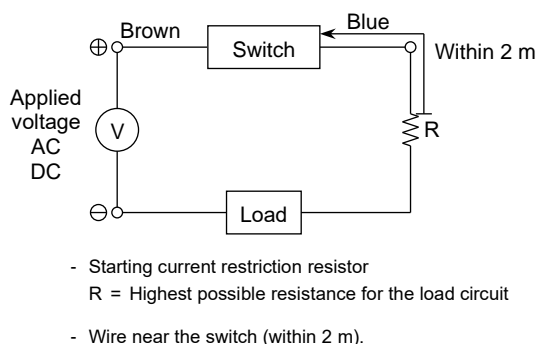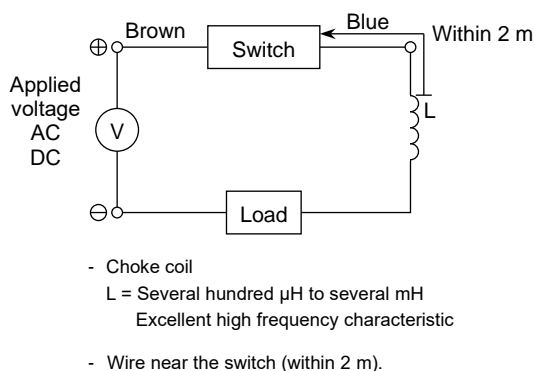

■ Contact capacity

Do not use a load that exceeds the maximum contact capacity of the switch. If the current falls below the rated current value, the indicator may not light up.

■ Relay

Use one of the following or equivalent relays:

- Omron CorporationMY type
- Fuji Electric Co., Ltd.HH5 type
- Panasonic CorporationHC type

■ Serial connection

The voltage drop of multiple T0 switches connected in serial is the sum of the voltage drop of all switches.

The indicator will light up only when all the switches turn on.

■ Parallel connection

There is no limitation on the number of units that can be connected in parallel. However, the indicator may become dim or not light up for T0 switches.

3. USAGE

3.1 Using the Cylinder

CAUTION

Keep the range of load connected to the rod reasonable to prevent rod from being damaged due to the excessive energy of momentum inertia.

Carefully prevent lateral load to the rod to avoid irregular wear and tear of rod cover or rod itself.

Make sure to use a hose nipple (with fixed chalk) or speed controller when piping the cylinder to the system.

■ Working pressure range

Use the cylinder within the following pressure range:

Bore size(mm)	pressure range
φ6	0.15 to 1.0
φ10	0.1 to 1.0
φ16	0.1 to 1.0

■ Adjustment of the piston speed

Mount a speed controller to adjust the piston speed.


Mount a speed controller directly on or as near to the cylinder as possible.

3.2 Using the Switch

■ Magnetic environment


Do not use the switch in a place where there is a strong magnetic field or large current (such as a large magnet or welding machine). If switch mounted cylinders are installed close to each other and in parallel or if magnetic substances are moving close to the cylinder, the magnetic forces may interfere with each other and affect the detection accuracy.

- The cylinder switch may malfunction if the cylinder units are placed adjacently. Make sure to provide the following distance between each unit.

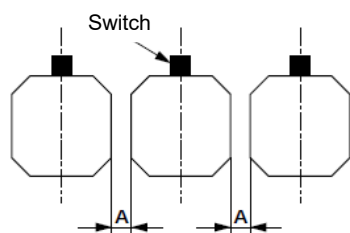

A dimension (unit:mm)			
Switch	T0,T5	T2,T3	T2W,T3W
Bore size	Reed switch	Proximity switch	
φ6	0 or more	3 or more	3 or more
φ10	0 or more	3 or more	3 or more
φ16	0 or more	3 or more	3 or more

- The cylinder switch could malfunction if cylinders with switch are installed adjacently in other ways. Check that the distances are provided between cylinders according to Table below.

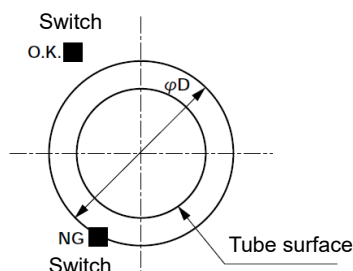

D dimension (unit:mm)			
Switch	T0,T5	T2,T3	T2W,T3W
Bore size	Reed switch	Proximity switch	
φ6	φ16.5 or more	φ22.5 or more	φ22.5 or more
φ10	φ21 or more	φ26.5 or more	φ26.5 or more
φ16	φ34 or more	φ35 or more	φ35 or more

■ Wiring of lead wires

When wiring, be careful not to apply bending stress and tension repeatedly to lead wires. For movable sections, use wiring material with the same level of bending resistance as the robot wire.

■ Ambient temperature

Do not use the switch in a high temperature environment (60°C or more).

Using the switch in a high temperature environment may affect its performance due to the temperature characteristics of magnetic parts and electronic parts.

■ Intermediate position detection

When the switch is operated at an intermediate position in the length of the stroke, the relay will not respond if the piston speed is too high.

■ Shock

Do not subject the product to strong vibrations and shocks when transporting the cylinder and mounting and adjusting the switch.

4. MAINTENANCE AND INSPECTION

WARNING

Do not disassemble the product.

Do not touch electrical wiring connections (bare live parts) of actuators equipped with switches, and other such actuators.

Do not touch live parts with bare hands.

An electric shock may occur.

Turn off the power, release the residual pressure and make sure that there is no residual pressure before disassembling or inspecting the actuator.

CAUTION

Plan and perform daily and periodic inspections so that maintenance can be managed properly.

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunction) or accidents.

4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection once or twice a year.

4.1.1 Inspection item

- Actuation state
- Change in the piston speed and cycle time
- External and internal leakages
- Damage and deformation of the piston rod
- Stroke abnormality


Check the items above and refer to "5. TROUBLESHOOTING" to correct any abnormality found. If there are loose threaded connections, tighten them.

4.1.2 Maintenance of the product


- This cylinder does not require lubrication.
- Because this cylinder is a non-disassembly type, do not apply excessive force to the end cover or tube.

4.1.3 Maintenance of the circuit

- Discharge the drainage accumulated in the air filter periodically before it exceeds the specified line.
- Since foreign matters such as carbide (carbon or tar substance) from the compressor oil may contaminate the circuit and cause an operation fault of the solenoid valve or the cylinder, be careful when performing maintenance or inspection of the compressor.

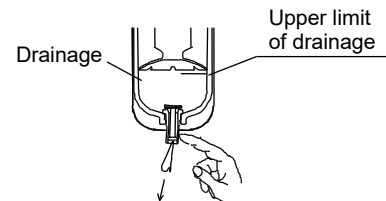

4.1.4 Internal structural diagram

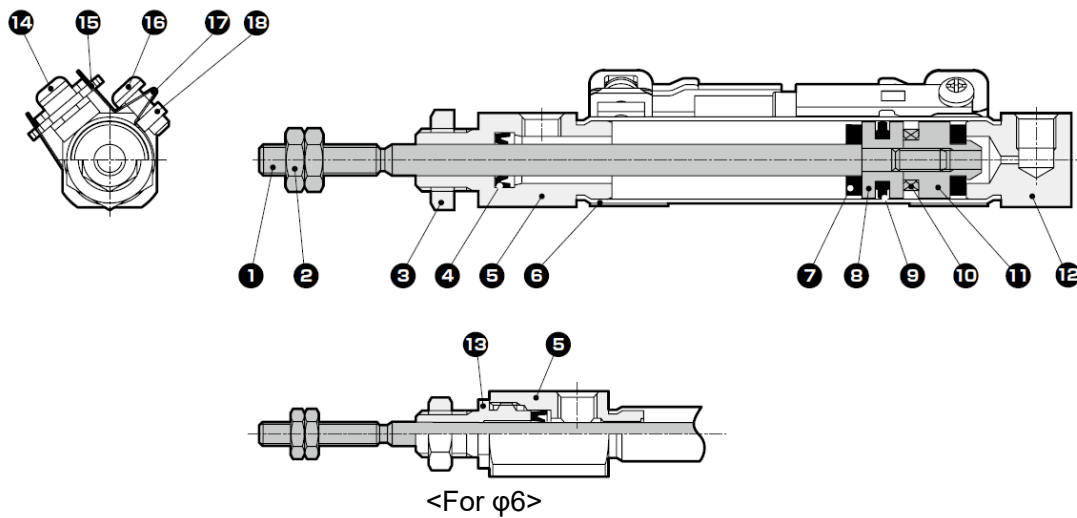

Parts list

No.	Part name	Material	Remarks
1	Piston rod	Stainless steel	
2	Rod nut	Steel	Nickeling
3	Hexagon nut	Steel	Nickeling
4	Rod packing	Nitrile rubber	
5	Rod cover	Aluminum alloy	Hard alumite
6	Cylinder tube	Stainless steel	
7	Cushion rubber	Urethane rubber	
8	Piston	Aluminum alloy	
9	Piston packing	Nitrile rubber	
10	Magnet	—	With switch only
11	Spacer	Aluminum alloy	
12	Head cover	Aluminum alloy	Hard alumite
13	Rod metal	Aluminum alloy	Hard alumite
14	Phillips pan head machine screw	Stainless steel	With switch only
15	Fixing bracket	Stainless steel	With switch only
16	Phillips pan head machine screw	Stainless steel	With switch only
17	Band	Stainless steel	With switch only
18	Fixing nut	Stainless steel	With switch only

Note 1: The above is the parts list of HP1 series.

For P4 series, the use of copper, zinc, nickel-based materials and electrolytic nickel plating is limited in the construction of the flow path parts and sliding parts.

For 40 series, the use of copper, zinc, nickel-based materials, zinc plating and electrolytic nickel plating is limited in the construction of all parts.

5. TROUBLESHOOTING

5.1 Problems, Causes, and Solutions

If the product does not operate properly, check the table below for a possible solution.

5.1.1 Cylinder

Problem	Cause	Solution
Does not operate.	No pressure or insufficient pressure is applied.	Secure sufficient pressure.
	No signal is input to directional control valve.	Repair the control circuit.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Piston packing is damaged.	Replace the cylinder.
Does not operate smoothly.	Speed is lower than minimum working piston speed.	Mitigate load fluctuation.
	Centers were not aligned when mounted.	Correct the way the cylinder is mounted. Change the mounting style.
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.
	Load is too large.	Increase the pressure. Enlarge the bore size.
	Speed control valve has meter-in circuit.	Change the mounting direction of the speed control valve.
Cylinder is damaged or deformed.	Force of shock due to high-speed actuation is excessive.	Decrease the speed. Lighten the load. Install a more effective cushion mechanism. (external cushion mechanism)
	Lateral load is applied.	Install a guide. Correct the way the cylinder is mounted. Change the mounting style.

5.1.2 Switch

Problem	Cause	Solution
Switch turns on but indicator does not blink.	Contact is welded.	Replace the switch.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Indicator is damaged.	Replace the switch.
	External signal is faulty.	Check the external circuit.
Switch does not turn on.	Cables are disconnected.	Replace the switch.
	External signal is faulty.	Check the external circuit.
	Voltage is wrong.	Use specified voltage.
	Switch is not mounted in right place.	Mount the switch in right place.
	Switch is not positioned correctly.	Position and tighten the switch correctly.
	Switch is facing opposite direction.	Mount the switch so that it faces the correct direction.
	Load (relay) cannot respond for intermediate position detection.	Lower the speed. Replace the relay with one recommended by CKD.
	Rating of load is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
Switch does not turn off.	Piston is not moving.	Move the piston.
	Contact is welded.	Replace the switch.
	Rating of relay is exceeded.	Replace the relay with one recommended by CKD or replace the switch.
	Ambient temperature is too high or too low.	Use the switch at an ambient temperature of -10°C to 60°C.
	Magnetic field is nearby.	Install a magnetic shield.
	External signal is faulty.	Check the external circuit.

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

6. WARRANTY PROVISIONS

6.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

6.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.