

Electro-pneumatic Regulator EVS2 Series

INSTRUCTION MANUAL

SM-A45884



- Read this Instruction Manual before using the product.
- · Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

SM-A45884-A PREFACE

PREFACE

Thank you for purchasing CKD's **"EVS2 Series"** electro-pneumatic regulator.

This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly.

Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge about materials, piping, electricity, and mechanisms of pneumatic components. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all
 of them. Depending on the application or usage, the product may not be able to exercise its full
 performance or an accident may occur due to fluid, piping, or other conditions. It is the
 responsibility of the customer to check the product specifications and decide how the product shall
 be used in accordance with the application and usage.

i 2022-07-28

SM-A45884-A SAFETY INFORMATION

SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device, the pneumatic control circuit, and the electric system that controls such mechanism is ensured.

To ensure the safety of device design and control, observe organization standards, relevant laws and regulations, which include the following:

ISO 4414 and JIS B 8370 (the latest edition of each standard)

In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:

Thoroughly read and understand this Instruction Manual before using the product.

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

⚠ DANGER Indicates an imminent hazard. Improper handling will cause deal injury to people.			
⚠ WARNING	Indicates a potential hazard. Improper handling may cause death or serious injury to people.		
▲ CAUTION	Indicates a potential hazard. Improper handling may cause injury to people or damage to property.		

Precautions classified as "CAUTION" may still lead to serious results depending on the situation.

Other general precautions and tips on using the product are indicated by the following icon.

ii 2022-07-28

Precautions on Product Use

⚠ DANGER

Use the product within the specified voltage range.

Applying voltage beyond the specified range may cause a malfunction, damage to the sensor, electric shock, or fire.

Do not connect a load exceeding the rated output.

The output circuit may become damaged or a fire may occur.

Precautions on Design and Selection

⚠ WARNING

Do not supply anything other than compressed air.

Use clean compressed air that does not contain corrosive gases.

Use "JIS B 8392-1 ISO Class 1.3.2" equivalent oil-free clean dry air.

Understand the compressed air characteristics before designing a pneumatic pressure circuit.

- Note that if the pressure needs to be stopped instantly at an emergency stop, the same functions as those for mechanical, hydraulic, or electrical regulators cannot be expected.
- The air may pop out, flow out, or leak out due to its compression and expansion characteristics.

Make sure that the product can withstand the working environment before use.

- The product cannot be used in an atmosphere where corrosive gas, chemical liquid, solvent vapor, water, and water vapor are present. If water drop, oil, or metal chips (such as spatter or cutting chips) may come into contact with the product, provide an appropriate protection.
- The product cannot be used in an explosive gas atmosphere.

Consider the effects of an emergency stop on the electric circuit and power outages on the cylinder when designing the system and selecting the product.

Install a pressure switch and a residual pressure exhaust valve on the compressed air supply side of the device.

The pressure switch prevents the product from operating if the set pressure is not reached. The residual pressure exhaust valve discharges compressed air remaining in the pneumatic pressure circuit in order to prevent the residual pressure from causing the pneumatic components to operate and to cause accidents.

Do not leave the pressure applied to the primary side of the product when the power is not turned on.

The secondary side pressure may rise to the same level as the primary side pressure. If there are safety concerns, design a system that ensures safety by providing measures such as installing a valve on the primary side or the secondary side.

A CAUTION

Use the product within the working pressure range.

Specify maintenance conditions in the instruction manual of the customer's device.

Depending on the conditions of use, working environment, and maintenance conditions, the functions of the product may decline significantly and the safety may not be ensured. Proper maintenance will deliver optimum performance.

Use a constant voltage power supply.

If a stable reproducibility is necessary for the response time of the system, install a precision regulator before the product.

The response time is affected by the working pressure and the capacity of the load on the secondary side.

Take the following measures to prevent malfunctions caused by noise.

- · Insert a line filter in the AC power supply line.
- Use a surge suppressor such as a CR or diode for the inductive load (such as a solenoid valve or a relay) to remove noise at its source.
- Install the wiring for the product away from strong electric fields.
- · Wire the power lines as short as possible.
- Do not share the power supply with noise-generating devices such as inverters or motors.
- Do not wire the power cables and the signal cables in parallel with other power lines.

When using the current input type, consult the PLC manufacturer.

In the current input type, the common of the power supply ground and the signal is common on the wiring. When driving multiple electro-pneumatic regulators with one PLC and D / A unit, normal signals may not be input due to wiring problems depending on the circuit method of the D / A unit.

When using the current input type, use a signal generator that matches the input impedance.

The current input type can usually be used with an input signal of 1V to 5V, but unlike other voltage input types, the input impedance is as small as 250Ω , so a signal generator that matches that is required.

Before applying the power supply (24VDC), be sure to set the input signal to 0VDC (current input specification is 0mADC).


Applying an input signal when the power is off may damage the product board. Be sure to apply the input signal after starting the product.

⚠ CAUTION

Do not use air of poor quality.

●EVS2-100/200/500/900


- For the source of pneumatic air, use clean air from which solids, moisture, and oil have been sufficiently removed with a dryer, an air filter, and an oil mist filter. Do not use air containing oil that adversely affects the product characteristics.
 - <Recommended circuit>

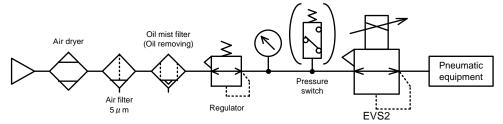

When the secondary side pressure is reduced with an input signal, the secondary side air passes
through the product and is discharged from the R port. Maintain the inside of the pipes clean
since contamination inside the secondary side pipes and the load also has an adverse effect on
the product characteristics.

●EVS2-10V

- Since use in an atmosphere with dust etc. will lead to deterioration of characteristics, install an air filter on the atmospheric pressure side as shown in the recommended circuit below.
- During vacuum pressure control, air on the secondary side flows into the vacuum source through
 the inside of the product. If the inside of the secondary side piping and the load side is dirty, the
 characteristics will be deteriorated as well. Therefore, try to clean the inside of the piping by
 installing a filter.
 - <Recommended circuit>

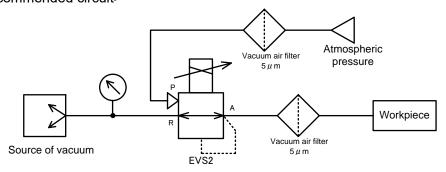

Do not expect the pressure on the secondary side to remain for a long period. Take measures to remove residual pressure as necessary.

The pressure on the secondary side will remain if the power is turned off while the pressure is applied but not for a long period. Reduce the set pressure with an input signal and then turn off the power or discharge the pressure using a residual pressure exhaust valve as necessary.

Make sure that the primary side pressure does not become lower than the minimum working pressure

Not supplying the primary side pressure for a long period while the power is turned on will shorten the product service life.

Avoid leaks on the secondary side, blow-like controls, and use of the secondary side open to the atmosphere.

The set pressure cannot be maintained, and the solenoid valve over-operates with a loud growl, shortening the product life.

Select a dryer, an air filter, an oil mist filter, and a regulator that can accommodate a flow rate higher than the flow rate used for the product.

A CAUTION

When using the product out of the specified conditions or for a special application, consult CKD about the specifications.

Do not use the product where it is exposed to direct sunlight or where water, oil, and other liquids may directly splash onto the product.

The protection structure of this product is equivalent to IP64, but it is limited to the state where the operation lamp is up.

If 0 MPa is required, bleed the secondary side or install a 3-way valve to release the pressure to the atmosphere.

Although the pressure control range of the product includes 0 MPa, the pressure on the secondary side will not be completely released (the pressure of 1%FS or less of the maximum control pressure will remain).

Working conditions for CE compliance

This product conforms to the EMC Directive and CE standard. The standard for the immunity for industrial environments applied to this product is EN61000-6-2; the following requirements must be satisfied in order to conform to this standard:

Conditions

- The evaluation of this product is performed by using a cable that has a power supply line and a signal line, paired to assess the product's performance.
- This product is not equipped with surge protection. Implement surge protection measures on the system side.

vi 2022-07-28


CONTENTS

PREFA	ACE	i
SAFET	TY INFORMATION	ii
Prec	cautions on Product Use	iii
Prec	cautions on Design and Selection	iii
CONTE	ENTS	vii
1. PR	RODUCT OVERVIEW	1
1.1	Model Number Indication	1
1.2	Specifications	3
1.3	Dimensions	5
1.4	Internal Structure	6
2. IN	STALLATION	7
2.1	Mounting	7
2.2	Piping	8
2.3	Wiring	9
	3.1 Cable connector	
	3.2 Cable connection	
	·	
	AINTENANCE AND INSPECTION	
3.1	Periodic Inspection	
	ROUBLESHOOTING	
4.1	Problems, Causes, and Solutions	13
5. W	ARRANTY PROVISIONS	14
5.1	Warranty Conditions	14
5.2	Warranty Period	14

vii


1. PRODUCT OVERVIEW

1.1 Model Number Indication

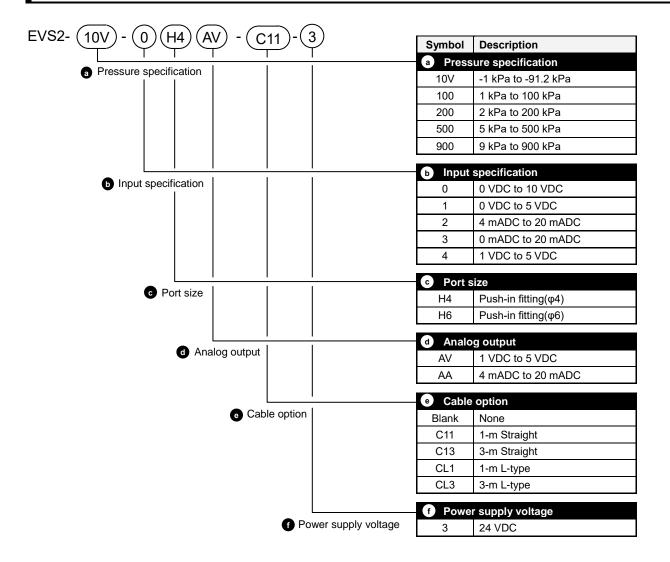


■ Optional Part Model Number


Cable option

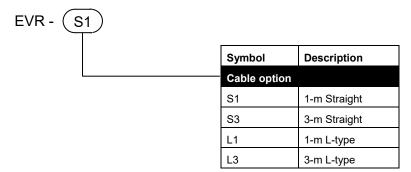

• Straight type "-C11 (EVR-S1)", "-C13 (EVR-S3)"

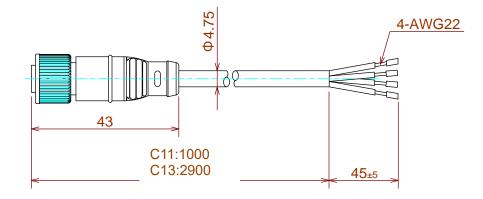

• L type "-CL1 (EVR-L1)", "-CL3 (EVR-L3)"

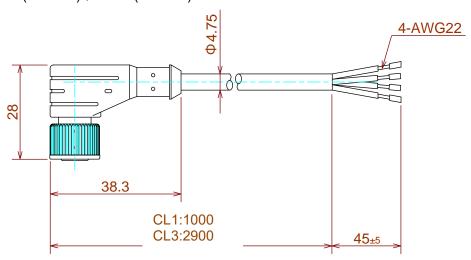

Cable Color	Use	Pin No.
Brown	Power +	1
Black	Analog output	2
Blue	Common 3	
White	Input specification	4

1.2 Specifications

■ -100 kPa

Item		EVS2-10V- [*2] [*3] [*4] - [*5]-3		
Working fluid		Air (equivalent to JIS B 8392-1 ISO Class 1.3.2)		
Max. working pressure		-101.3 kPa		
Min. working pressure		-96.0 kPa		
D (Inlet side	150 kPa		
Proof pressure	Outlet side	150 kPa		
Pressure control range	Note 1	-1.0 kPa to -91.2 kPa		
Power supply voltage		24 VDC ± 10% (stabilized power supply with ripple rate of 1% or less)		
Current consumption		0.1 A or less (Inrush current is 0.6 A when the power is turned on)		
	[*2] = 0	0 VDC to 10 VDC (6.7k Ω)		
	[*2] = 1	0 VDC to 5 VDC (10k Ω)		
Input signal	[*2] = 2	4 mADC to 20 mADC (250 Ω)		
(input impedance)	[*2] = 3	0 mADC to 20 mADC (250 Ω)		
	[*2] = 4	1 VDC to 5 VDC (10k Ω)		
Analog output	[*4] = AV	1 VDC to 5 VDC (50k Ω or more)		
(connecting load impedance)	[*4] = AA	4 mADC to 20 mADC (300 Ω or less)		
Insulation resistance		100M Ω (DC500V or more)		
Withstand voltage		AC 1500V 1 minute		
	Hysteresis	0.3% F.S. or less		
Accuracy	Linearity	±0.5% F.S. or less		
Note 2	Resolution	0.05% F.S. or less		
	Repeatability Note 3	0.3% F.S. or less		
Temperature	Zero point fluctuation	±0.06% F.S. / °C or less		
characteristics	Span drift	±0.06% F.S. / °C or less		
Step response Note 4	No load	0.6 sec. or less		
Max. flow rate	Note 5	0.3 L/min (ANR)		
Vibration resistance		98 m/s ² (JIS C 60068-2-6)		
Operating ambient temperature, fluid temperature		0°C to 50°C		
Storage ambient temperature		-20°C to 60°C		
Operating ambient humidity		45% RH to 90% RH (no condensation)		
Storage ambient humidity		96% RH or less		
Mounting orientation		No restriction		
Degree of protection		Equivalent to IP64		
Port size		Selective		
Weight (body)		90 g		

Note 1: The range up to 1% F.S. of the input signal is an uncontrollable range. In addition, residual pressure is generated in the range of -5 kPa.

Note 2: Ambient temperature: 25±3°C, Power supply voltage: 24.0±0.1VDC, Working pressure: -96.0 kPa to -101.3 kPa, P port: Atmospheric release.

In addition, it is a characteristic at a control pressure of 10% F.S. to 90% F.S. under the condition that the secondary side is a closed circuit and warming up is performed for 30 minutes or more.

Note 3: The difference between the maximum and minimum when the input signal 50% F.S. is continuously applied 10 times in a stepped manner at a cycle with a sufficient time to set the control pressure is defined as repeatability. The average value of 10 data sampled at 1-second intervals from 10 seconds after signal input is taken as one data.

Repeatability evaluation method>
Input signal
To second a direct signal mput is taken as one
Yalue of the average of ten measurements/Min pressure waveforms.
Value of the average of ten measurements/Min pressure waveforms.

Note 4: Working pressure: -100 kPa, Step amount: 50% F.S.→90% F.S. 50% F.S.→60% F.S. 50% F.S.→40% F.S.

It will be the time until it falls within \pm 5% of the set pressure.

Note 5: The characteristics are Working pressure: -100 kPa, Input signal: 20% F.S.

■ 100 kPa / 200 kPa / 500 kPa / 900 kPa

項目		EVS2-100-[*2]	EVS2-200-[*2]	EVS2-500-[*2]	EVS2-900-[*2]		
		[*3] [*4]- [*5]-3	[*3] [*4]- [*5]-3	[*3] [*4]- [*5]-3	[*3] [*4]- [*5]-3		
Working fluid		Clean compressed air (equivalent to JIS B 8392-1 Class 1.3.2: 2012)					
Max. working pressure		200 kPa	350 kPa	700 kPa	1000 kPa		
Min. working pressure		Set Value for Set Value for pressure +50 kPa					
		pressure +10 kPa					
Proof pressure	Inlet side	300 kPa	525 kPa	1050 kPa	1500 kPa		
- 100. p. 000 u. 0	Outlet side	150 kPa	300 kPa	750 kPa	1350 kPa		
Pressure control ra	inge Note 1	1 kPa to 100 kPa	2 kPa to 200 kPa	5 kPa to 500 kPa	9 kPa to 900 kPa		
Power supply volta	ge	24 VDC ± 10% (stabilized power supply with ripple rate of 1% or less)					
Current consumption	on	0.1 A or le	ss (Inrush current is 0	6 A when the power is	turned on)		
	[*2] = 0	0 VDC to 10 VDC (6.7k Ω)					
Input signal	[*2] = 1	0 VDC to 5 VDC (10k Ω)					
(input signal	[*2] = 2		4 mADC to 20r	mADC (250 Ω)			
(input impedance)	[*2] = 3		0 mADC to 20r	mADC (250 Ω)			
	[*2] = 4		1 VDC to 5 \	/DC (10k Ω)			
Analog output (connecting load	[*4] = AV	1 VDC to 5 VDC (50k Ω or more)					
impedance)	[*4] = AA	4 mADC to 20mADC (300 Ω or less)					
Insulation resistance	ce	100M Ω (DC500V or more)					
Withstand voltage		AC 1500V 1 minute					
	Hysteresis	0.3% F.S. or less					
Accuracy	Linearity	±0.5% F.S. or less					
Note 2	Resolution	0.05% F.S. or less					
	Repeatability Note 3	0.3% F.S. or less					
Temperature	Zero point fluctuation	±0.06% F.S. / °C or less					
characteristics	Span drift	±0.06% F.S. / °C or less					
Step response	No load	0.1 sec. or less					
Note 4	With 15cm ³ load	0.5 sec. or less					
Max. flow rate	Note 5	2 L/min (ANR)	2 L/min (ANR)	8 L/min (ANR)	8 L/min (ANR)		
Vibration resistance	е	98 m/s² (JIS C 60068-2-6)					
Operating ambient	temperature,	, ,					
fluid temperature		0°C to 50°C					
Storage ambient temperature		-20°C to 60°C					
Operating ambient humidity		45% RH to 90% RH (no condensation)					
Storage ambient humidity		96% RH or less					
Mounting orientation		No restriction					
Degree of protection		Equivalent to IP64					
Port size		Selective					
Weight (body)	to 1% FS of the input sig	90 g					

Note 1: The range up to 1% F.S. of the input signal is an uncontrollable range.

Note 2: Ambient temperature: 25±3°C, Power supply voltage: 24.0±0.1VDC,

Working pressure: 110kPa to 200kPa(EVS2-100) / 250kPa to 350kPa(EVS2-200) / 550kPa to 700kPa(EVS2-500) / 950kPa to 1000kPa(EVS2-900), R port: Atmospheric release.

In addition, it is a characteristic at a control pressure of 10% F.S. to 100% F.S. under the condition that the secondary side is a closed circuit and warming up is performed for 30 minutes or more.

Note 3: The difference between the maximum and minimum when the input signal 50% F.S. is continuously applied 10 times in a stepped manner at a cycle with a sufficient time to set the control pressure is defined as repeatability. The average value of 10 data sampled at 1-second intervals from 10 seconds after signal input is taken as one data.

Note 4: Working pressure: Max. working pressure, Step amount: 50% F.S.→100% F.S.

50% F.S.→60% F.S.


4

50% F.S.→40% F.S.

It will be the time until it falls within ± 5% of the set pressure.

Note 5: The characteristics are Working pressure: Max. working pressure, Input signal: 100% F.S.

1.3 Dimensions

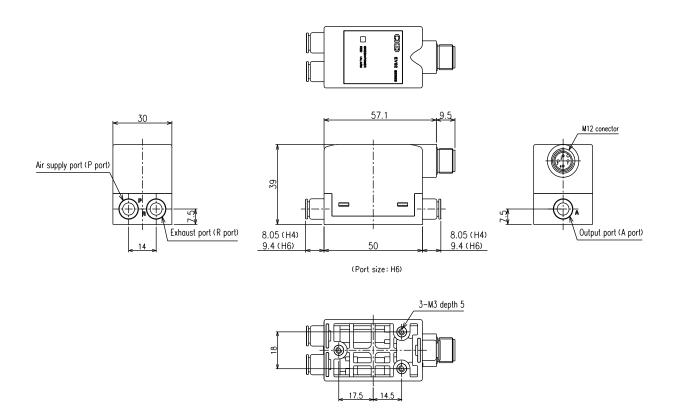


About the operation indicator

Lit green · · · When the power is turned on

Lit red···The secondary pressure has not reached the set value ± 11% F.S.

Note: The operation display is for reference only and does not guarantee accuracy.

1.4 Internal Structure

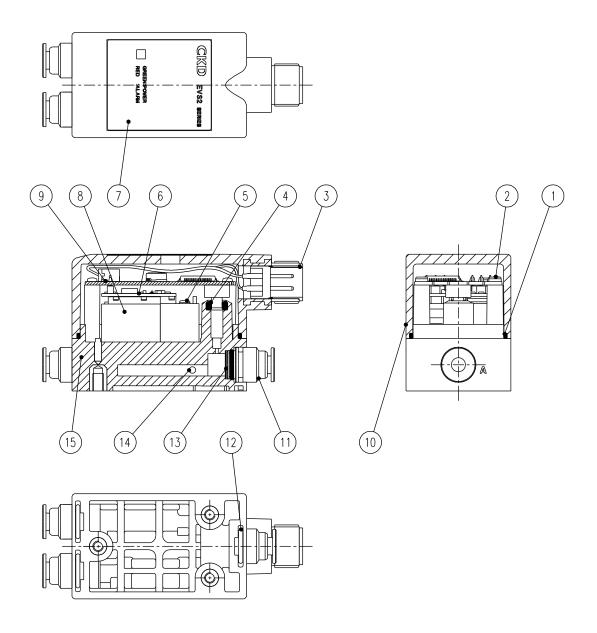

No.	Part name	Material No.		Part name	Material
1	Gasket	Special nitrile rubber	8 Solenoid valve		
2	Taptite	Steel 9 Electron circuit		Electron circuit board	
3	Connector plug		10 Hous		ABS resin
4	O-ring	Fluoro rubber	11	Push-in fitting	
5	Screw	Steel 12 Fitting hoo		Fitting hook	Stainless steel
6	Drive board		13	Port filter	Stainless steel
7	Surface sheet	PET film	14	Steel ball	Stainless steel
			15	Body	Polyamide resin, Brass

2. INSTALLATION

2.1 Mounting

ACAUTION

Install a pneumatic filter immediately before the circuit in which pneumatic components are used.


Install the product so that the exhaust port is not blocked and there is sufficient space for exhaust.


Do not install the product so that it is supported by piping.

Please install so that the product body is fixed.

There are no restrictions on the mounting posture, but in principle, it should be mounted with the operation lamp facing up.

Recommended tightening torque: 0.5N·m to 1.0N·m

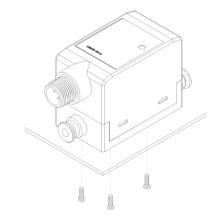

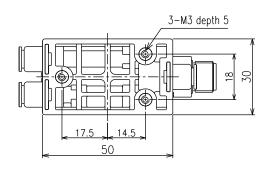

2.2 Piping

⚠ WARNING

Check the position of the piping port on the product display, etc., and pipe correctly. Incorrect piping may cause a malfunction.

⚠ CAUTION

Do not remove the product packaging bag until just before the plumbing work.

Foreign matter may enter the product from the piping port and cause a malfunction or malfunction.

Air pipes should be flushed thoroughly before connecting.

Open the R port to the atmosphere. (EVS2-10V opens the P port to the atmosphere.)

Do not apply high pressure suddenly when supplying the compressed air for the first time after connecting the pipes.

When supplying compressed air for the first time after piping is complete, make sure that there is no air leakage at the joints.

Apply leak detection agent to the joints in the piping using a brush to check for air leakage.

Do not narrow down the input port.

The supply pressure drops when the device is operating, which may cause malfunction.

Use the output port side with a volume of 1 cm or more as a guide.

If the secondary volume is too small, it may cause oscillation.

Cut the tube perpendicular to the axis.

Using diagonally cut tubes can cause air leaks.

2.3 Wiring

Check the connector pins and the cable conductor colors before wiring.

Incorrect wiring may cause damage, failure, and malfunctions of the product. Check the wire color described in the Instruction Manual before wiring.

Check the wiring insulation.

Make sure that the wires do not contact other circuits and there is no ground fault and insulation failure between terminals. Overcurrent may flow into the product and result in damage.

Use a DC stabilized power supply for the product that is within the rating and insulated from the AC power.

Uninsulated power may cause an electric shock. If the power is not stabilized, the peak value may exceed the rating. This may damage the product or lead to poor accuracy.

Stop the control device and the machinery and turn off the power before wiring.

Operating the product suddenly may cause an unexpected behavior and a dangerous situation. Perform an electrical current test with the control device and the machinery stopped and set the required data. Discharge static electricity from your body, tools, and devices before and during work. For movable sections, use wiring material with the same level of bending resistance as the robot wire.

Use the product within the power supply voltage range.

If voltage or AC power (100 VAC) out of the specified range is applied, the product may burst or an electric shock or a fire may occur.

Do not short-circuit the load.

The product may burst or burn.

ACAUTION

Insulate unused wires to avoid contact with other wires.


The optional shielded cable connector is for a shielded wire. Ground the shielded wire to the power supply side.

2.3.1 Cable connector

ACAUTION

Align the convex part of the main body side terminal with the concave part of the cable side terminal and insert it securely.

After inserting the connector, turn it in the direction of ①, and after confirming that it fits in with a clicking sound, turn it in the direction of ② and screw it in sufficiently.

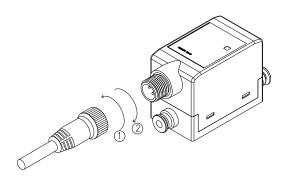

When screwing in the connector, screw in the lollet part instead of the cable body.

Do not screw in excessively as the connector on the main body side may be damaged.


When the analog output is not used, process it so that it does not come into contact with other wires.

2.3.2 Cable connection

<Connector pin placement> (Product body side)

Connector plug	Pin No.	Use	Type of signal
	1	Power +	DC24V
	2	Analog output	Selective
	3	Common	0VDC
	4	Input signal	Selective

2.3.3 Example of internal circuit and load connection

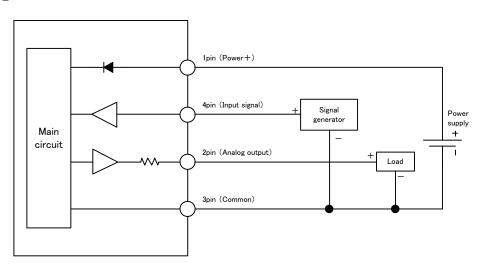

3. MAINTENANCE AND INSPECTION

⚠ WARNING

Turn off the power, stop the supply of compressed air and make sure that there is no residual pressure before maintenance.

ACAUTION

Plan and conduct daily and periodic inspections so that maintenance can be managed correctly.

If maintenance is not properly managed, the product's functions may deteriorate significantly and this may lead to faults (such as short service life, damage, and malfunctions) or accidents.

If an abnormality occurs during operation, immediately stop using the product, turn off the power, and shut off the pneumatic pressure source.

Conduct periodic inspections at least once a year to confirm that the product operates properly.

Do not use materials such as solvents, alcohol, or detergent to remove dirt or stains.

The case is made of resin and resin can be damaged by these materials. Use a waste cloth that is soaked in a diluted neutral detergent and wrung out well to wipe off dirt.

3.1 Periodic Inspection

Conduct periodic inspections at least once a year to prevent accidents or problems, such as functional deterioration, short service life, damage, or malfunctions.

■ Pressure of supplied compressed air

- · Is the set pressure supplied?
- Does the pressure gauge indicate the set pressure during operation of the device?

■ Pneumatic filter

- · Is drainage correctly discharged?
- · Is the bowl or element clean enough to use?

Leakage of compressed air from piping connections

Are all connections, especially at movable sections, correctly connected?
 (The product may not operate properly if leakage occurs from piping.)

Operational status

Is there any delay in operation?
 Are the valves exhausting properly?

■ Operation of pneumatic actuator

- · Are operations smooth?
- Is the actuator reaching the end stop properly?
- Are loads connected properly?

If an abnormality is found, contact your nearest CKD sales office or distributor.

SM-A45884-A 4. TROUBLESHOOTING

4. TROUBLESHOOTING

4.1 Problems, Causes, and Solutions

If the product does not operate as intended, check the table below for a possible solution.

Problem Cause		Solution	
	There is leakage on secondary side piping.	Using the product in this state will shorten the service life extremely. Reconsider the usage.	
	There is air entering from secondary side piping which exceeds relief performance.	Using the product in this state will shorten the service life extremely. Reconsider the usage.	
Loud noise is generated.	Power is turned on and input signal is set with no primary side pressure supplied.	Supply the primary side pressure and then turn on the power supply and set the input signal.	
	Primary side pressure is less than minimum working pressure.	Maintain the primary side supply pressure so that it is at least the minimum working pressure.	
	An input signal outside the specification range is applied	Apply an input signal within the specification range.	
	Power is turned off while input signal is set.	Turn on the power and set the input signal to 0%.	
1%FS or more pressure is output even if power is turned off.	Product has been left with power turned off and with primary side pressure supplied for a long period.	If the product has been left unused for a long period, set the primary side pressure to zero. If the secondary side pressure rises, turn on the power and set the input signal to 0%.	
Primary side pressure is output as it is.	There is a failure in EVS2.	Make sure that there is no abnormality in piping and wiring and then replace the product.	
	Input signal is abnormal.	Check if the input signal and the power supply GND are wired in common.	
Pressure cannot be controlled.	There is a failure in pressure sensor.	Replace the product. Make sure that excessive pressure does not apply on the secondary side due to pressure entering from other pipes.	
	Primary side pressure is not supplied.	Check that the primary side pressure is normal.	
Pressure is not output.	Wiring is abnormal.	Check that the wiring is normal. In addition, check that the connector is properly connected.	
Pressure does not reach set pressure.	Primary side pressure is insufficient.	Maintain the primary side supply pressure so that it is at least the minimum working pressure.	
Pressure does not drop.	Passage of exhaust port is blocked.	Mount the product so that the air can be exhausted from port R.	
	Power supply voltage is unstable.	Use a stabilized power supply that satisfies the product specifications.	
	Input signal is unstable.	Check whether the noise is affecting the signal.	
Pressure is unstable.	Primary side pressure is unstable.	Install a regulator on the primary side of the EVS2 to stabilize the primary side pressure.	
	There is leakage on secondary side piping.	Check leakage from secondary side.	
Pressure oscillates.	There is a mismatch or leakage of the piping volume on the secondary side.	Oscillation may be avoided by changing the piping condition. Reconsider the diameter of the piping, increase or decrease the load capacity, or check leakage on the secondary side.	
	Primary side pressure is too high against control pressure.	Reduce the primary side supply pressure as much as possible but maintain at least the minimum working pressure.	
Differential indicator lights red.	There is leakage on secondary side piping.	Check leakage from piping on the secondary side.	

5. WARRANTY PROVISIONS

5.1 Warranty Conditions

■ Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- · Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- · Failure that could have been avoided if the customer's machinery or device, into which the product is
- incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

■ Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

■ Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

5.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.