

**INSTRUCTION MANUAL
MANUALLY CONTROLLED
VALVES**

**HMVC2, HSVC2
HMVO2, HSVO2**

Please read this instruction manual carefully before using this product, particularly the section describing safety .

Retain this instruction manual with the product for further consultation whenever necessary .

For Safety Use

To use this product safely, basic knowledge of pneumatic equipment, including materials, piping, electrical system and mechanism, is required (ISO 4414 *1, JIS B 8370 *2).

We do not bear any responsibility for accidents caused by any person without such knowledge or arising from improper operation.

Our customers use this product for a very wide range of applications, and we cannot keep track of all of them. Depending on operating conditions, the product may fail to operate to maximum performance, or cause an accident. Thus, before placing an order, examine whether the product meets your application, requirements, and how to use it.

This product incorporates many functions and mechanisms to ensure safety. However, improper operation could result in an accident. To prevent such accidents, read this operation manual carefully for proper operation.

Observe the cautions on handling described in this manual, as well as the following instructions:

CAUTION :

- Do not touch electric wiring connections (exposed live parts) : this will cause an electric shock. During wiring, keep the power off. Also, do not touch these live parts with wet hands.

*1) ISO 4414 : Pneumatic fluid power ... Recommendations for the application of equipment to transmission and control systems.

*2) JIS B 8370 : General rule for pneumatic systems

INDEX

HMVC2, HSVC2
HMVO2, HSMVO2

Manually Controlled Valves

Manual No. SM-154037-A

1. PRODUCT	
1.1 Specifications	3
1.2 External dimensions and JIS Symbol	3
1.3 Fundamental circuit diagram	5
2. CAUTION	
2.1 Fluid	7
3. OPERATION	
3.1 Mounting a handle bar	8
3.2 Shifting the direction of flow	8
4. INSTALLATION	
4.1 Piping	9
4.2 Tightening torque	9
4.3 On panel mounting	9
5. MAINTENANCE	
5.1 Disassembling	10
6. HOW TO ORDER	12



1. PRODUCT



1.1 Specifications

Item	Specifications					
Media	Compressed air					
Fluid temperature	5 to 50					
Ambient temperature	-5 to 50 (Not to be frozen)					
Working pressure range	0 to 1.0MPa					
Proof pressure	1.5 MPa					
Effective sectional area	Model No.	HMV C O 2		HSV C O 2		
	Item					
	Port size Rc	1/8	1/8	1/4	3/8	1/2
Effective sectional area mm ²	8	40	50	55	55	

1.2 External dimensions and JIS Symbol




1) External dimensions

- HMVC2-8-4H, 4V
- HMVO2-8-4H, 4V

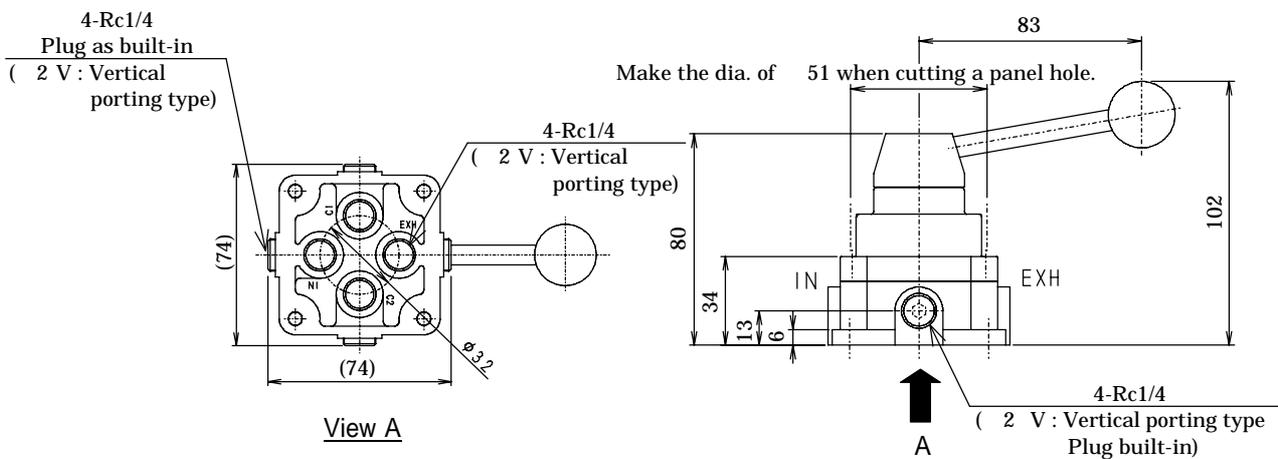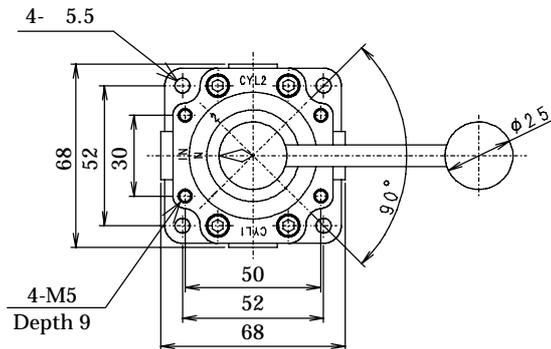




- HSVC2-8 to 20-4H
- HSVO2-8 to 20-4H

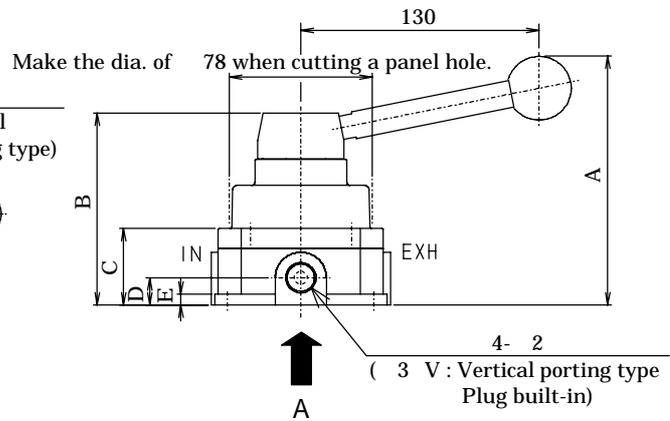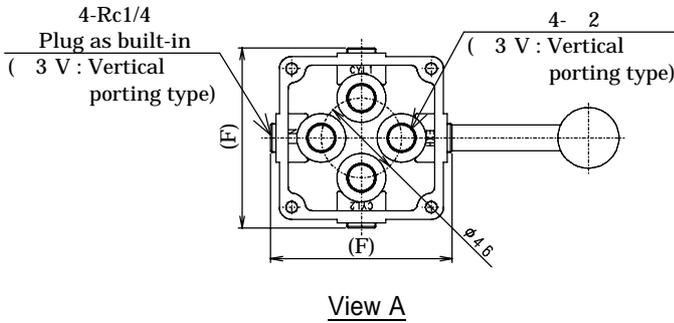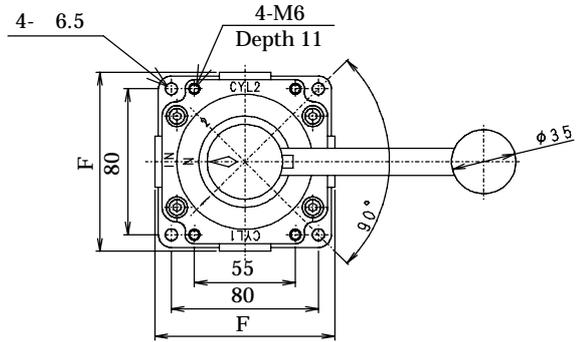


Symbol	A	B	C	D	E	F
Model No.						
HSV 2-8 to 15-4H	132	105	42	15	6	98
HSV 2-8 to 15-4V	132	105	42	15	6	104
HSV 2-20-4H	137	110	47	18	10	98

2) JIS Symbol

- HMVC2, HSVC2 (All port blocked)

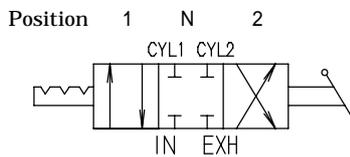

- HMVO2, HSVO2 (CYL1, CYL2, EXH. Connection)

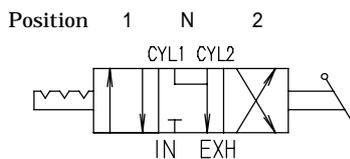

1.3 Fundamental circuit diagram

Normal application of manually operated directional control valve is as per illustrated below, generally

Fig.1. An example of All ports blocked valve circuit

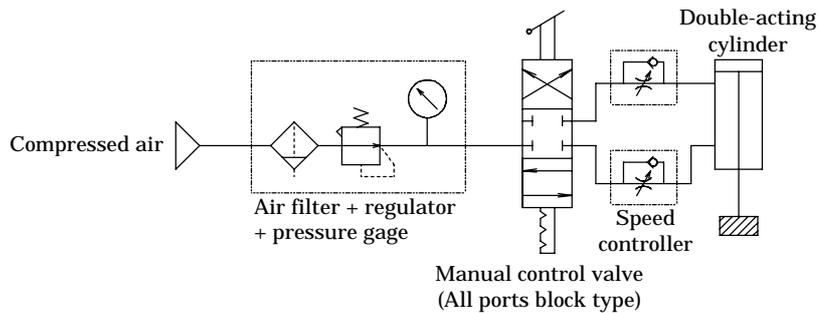


Fig.2. An example of ABR ports valve circuit


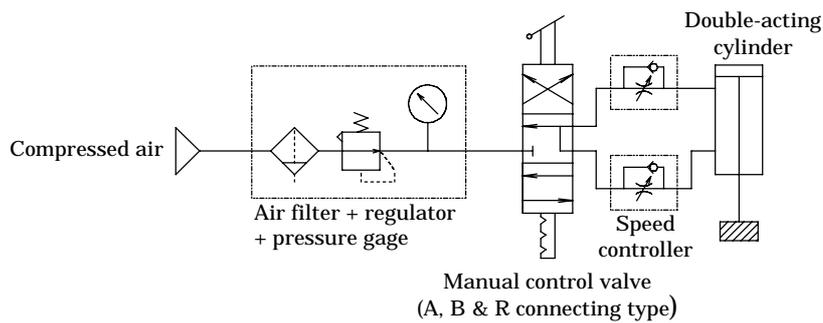



Fig.3. An example of ABR ports valve circuit combined with a master valve



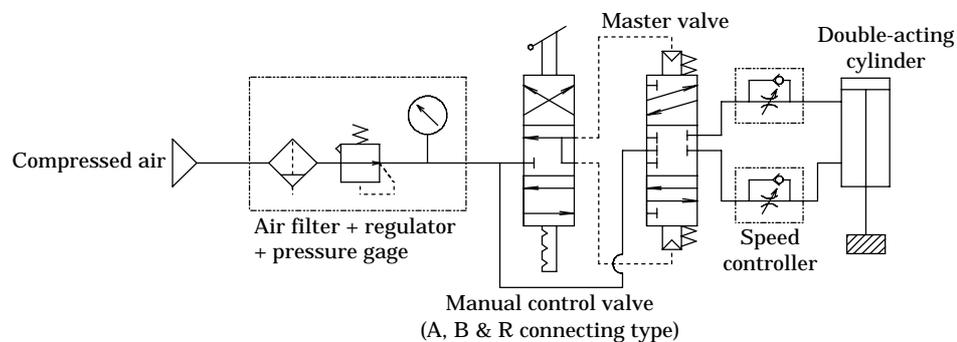

CAUTION


1. Make sure to use “IN” port to supply compressed air to the manual shifting valve. There will be internal leakage otherwise.
2. Due to non-elastic seals being used to build the main valve (manual shifting), internal leakage of valve is estimated to be fairly noticeable volume as follows (although it is to be about 1/10 of it at ex-factory).
HMV type = Below 500Ncm³/min ANR
HSV type = Below 1000Ncm³/min ANR
Beware, therefore, cylinder may slide when it is left for long at an intermediate stop position when circuit is built with all ports blocked valve.
As for a counter measure. it is recommended to combine a master valve (internal leakage below 10Ncm³/min ANR) (FIG. 3).
3. For only two-position operation, use a manual shifting valve, all ports blocked and shift it to either “1” or “2” only, passing over the position “N” (neutral).

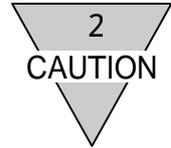


2. CAUTION

2.1 Fluid

- 1) It is necessary to use dehumidified air that has been filtered from compressed air. Carefully select an adequate filter that has an adequate filtration rate (preferably $5\ \mu\text{m}$ or less), flow rate and its mounting location (as nearest to the directional control valve as possible).
- 2) Be sure to drain out the accumulation in the filter periodically.
- 3) Note that the intrusion of carbide for the compressor oil (such as carbon or tarry substance) into the circuit causes malfunction of the solenoid valve and the cylinder. Be sure to carry out thorough inspection and maintenance of the compressor.
- 4) Use "Turbine oil, class 1, ISO VG32" or equivalent, when lubrication is required.
- 5) Within the ambient of much dusts or small particles, prevent them from falling into circuit system by installing a silencer at Exh. port or similar measure.

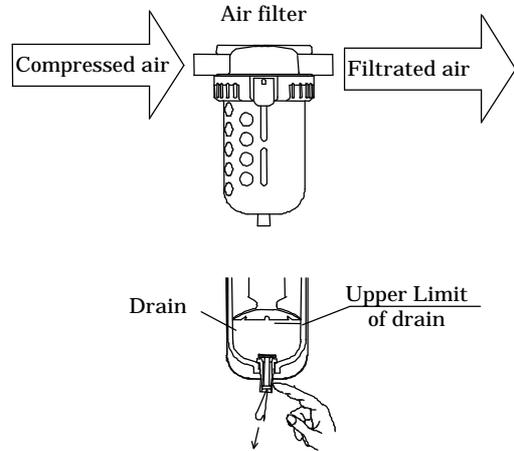

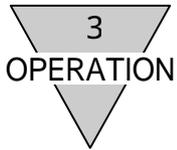


3. OPERATION

3.1 Mounting a handle bar

Screw the handle ass'y with a red ball at a handle end into tapped thread on the handle head tightly. (Loosen play wears out thread shortly.)

3.2 Shifting the direction of flow

Control it with this handle bar. Swing the bar until it clicks at required marking such as 1, 2 or Neutral.

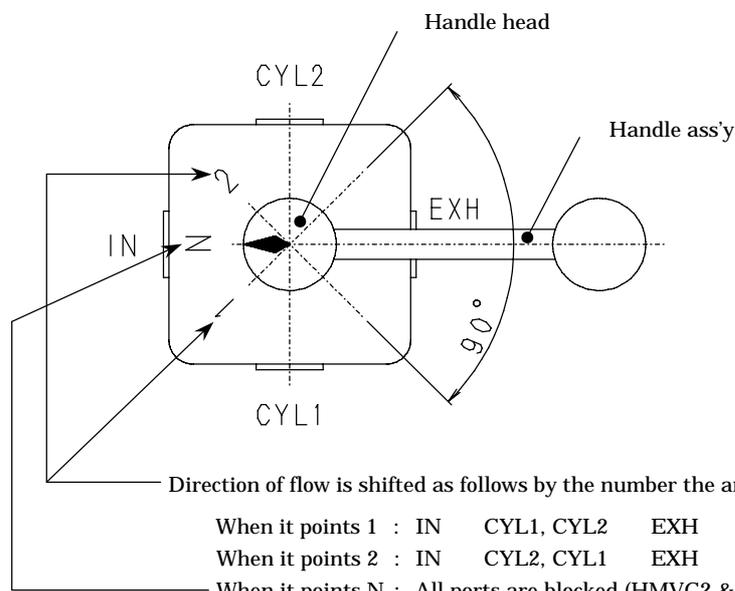

Direction of flow is shifted as follows by the number the arrow mark points.

When it points 1 : IN CYL1, CYL2 EXH

When it points 2 : IN CYL2, CYL1 EXH

When it points N : All ports are blocked (HMVC2 & HSVC2)


: CYL 1, CYL 2 & EXH. Ports Connection (HMVO2 & HSMO2)

4. INSTALLATION

4.1 Piping

1) For piping beyond the filter, use pipes that hardly get corroded such as galvanized pipes, nylon tubes, rubber tubes, etc.


2) Be sure observe the effective thread length of gas pipe and give a chamfer of approx. 1/2 pitch from the threaded end.

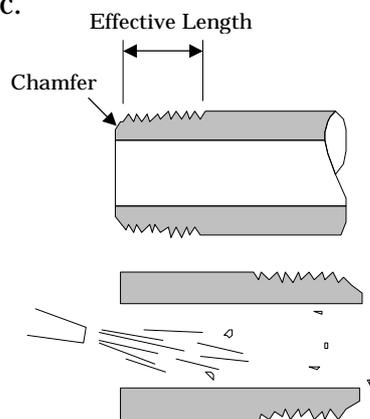


3) Flush air into the pipe to blow out foreign substances and chips before piping.

4) Refrain from applying sealant or sealing tape approx. two pitches of thread off the tip of pipe to avoid residual substances from falling into piping system.

Seal Tape

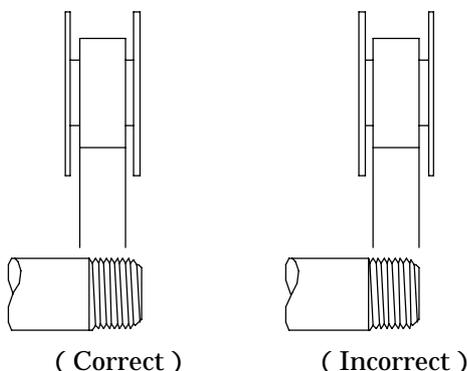

Sealant (Paste or liquid)

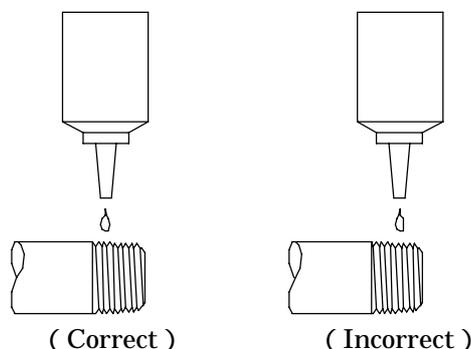

4.2 Tightening torque

Apply the torque range as specified in the table to the right so as to prevent air leakage and possible damage as well.

Port dia	Appropriate tightening torque N · m
Rc1/4	6 to 8
Rc3/8	13 to 15
Rc1/2	16 to 18
Rc3/4	18 to 21

4.3 On panel mounting

For on panel mounting, use the following mounting screws respectively, referring to “1-2 External dimensions drawing”. 4 M6 screws for HSV as well as 4 M5 screws for HMV




5. MAINTENANCE

5.1 Disassembling

1) Reference drawin

HMVC2
HSVC2

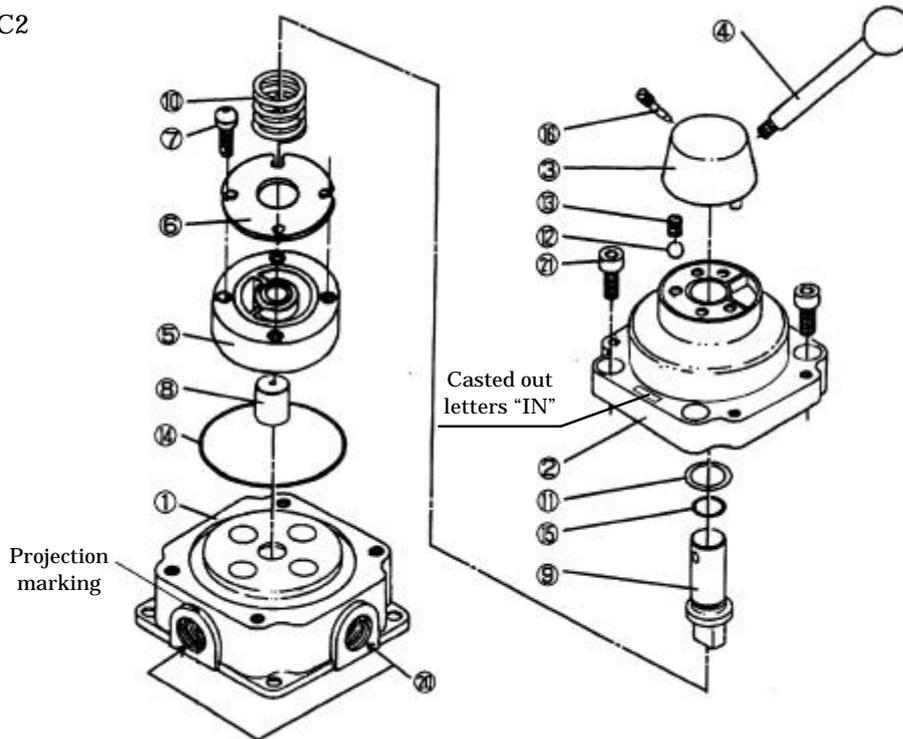


CAUTION at assembling

When building this unit, make those three points match with each other such as IN mark on cover , projected point on slide ring and projected point on body .

No.	Name of parts	Material	Qty	Note	No.	Name of parts	Material	Qty	Note
	Body ass'y	ZDC2	1			Washer	PE	1	
	Cover ass'y	ZDC2	1			Ball	SUS304	1	
	Handle head	ZDC2	1			Spring	SUS304	1	
	Handle ass'y	SS41	1			O ring	NBR	1	JISB2401G75 (G45)
	Slide ring	ZDC2	1			O ring	NBR	1	JISB2401P12 (P5)
	Plate ass'y	SPCC	1			Pin	SS41	1	
	Cross headed pan	SWRM	4(3)			Hexagon socket plug	SS400	4	Use this port for vertivcal piping (V).
	Rod	SS41	1			Hexagon socket head cap screw	SCM3	4	M6 × 12 (M5 × 12)
	Spindle	SS41	1		②				
	Spring	SWP	1						

(specs) are for model HMVC2

HMVO2
HSVO2

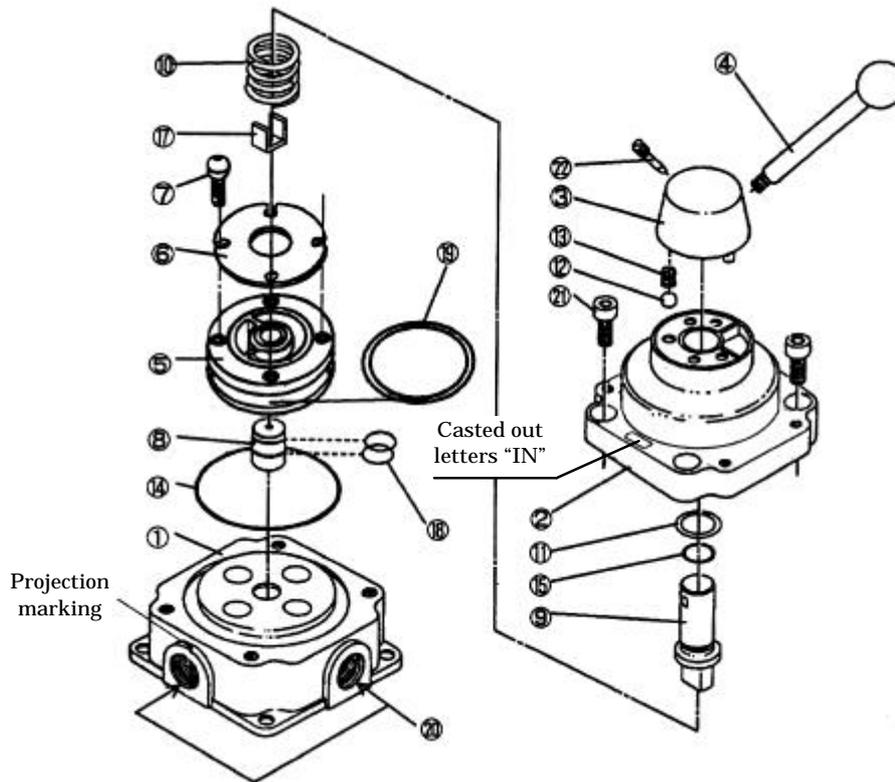


CAUTION at assembling

When building this unit, make those three points match with each other such as IN mark on cover, projected point on slide ring and projected point on body.


No.	Name of parts	Material	Qty	Note	No.	Name of parts	Material	Qty	Note
	Body ass'y	ZDC2	1			Washer	PE	1	
	Cover ass'y	ZDC2	1			Ball	SUS304	1	
	Handle head	ZDC2	1			Spring	SUS304	1	
	Handle ass'y	SS41	1			O ring	NBR	1	JISB2401G75 (G45)
	Slide ring	ZDC2	1			O ring	NBR	1	JISB2401P12 (P5)
	Plate ass'y	SPCC	1			Pin	SS41	1	
	Cross headed pan	SWRM	4(3)			Spindle guide	SPCC	1(0)	
	Rod	SS41	1			O ring	NBR	2	JISB2401P7 (KS2)
	Spindle	SS41	1			O ring	NBR	1	JISB2401G65 (special)
	Spring	SWP	1			Hexagon socket plug	SS400	4	Use this port for vertivcal piping (V).
					(21)	Hexagon socket head cap screw	SCM3	4	M6 × 12 (M5 × 12)

(specs) are for model HMVO2

- Apply Silicone grease to every sliding metal part such as Slide ring, Steel ball, Spindle, O ring etc when assembling the valve.

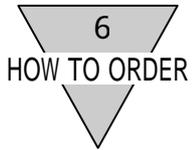

6. HOW TO ORDER



(a) Type		(b) Operator type		(c) Port size		(d) Piping	
M	Miniature	C	Three position all ports blocked	8	Rc1/4	H	Horizontal piping
S	Standard	O	Three position ABR port connection	10	Rc3/8	V	Vertical piping
				15	Rc1/2		Vertical piping of dia. 20 is unavailable.
				20	Rc3/4		

Connecting ports of HMV type is Rc1/4 only.