



To Use This Product Safely

Be sure to read this before use.

For general cylinder information, see Intro 41, and for cylinder switches, see P. 808.

Individual Precautions: Linear Slide Cylinder LCG Series

During Design / Selection

1. Common

Caution

■ For cylinder selection, follow the "LCG Selection Guide" on P. 188 to 192.

■ If the cylinder is used in a place exposed to water droplets or oil droplets, a place where there is a risk of corrosion, or a place with a lot of dust, it may cause damage or malfunction, so protect the product with a cover, etc.

Precautions for products with switches

- When using a T□V type switch with a stroke adjustment stopper (S3□□, S4□□, S5□□, S6□□) or a Shock absorber type stopper (A3□□, A4□□, A5□□, A6□□), the switch on the head side will interfere with the stopper, so install the switch on the opposite side of the stopper.

- For switches with a stroke of 30 or less, one switch is included to each of the two grooves on the main body, so pay attention to the lead wire extraction direction during design.

■ Be careful as bringing strong magnets near this product may cause the table to become magnetized and the switch to malfunction.

2. Drop prevention type LCG-Q

Caution

Do not use 3-position valves.

Avoid using in combination with 3-position valves (especially closed center metal seal type). If pressure is trapped in the port on the side with the lock mechanism, the lock will not engage. Also, even if locked once, air leaking from the valve may enter the cylinder, and the lock may be released over time.


During Use

1. Common; During piping

Caution

■ When changing the piping port position, use adhesive for M3 and M5 plugs (hexagon socket head set screws). (Recommended adhesive: Loctite 222/221, ThreeBond 1344, or other low-strength adhesives)

Piping port position and operating direction

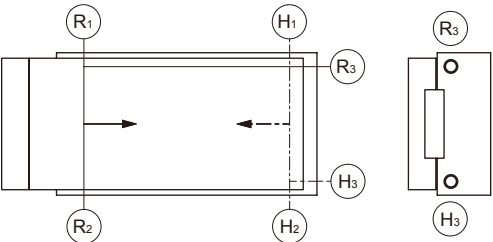

Ⓡ indicates the rod side pressurizing port, and Ⓜ indicates the head side pressurizing port. At the time of factory shipment, ports other than Ⓡ₁ Ⓜ₁ (Ⓡ₂ Ⓜ₂ depending on the stopper position when a stopper is selected) are sealed with plugs.

Rear piping

This product, excluding the fall prevention type, can be used with rear piping (Ⓜ₃ ports Ⓡ₂ shown in the diagram above). When using Ⓡ₁ Ⓜ₁ remove the plug sealing the port Ⓡ₁ Ⓜ₁ and seal the port with a plug from the table on the right.

Item	Plug
LCG-6	Seal the Ⓡ ₁ Ⓜ ₁ ports with the plug that was sealing the Ⓡ ₁ Ⓜ ₁ ports.
LCG-8	
LCG-12	M5x5 (Hexagon socket head set screw)
LCG-16	
LCG-20	R1/8 (Hexagon socket head taper thread plug)
LCG-25	Seal the Ⓡ ₁ Ⓜ ₁ ports with the plug that was sealing the Ⓡ ₁ Ⓜ ₁ ports.

For Ⓢ8 to Ⓢ20, it is necessary to prepare two plugs from the table above separately.

Precautions for piping fittings

Be sure to use a speed controller when piping. Also, the usable fittings are as follows.

Item	Port Size	Port position dimension A	Usable fittings	Fitting outer diameter B
Ⓢ6	M3	4	SC3W-M3-4 SC3U-M3-4 SC3W-M3-3.2 SC3U-M3-3.2 GWS3-M3-S GWS4-M3-S	Ⓢ8 or less
Ⓢ8	M5	5.5	SC3W-M5-4 SC3W-M5-6 GWS4-M5-S GWS4-M5	Ⓢ11 or less
Ⓢ12		5.5		
Ⓢ16	M5	6.5	SC3W-M5-4 SC3W-M5-6 GWS4-M5-S GWS4-M5 GWL4-M5 GWL6-M5 GWS6-M5	Ⓢ13 or less
Ⓢ20	Rc1/8	8	SC3W-6-4,6,8 GWS4-6 GWS8-6 GWL6-6 GWS6-6 GWL4-6	Ⓢ15 or less
Ⓢ25		9		


2. Common; During installation

Caution

■ Please do not make dents or scratches on the mounting surface of the main body (tube) and the table surface that may impair flatness. Also, the flatness of the mating side to be included to the main body and table should be 0.02 mm or less.

■ Observe the following values for the bolt screw-in length and tightening torque when mounting the main body.


[Figure 1]

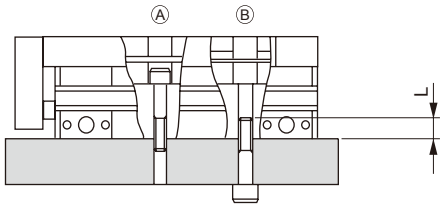

Item	A		B		Max. screw-in depth L (mm)
	Bolt used	Tightening torque (N·m)	Bolt used	Tightening torque (N·m)	
LCG-6	M3x0.5	0.6 to 1.1	M4x0.7	1.4 to 2.4	6
LCG-8	M3x0.5	0.6 to 1.1	M4x0.7	1.4 to 2.4	6
LCG-12	M4x0.7	1.4 to 2.4	M5x0.8	2.9 to 5.1	8
LCG-16	M5x0.8	2.9 to 5.1	M6x1.0	4.8 to 8.6	9
LCG-20	M5x0.8	2.9 to 5.1	M6x1.0	4.8 to 8.6	9
LCG-25	M6x1.0	4.8 to 8.6	M8x1.25	12.0 to 21.6	12

■ Observe the following values for the bolt screw-in length and tightening torque when mounting a jig to the slide table and end plate.


[Figure 2]

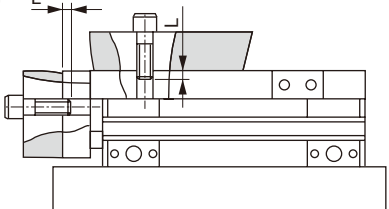


Item	Table		
	Bolt used	Tightening torque (N·m)	Max. screw-in length L (mm)
LCG-6	M3x0.5	0.6	3
LCG-8	M3x0.5	0.6	3
LCG-12	M4x0.7	1.4	4
LCG-16	M5x0.8	2.9	5
LCG-20	M5x0.8	2.9	5
LCG-25	M6x1.0	4.8	6

Item	End plate		
	Bolt used	Tightening torque (N·m)	Screw-in length L (mm)
LCG-6	M3x0.5	0.6	4.5 to 6
LCG-8	M3x0.5	0.6	4.5 to 7
LCG-12	M4x0.7	1.4	6 to 9
LCG-16	M5x0.8	2.9	7.5 to 9
LCG-20	M5x0.8	2.9	7.5 to 11
LCG-25	M6x1.0	4.8	9 to 11

■ If there is a magnetic material such as an iron plate near the cylinder switch, it may malfunction. It can be used safely by keeping it 10 mm or more away from the cylinder surface or by changing the mounting surface of the cylinder switch. (Common to all bore sizes)

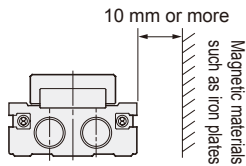

■ If cylinders are adjacent, the cylinder switch may malfunction. Maintain the following distance from the cylinder surface. (Common to all bore sizes)

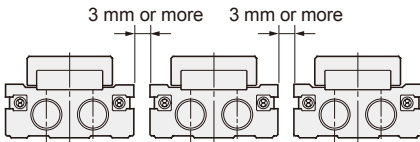

■ Treat our Shock absorbers as consumable parts. Replace when a decrease in energy absorption capacity is observed or when operation is no longer smooth.

■ When using locating holes, use pins with dimensions that do not result in a press fit. Using press-fit dimension pins may cause damage to the linear guide part due to press-fitting load or accuracy deterioration due to distortion. The recommended tolerance for pins is JIS tolerance m6 or less.


■ For the guide part, apply AFF grease (manufactured by THK CO., LTD.) to the guide rail raceway surface every 6 months or 1 million operations, whichever comes first.

■ Pay attention to the corrosion resistance of the table. The table uses martensitic stainless steel (Ⓢ6 to Ⓢ16) and alloy steel (Ⓢ20, Ⓢ25). Rust may occur if used in a hot and humid environment or in an environment where water droplets adhere due to condensation, etc.

3. Drop prevention type LCG-Q

Warning

■ In the locked state, if pressure is supplied to port ① from a state where both side ports are not pressurized, the lock may not be released, or the lock may suddenly be released and the piston rod may fly out, which is very dangerous. When releasing the lock mechanism, always supply pressure to port ② and release it from a state where no load is applied to the lock mechanism.

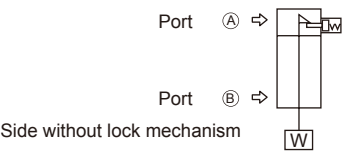

■ When using a quick exhaust valve to increase the lowering speed, the cylinder body may start moving before the lock pin operates, and normal release may not be possible. Do not use a quick exhaust valve with a drop prevention type cylinder.

Caution

■ The lock mechanism works at the stroke end. If an external stopper is applied mid-stroke, the lock mechanism may not engage, and there is a risk of falling. When setting the load, be sure to confirm that the lock mechanism is working before installing.

■ If the piping on the side with the lock mechanism is thin and long, or if the speed controller is far from the cylinder port, the exhaust speed may be slow and it may take time for the lock to engage, so please be careful. Also, clogging of the silencer included to the EXH. port of the solenoid valve will lead to similar results.

■ If back pressure is applied to the lock mechanism side, the lock may be released, so use a single solenoid valve or a manifold with individual exhaust.

■ Do not use multiple cylinders synchronized.
Do not use a method where two or more fall prevention type cylinders are synchronized to move one workpiece. The lock of one of the cylinders may become unremovable.


■ Use the speed controller with meter-out control.
Lock may not be released with meter-in control.

■ On the side with the lock, be sure to use the cylinder to the stroke end.
If the cylinder piston has not reached the stroke end, the lock may not engage, or it may not be possible to release the lock.

4. With buffer LCG-B

■ Depending on the speed and load, the buffer may activate during operation, causing the switch to malfunction. Adjust the speed according to the load before use.

■ Please note that models with buffers cannot be used in a vertically upward orientation.

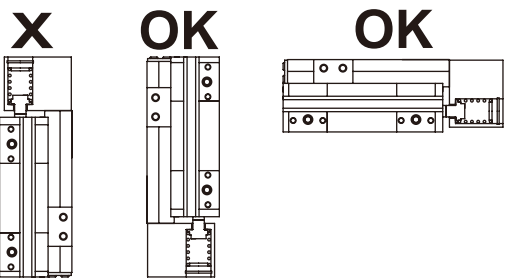

■ Use the buffer with a stroke less than the buffer stroke. This will cause malfunction or damage.

MEMO