

INSTRUCTION MANUAL

SUPER COMPACT CYLINDER (Coolant Proof Type)

SSD-G2, G3 SSD-KG2, KG3 Series

- Please read this instruction manual carefully before using this product, particularly the section describing safety.
- Retain this instruction manual with the product for further consultation whenever necessary.

CKD Corporation

The 2nd edition

For Safety Use

To use this product safely, basic knowledge of pneumatic equipment, including materials, piping, electrical system and mechanism, is required (to the level pursuant to JIS B 8370 Pneumatic System Rules).

We do not bear any responsibility for accidents caused by any person without such knowledge or arising from improper operation.

Our customers use this product for a very wide range of applications, and we cannot keep track of all of them. Depending on operating conditions, the product may fail to operate to maximum performance, or cause an accident. Thus, before placing an order, examine whether the product meets your applications, requirements, and how to use it.

This product incorporates many functions and mechanisms to ensure safety. However, improper operation could result in an accident. To prevent such accidents, **read this operation manual carefully for proper operation.**

Observe the cautions on handling described in this manual, as well as the following instructions:

CAUTION :

- Before performing an overhaul inspection on the actuator, deactivate residual pressure completely.
- While the actuator is operating, do not step into or place hands in the driving mechanism.
- To prevent an electric shock, do not touch the electric wiring connections (exposed live parts) of the actuator equipped with a solenoid valve or switch.
Perform an overhaul inspection with the power off. Also, do not touch these live parts with wet hands.


INDEX

SSD-G2, G3
SSD-KG2, KG3 Series

Super Compact Cylinder (Coolant Proof Type)
Double-acting type

Manual No. SM-236244-A

1. UNPACKING	3
2. INSTALLATION	
2.1 Installation	3
2.2 Piping	3
2.3 Fluid	5
2.4 Location of mounting Switches on a Cylinder	5
3. OPERATION	
3.1 Operating the Cylinder	7
3.2 How to use the Switches	7
4. MAINTENANCE	
4.1 Periodical Inspection	12
4.2 Disassembly	12
4.3 Assembly	12
4.4 Internal structure drawings and Expendable parts list	13
5. TROUBLE SHOOTING	17
6. HOW TO ORDER	
6.1 Product Number Coding	18
6.2 Component parts Model coding	19
7. SPECIFICATIO	
7.1 Product Specifications	20
7.2 Switch Specification	21

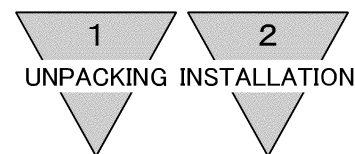

1. UNPACKING

- 1) Make sure that the type No. on the nameplate of the delivered Super Compact Cylinder matches the type No. you ordered.
- 2) Check the appearance for any damage.
- 3) Stop up the piping port with a sealing plug to prevent the entry of foreign substances into the cylinder. Remove the sealing plug before piping.


2. INSTALLATION

2.1 Installation


- 1) The ambient temperature for this cylinder is -10 to 60°C. Always operate the cylinder within this temperature range.
- 2) Install cylinder body with a hexagon socket head cap screw directly.
- 3) As for the rod nose screw, there are internal thread type and external thread type. Use it to application.
- 4) Attach a guide so that no lateral load is exerted onto the piston rod.
(Example) Apply no lateral load at all for the purpose of a stopper.

2.2 Piping


- 1) For piping beyond the filter, use pipes that are tough against corrosion such as galvanized pipes, nylon tubes, rubber tubes, etc.
- 2) See to it that the pipe connecting cylinder and solenoid valve has effective sectional area which is needed for the cylinder to drive at the specified speed.
- 3) Install filter preferably adjacent to the upper-stream to the solenoid valve for eliminating rust, foreign substance in the drain of the pipe.
- 4) Be sure observe the effective thread length of gas pipe and give a chamfer of approx. 1/2 pitch from the threaded end.
- 5) Flush air into the pipe to blow out foreign substances and chips before piping.

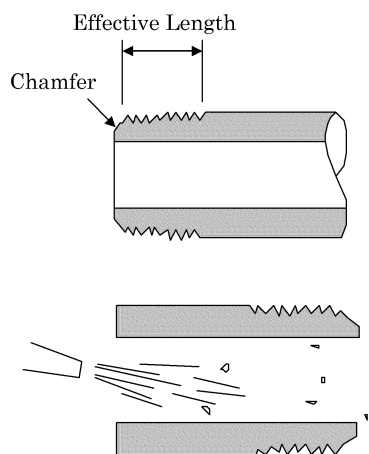

- 6) Refrain from applying sealant or sealing tape approx. two pitches of thread off the tip of pipe to avoid residual substances from falling into piping system.

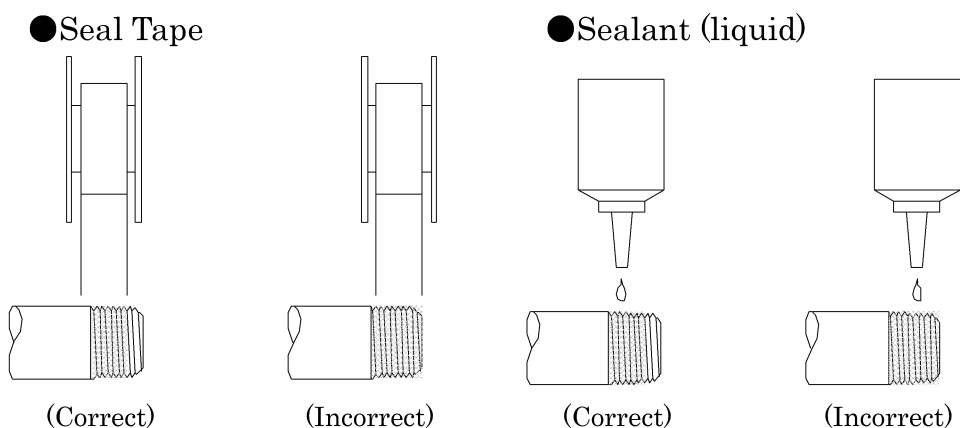


- 7) Because the usable piping joint has limitations, for using it, see the note below.

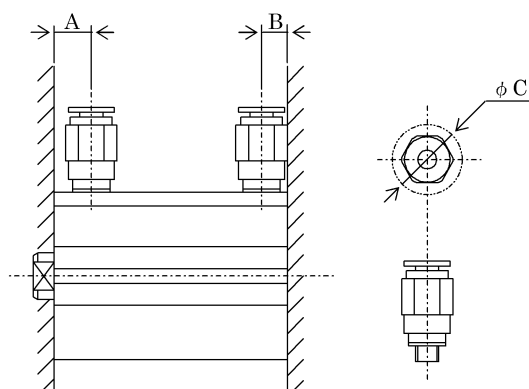

Item	Port diam.	Port dimension		Available joints	Joint OD	Joint unsuitable
Bore size (mm)		A	B		φ C	
φ 16	M5×0.8	15.5	5.5	SC3W-M5-4, SC3W-M5-6 GWS4-M5-S, GWS4-M5 GWL4-M5, GWL6-M5	φ 11 or less	GWS6-M5
φ 20		18				
φ 25		21				
φ 32	Rc1/8	8	8	SC3W-6-4•6•8 GWS4-6, GWS6-6, GWS8-6 GWL4-6, GWL6-6	φ 15 or less	GWS10-6 GWL8-6 GWL10-6
φ 40		12	8.5			
φ 50	Rc1/4	10.5	10.5	SC3W-8-6•8•10 GWS4-8, GWS6-8, GWS10-8 GWL4 to 12-8	φ 21 or less	GWS-12-8
φ 63		13	11			
φ 80	Rc3/8	16	13	SC3W-10-6•8•10 GWS6-10, GWS8-10, GWS10-10 GWL6 to 12-10		—
φ 100		23	15			


2.3 Fluid

- 1) It is necessary to use dehumidified air that has been filtered from compressed air. Carefully select an adequate filter that has an adequate filtration rate (preferably $5\ \mu\text{m}$ or less), flow rate and its mounting location (as nearest to the directional control valve as possible).
- 2) Be sure to drain out the accumulation in the filter periodically.
- 3) Note that the intrusion of carbide for the compressor oil (such as carbon or tarry substance) into the circuit causes malfunction of the solenoid valve and the cylinder. Be sure to carry out thorough inspection and maintenance of the compressor.
- 4) This cylinder does not require lubrication. It is recommended, however, to use Turbine oil Grade 1, ISO VG32 as a lubricant, if and when lubrication is needed.

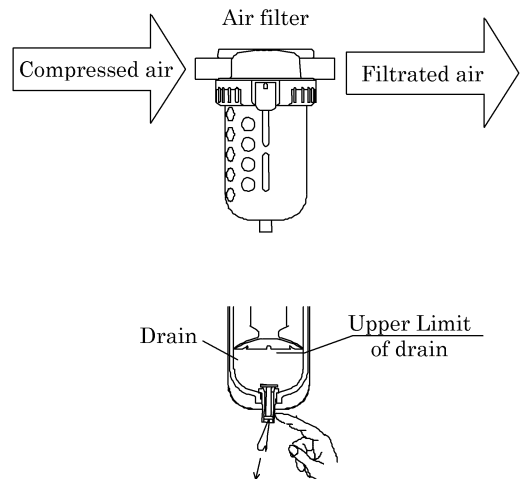

2.4 Location of mounting Switches on a Cylinder


- 1) Location of mounting switches on a cylinder.
 - (1) At the stroke end
Refer the illustration above. Mount switches within the rod side dimension RD as well as the head side dimension HD for the purpose of having switches function at the points of the maximum sensitive position.
 - (2) Intermediate of stroke
Move the piston where it is anticipated to stop and fix it tentatively. Slide a switch carefully along the side of cylinder over the piston to find out the spot where switch turns on. This type spot should be located on both side of piston. The intermediate spot between those posits is of the maximum sensitive position and where the switch is supposed to be installed.

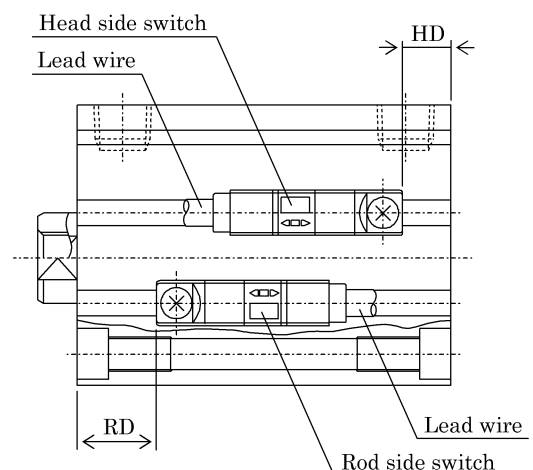

- (3) Relocation of switch
 Slide switch body along cylinder tube after loosening mounting screws and tighten screws when located the maximum sensitive position.
- (4) Replacing switch
 Take out switch out of groove after loosening mounting screws. Slide new replacing switch into groove and tighten screws upon placing the switch at the maximum sensitive position. (Apply tightening torque of 0.5 to 0.7N・m)

2) Hysteresis

- (1) Precise operating range deviate slightly depending upon the direction of piston movement as shown right.
- (2) Switch is apt to be disturbed its accuracy by external effect when piston stops within this range. Carefully avoid designing stopping location of piston.

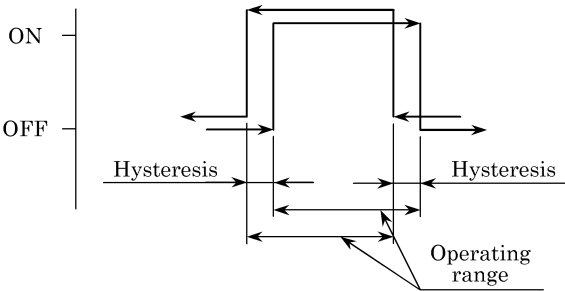

Maximum sensitive position (HD・RD), Operating range and Hysteresis (Unit: mm)

Item		T2YLH/V, T3YLHV							
		SSD-G2L, G3L			SSD-KG2L, KG3L				
Bore size (mm)	Maximum sensitive position		Operating range	Hysteresis	Maximum sensitive position		Operating range	Hysteresis	
	HD	RD			HD	RD			
ϕ 16	4.5	12.5	3 to 7	1.0 or less	2.5	14.5	3 to 7	1.0 or less	
ϕ 20	1.5	18.0	4.5 to 8		4.5	20	4.5 to 8		
ϕ 25	2.0	20.0				22.5			
ϕ 32	4.5	20.5				9.5			25.5
ϕ 40	8.0	23.5	5 to 8.5		10.5	31	5 to 8.5		5.5 to 9.5
ϕ 50	9.0		5.5 to 9.5		11.5	31			
ϕ 63	13.0				24.0	18	29		
ϕ 80	19.0	26.5	6 to 10		24	31.5	6 to 10		
ϕ 100	24.5	30.5			29.5	35.5			

※ Switches at ex-factory shipment are positioned at the maximum sensitive position (HD and RD).
 Note: HD and RD for five strokes may vary from those stated in the above table since they are set every time the cylinder is installed.

3. OPERATION




3.1 Operating the Cylinder

- 1) The working pressure for this type of cylinder is specified in “Product Specifications” . Operate the system within this range.
- 2) Install an external stopper when the dynamic energy is large, as it does not absorb the kinetic energy since it has no cushion.
- 3) Install an appropriate speed controller to adjust the working piston speed.

3.2 How to use the Switches

3.2.1 Common items

- 1) Magnetic environment
Do not operate this product in a place where a strong magnetic field or large current (large magnet or spot welder, etc.) exists. If a cylinder with the switch is installed in parallel to this product or the magnetic substance moves near the cylinder, the mutual interference may occur and affect the detection accuracy.
- 2) Protection of lead cord
Pay consideration to eliminate repeating bending stress or stretching of lead cord while laying the cord.
To the moving portion, use such cord of flexibility as for building a robot.
- 3) Operating temperature
Do not operate the product at a high temperature (60°C)
Always avoid operation of the product in a hot place due to temperature characteristics of magnetic and electronics parts.
- 4) Intermediate position detection
When activating the switch halfway of the stroke, the relay may not respond if the piston speed is too fast.
(Example) Operate cylinder with the speed of less than 500mm/s in case the relay actuation time is 20ms.
- 5) Shock resistance
Do not apply a large vibration or impact to the product when transporting the cylinder, or mounting or adjusting the switch.

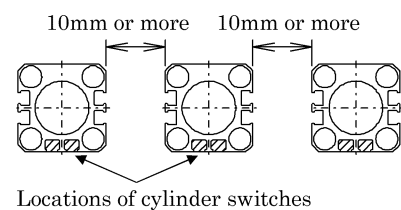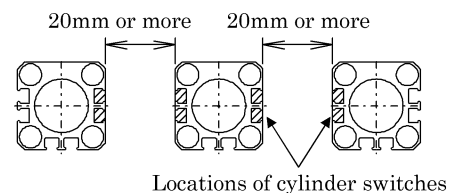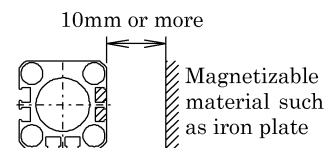

- 6) Magnetizable material such as ironplate near by cylinder switch is apt to cause malfunction of cylinder switches. Keep it from cylinder surface at least 10mm away (This is applicable for all bore sizes of tube).
- 7) It usually causes malfunction cylinder switches when plural cylinders are laid adjoining. Keep a space between each other as illustrated to right (This is applicable for all bore sizes of tube).

3.2.2 Operational Cautions, Solid state switch (T2YLH/V, T3YLH/V)

1) Connection of lead cord

Comply with the color coding specified on the illustrations. Be sure to turn the power off before starting connecting work.

An erroneous wiring or short circuiting of load causes damage to not only switches, but also load side circuit. Wiring work without shutting electricity off may cause damage to the load side circuit.

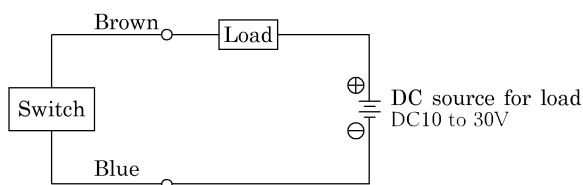


Fig.1 T2(Y) Fundamental circuit Example

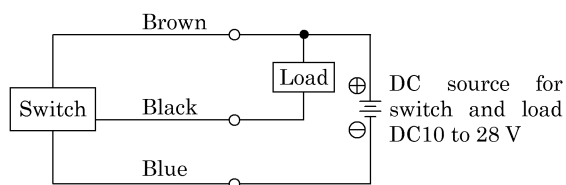


Fig.2 T3(Y) Fundamental circuit Example(1)
(In case the same source of power is used.)

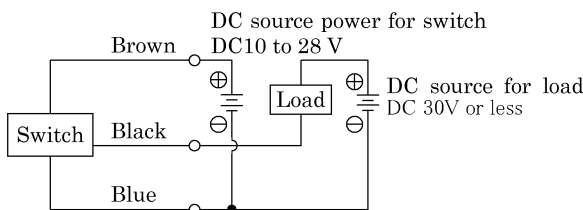


Fig.3 T3(Y) Fundamental circuit Example(2)
(In case individual sources of power are used.)

2) Protection of output circuit

Install some protective circuit as illustrated in Fig. 4 when inducing type load (Relay or solenoid valve) are to be used because those types apt to generate surge current switch off.

Install some protective circuit as illustrated in Fig. 5 when capacitor type load (Capacitor type) are to be used, because these types apt to generate a dash current when turning the switch ON.

Install some protective circuit as illustrated in Fig. 6 or 7 (in case of model T2(Y)) and Fig 8 (in case of model T3(Y)).

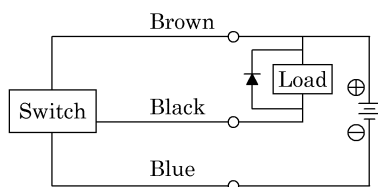


Fig.4 An example of using inducing load together with surge absorptive element (diode).
(Hitachi Mfg. made diode V06C or equivalent is recommended.)

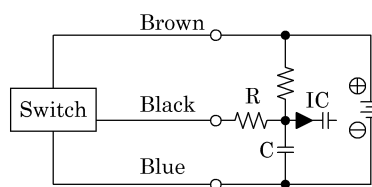


Fig.5 An example of using capacitor type load together with current regulating resistor R. Comply with the following formula to figure out required R.

$$\frac{V}{0.10} = R(\Omega)$$

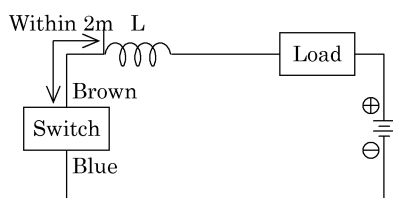


Fig.6 · Choke coil
L= a couple hundred μ H to a couple mH surpassing high frequency characteristic
· Install it near by a switch (within 2m).

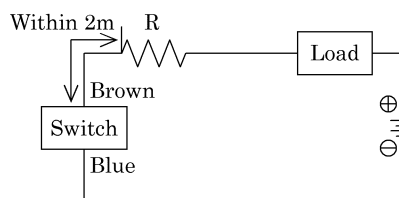


Fig.7 · Dash current restriction resistor.
R=As much large resistor as the load circuit can afford.
· Install it near by a switch (within 2m).

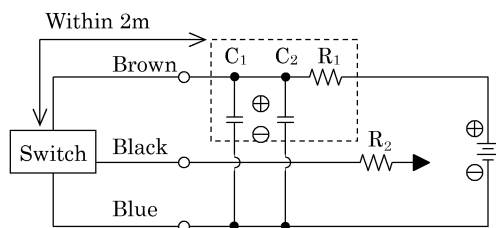


Fig.8 · Electric power noise absorptive circuit.
 C_1 =20 to 50 μ F electrolytic capacitor (Withstand voltage 50V or more)
 C_2 =0.01 to 0.1 μ F ceramic capacitor
 R_1 =20 to 30 Ω
· Dash current restriction resistor.
 R_2 =As much large resistor as the load circuit can afford.
· Install it near by a switch (within 2m).

- 3) Connection to a programmable controller (Sequencer).
Type of connection varies depending upon the model of the programmable controller. Refer to the following Fig. 9 to 13 respectively.

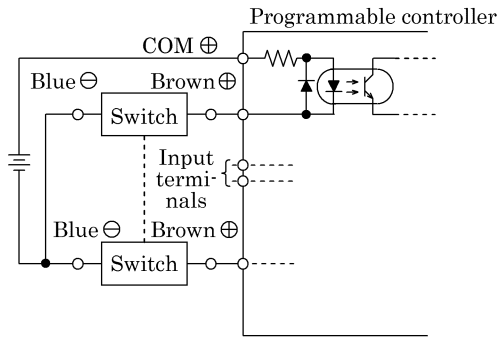


Fig.9 An example of T2(Y) connection to source input type (an external power source)

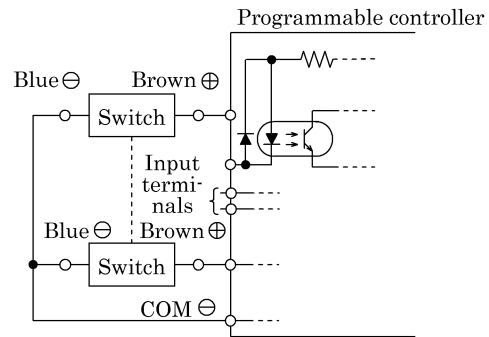


Fig.10 An example of T2(Y) connection to source input type (an internal power source)

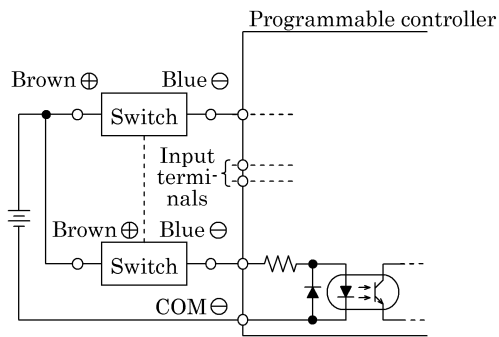


Fig.11 An example of T2(Y) connection to sink input type

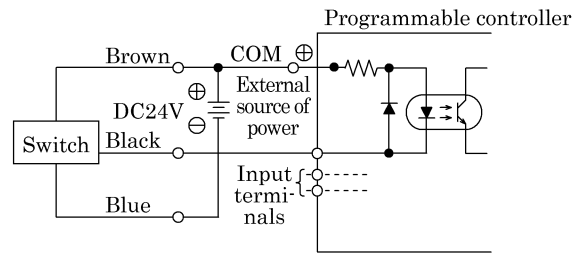


Fig.12 An example of T3(Y) connection to source input type (an external power source)

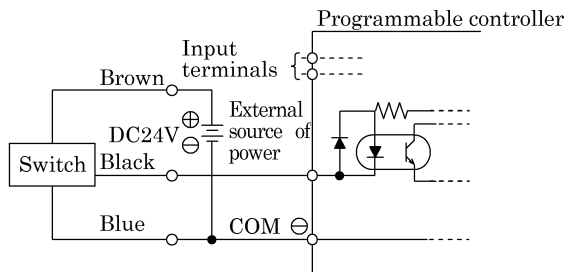


Fig.13 An example of T3 connection to source input type (an internal power source)
The T3(Y) switch cannot be connected to the sink input.

4) Series connection


The total voltage will decrease when the T2 switches connections have a leak. Therefore, confirm the input specifications for the programmable controllers, which are the connecting load. However, dimming or total failure of the indicator light may exist.


T3 switches hardly ever leak. When less than $10 \mu A$, then leakage may occur. Usually dimming and failure of the indicator light do not occur

5) Serial connection

When two or more T2※ switches are connected in series, the voltage drop is equal to the sum of the voltage drops in all of the connected switches. The voltage applied to the load is the result of subtracting the total voltage drop from the power source voltage. It is necessary to determine the number of switches to be connected based on the specifications of the load. When two or more T3※ switches are connected in series, the voltage drop is equal to the sum of the voltage drops in all the connected switches as in the case of the T2※ switches. The current flowing through the switches is equivalent to the sum of the current consumption of the connected switches as shown in the figure below and the load current. Determine the number of switches to be connected based on the specifications of the load so that the current will not exceed the maximum load current.

The indicator light turns ON only when all switches are ON.

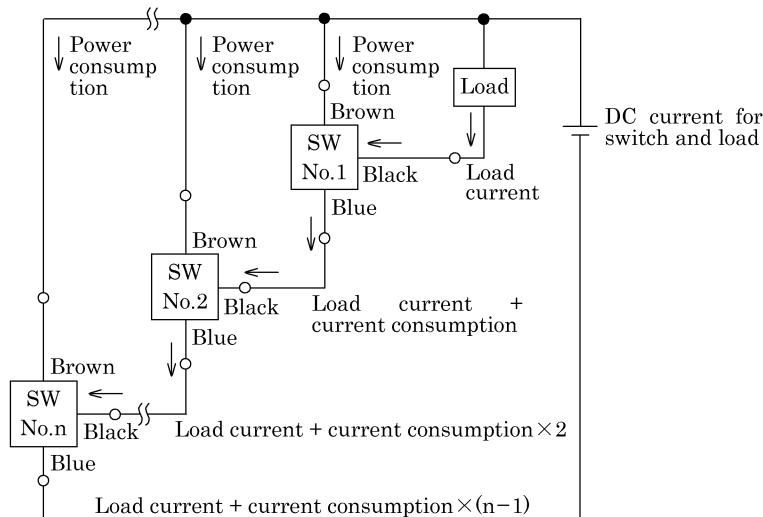

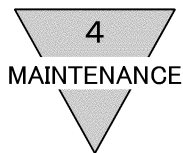

4. MAINTENANCE

4.1 Periodical Inspection

- 1) In order to upkeep the cylinder in optimum condition, carry out periodic inspection once or twice a year.
- 2) Inspection items
 - (1) Check the bolts and nuts fitting the piston rod end brackets and mounting brackets for slackening.
 - (2) Check to see that the cylinder operates smoothly.
 - (3) Check any change of the piston speed and cycle time.
 - (4) Check for internal and/or external leakage.
 - (5) Check the piston rod for flaw (scratch) and deformation.
 - (6) Check the stroke for abnormality.

See “Trouble shooting”, 5 should there be any trouble found, also carry out additional tightening if bolts, nuts, etc. are slackened.

4.2 Disassembly


- 1) This cylinder is able to be disassembled.
Replace component parts listed in Expendable parts List by disassembling cylinder referring to internal structure diagram when air leakage is ever occurred.
- 2) Remove piston rod and rod metal after removing C shape snap ring for the purpose of disassembly.

4.3 Assembly


- 1) Clean each component parts.
- 2) Take reversed sequence of disassembly to assemble cylinder after cleaning parts. Carefully avoid giving damage to packings to prevent malfunction or air leakage.
- 3) Apply a film of high grade grease (Litium alkali base) over the inner surface of cylinder tube, outer surface of piston and packings.

4.4 Internal structure drawings and Expendable parts list


- SSD - G2/G3 - $\phi 16$
(Double acting·Coolant proof type)

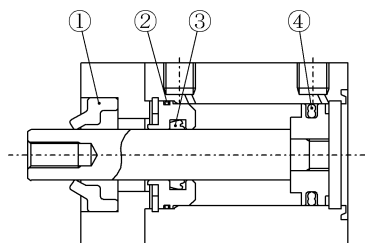


- SSD - G2L/G3L - $\phi 16$
(Double acting·Coolant proof type·With switch)

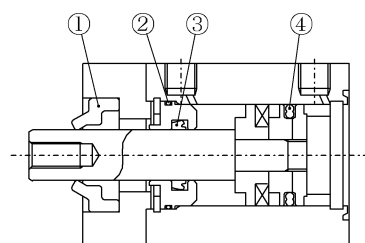


- SSD - G2/G3 - $\phi 20, \phi 25$
(Double acting·Coolant proof type)

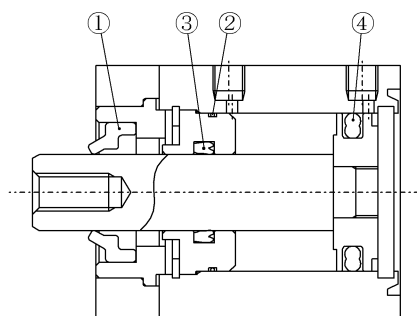


- SSD - G2L/G3L - $\phi 20, \phi 25$
(Double acting·Coolant proof type·With switch)

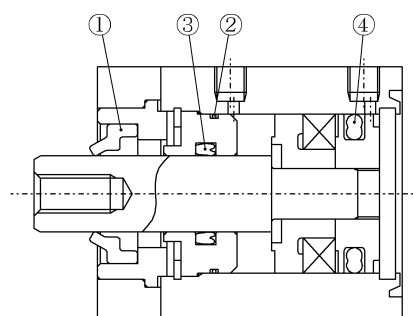


- SSD - G2/G3 - $\phi 32$
(Double acting·Coolant proof type)

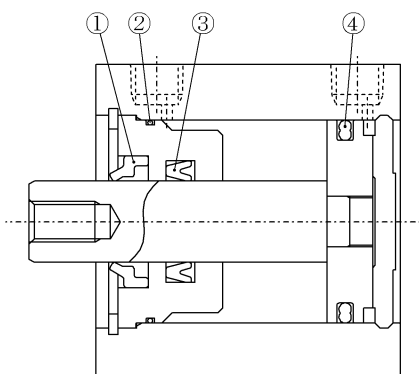


- SSD - G2L/G3L - $\phi 32$
(Double acting·Coolant proof type·With switch)

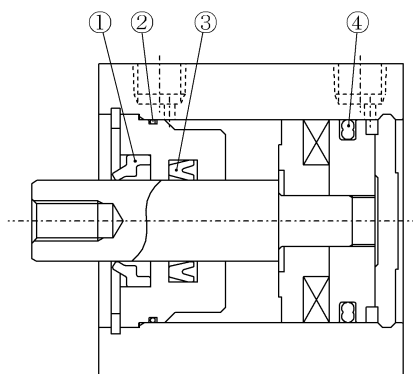

- SSD - G2/G3 - $\phi 40$ to $\phi 100$
(Double acting·Coolant proof type)

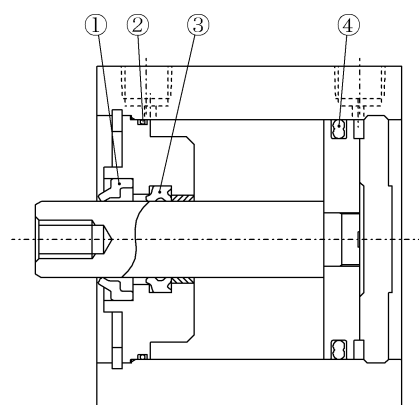


- SSD - G2L/G3L - $\phi 40$ to $\phi 100$
(Double acting·Coolant proof type·With switch)

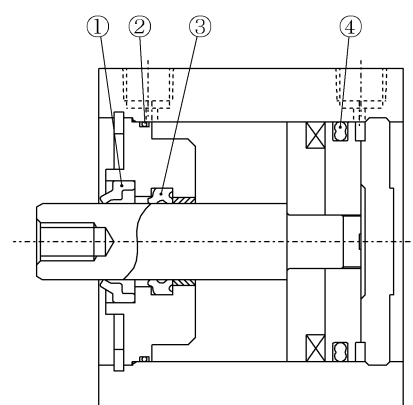


Expendable parts list (Specify the kit No. on your purchase order.)

Bore size (mm)	Parts No. Parts name Kit No.	①	②	③	④
		Scraper	Rod metal gasket	Rod packing	Piston packing
φ 16	SSD-G2-16K	SDB-8	F3-657973	MYR-8	PSD-16
	SSD-G3-16K	SDB-8F	F4-660814-16	MYR-8F	PSL-16F
φ 20	SSD-G2-20K	SDB-10	F3-657968	MYR-10	PSD-20
	SSD-G3-20K	SDB-10F	F4-165898	MYR-10F	PSD-20F
φ 25	SSD-G2-25K	SDB-12	F3-657969	MYR-12	PSD-25
	SSD-G3-25K	SDB-12F	F4-165899	MYR-12F	PSD-25F
φ 32	SSD-G2-32K	SDB-16	F3-657975	MYR-16	PSD-32
	SSD-G3-32K	SDB-16F	F4-660814-32	MYR-16F	PSD-32F
φ 40	SSD-G2-40K	SDB-16	F3-657976	F4-428463	PSD-40
	SSD-G3-40K	SDB-16F	F4-660814-40	PDU-16F	PSD-40F
φ 50	SSD-G2-50K	SDB-20	F3-657977	F4-428464	PSD-50
	SSD-G3-50K	SDB-20F	F4-660814-50	PDU-20F	PSD-50F
φ 63	SSD-G2-63K	SDB-20	AS568-035	F4-428464	PSD-63
	SSD-G3-63K	SDB-20F	AS568-035 (fluorine)	PDU-20F	PSD-63F
φ 80	SSD-G2-80K	SDB-25	AS568-041	F4-428465	PSD-80
	SSD-G3-80K	SDB-25F	AS568-041 (fluorine)	PDU-25F	PSD-80F
φ 100	SSD-G2-100K	SDB-30	AS568-044	F4-428466	PSD-100
	SSD-G3-100K	SDB-30F	AS568-044 (fluorine)	PDU-30F	PSD-100F


- SSD - KG2/KG3 - $\phi 16$
(Double acting·High load·Coolant proof type)

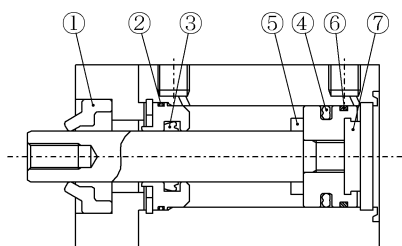


- SSD - KG2L/KG3L - $\phi 16$
(Double acting·High load·Coolant proof type·With switch)

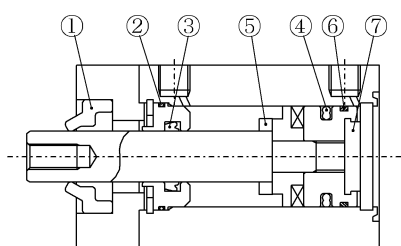


- SSD - KG2/KG3 - $\phi 20, \phi 25$
(Double acting·High load·Coolant proof type)

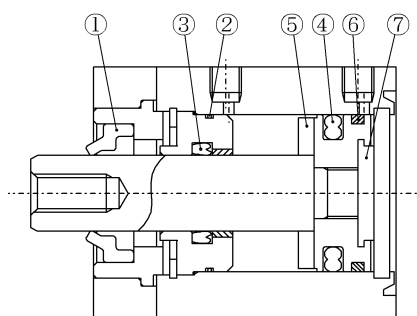


- SSD - KG2L/KG3L - $\phi 20, \phi 25$
(Double acting·High load·Coolant proof type·With switch)

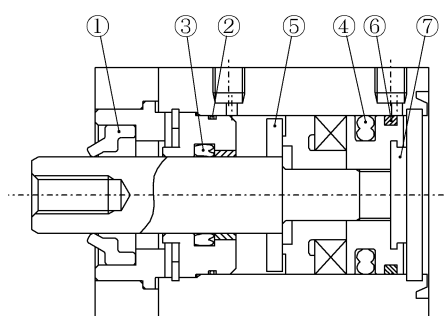


- SSD - KG2/KG3 - $\phi 32$
(Double acting·High load·Coolant proof type)

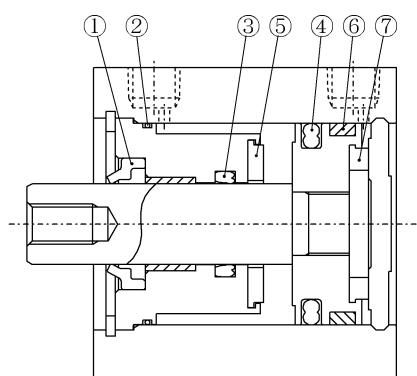


- SSD - KG2L/KG3L - $\phi 32$
(Double acting·High load·Coolant proof type·With switch)

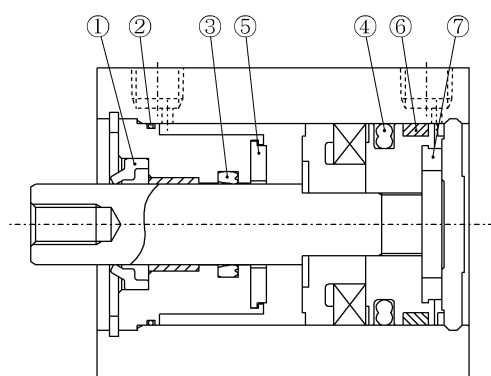

- SSD - KG2/KG3 - $\phi 40$ to $\phi 100$
(Double acting·High load·Coolant proof type)

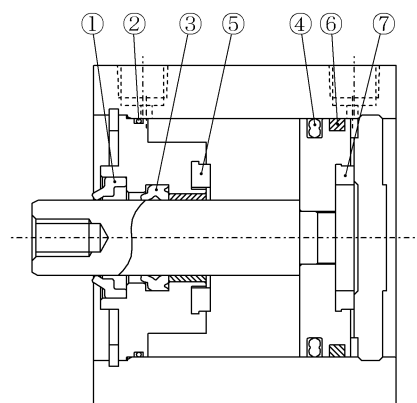

- SSD - KG2L/KG3L - $\phi 40$ to $\phi 100$
(Double acting·High load·Coolant proof type·With switch)

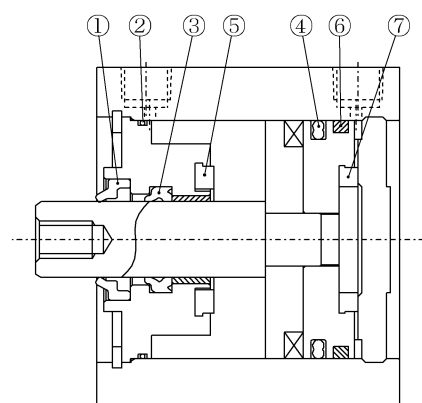

Expendable parts list (Specify the kit No. on your purchase order.)

Bore size (mm)	Parts No. Parts name Kit No.	①	②	③	④
		Scraper	Rod metal gasket	Rod packing	Piston packing
φ 16	SSD-KG2-16K	SDB-8	F3-657973	MYR-8	PSD-16
	SSD-KG3-16K	SDB-8F	F4-660814-16	MYR-8F	PSL-16F
φ 20	SSD-KG2-20K	SDB-10	F3-657968	MYR-10	PSD-20
	SSD-KG3-20K	SDB-10F	F4-165898	MYR-10F	PSD-20F
φ 25	SSD-KG2-25K	SDB-12	F3-657969	MYR-12	PSD-25
	SSD-KG3-25K	SDB-12F	F4-165899	MYR-12F	PSD-25F
φ 32	SSD-KG2-32K	SDB-16	F3-657975	MYR-16	PSD-32
	SSD-KG3-32K	SDB-16F	F4-660814-32	MYR-16F	PSD-32F
φ 40	SSD-KG2-40K	SDB-16	F3-657976	F4-428463	PSD-40
	SSD-KG3-40K	SDB-16F	F4-660814-40	PDU-16F	PSD-40F
φ 50	SSD-KG2-50K	SDB-20	F3-657977	F4-428464	PSD-50
	SSD-KG3-50K	SDB-20F	F4-660814-50	PDU-20F	PSD-50F
φ 63	SSD-KG2-63K	SDB-20	AS568-035	F4-428464	PSD-63
	SSD-KG3-63K	SDB-20F	AS568-035 (fluorine)	PDU-20F	PSD-63F
φ 80	SSD-KG2-80K	SDB-25	AS568-041	F4-428465	PSD-80
	SSD-KG3-80K	SDB-25F	AS568-041 (fluorine)	PDU-25F	PSD-80F
φ 100	SSD-KG2-100K	SDB-30	AS568-044	F4-428466	PSD-100
	SSD-KG3-100K	SDB-30F	AS568-044 (fluorine)	PDU-30F	PSD-100F

Parts No.		⑤	⑥	⑦
Bore size (mm)	Parts name Kit No.	Cushion rubber (R)	Wear ring	Cushion rubber (H)
φ 16	SSD-KG2-16K	F4-160424	F4-162726	F4-659112
	SSD-KG3-16K			
φ 20	SSD-KG2-20K	F4-116102	F4-125610	
	SSD-KG3-20K			
φ 25	SSD-KG2-25K	F4-116103	F4-161716	F4-659113
	SSD-KG3-25K			
φ 32	SSD-KG2-32K	F4-659049	F4-654960	F4-659049
	SSD-KG3-32K			
φ 40	SSD-KG2-40K	F4-659039	F4-650239	F4-659039
	SSD-KG3-40K			
φ 50	SSD-KG2-50K	F4-659026	F4-650240	F4-659026
	SSD-KG3-50K			
φ 63	SSD-KG2-63K	F4-659069	F4-650241	F4-659069
	SSD-KG3-63K			
φ 80	SSD-KG2-80K	F4-162661	F4-650242	F4-162661
	SSD-KG3-80K			
φ 100	SSD-KG2-100K	F4-659630	F4-650243	F4-659630
	SSD-KG3-100K			

5. TROUBLE SHOOTING

1) Cylinder

Trouble	Causes	Remedies
Does not operate.	No pressure or inadequate pressure.	Provide an adequate pressure source.
	Signal is not transmitted to direction control valve.	Correct the control circuit.
	Improper or misalignment of installation.	Correct the installation state and/or change the mounting style.
	Broken piston packing	Replace the piston packing.
Does not function smoothly.	Speed is below the low speed limit	Limit the load variation.
	Improper or misalignment of installation.	Correct the installation state and/or change the mounting style.
	Exertion of transverse (lateral) load.	Install a guide. Revise the installation state and/or change the mounting style.
	Excessive load.	Increase the pressure itself and/or the inner diameter of the tube.
	Speed control valve is built in the way of "Meter in" circuit.	Change the meter-out circuit of the speed control valve.
Breakage and / or deformation	Impact force due to high speed operation	Turn the speed down. Reduce the load and/or install a mechanism with more secured cushion effect (e.g. external cushion mechanism).
	Exertion of transverse load.	Install a guide. Reverse the installation state and/or change the mounting style.

2) Switch

Troubles	Causes	Remedies
Indicator light is not lit	Deposited contact point	Replace the switch.
	Excessive load than rated capacity	Replace the relay with a recommended one or replace the switch.
	Damaged indicator light	Replace the switch.
	Inadequate incoming signal	Review the external signal circuit and remove the causes.
Switch does not function right.	Broken circuit	Replace the switch.
	Inadequate incoming signal	Review the external signal circuit and remove the causes.
	Improper voltage	Correct voltage to specified.
	Incorrect location of switch	Correct its location.
	Aberrant position of switch	Set it back to original position and tighten the mounting device.
	Incorrect direction of switch mounting	Correct the direction of the switch mounting.
	Relay is unable to respond properly	Turn the speed down. Replace the relay with a recommended one.
	Excessive load than rated capacity	Replace the relay with a recommended one or replace the switch.
Switch does not return.	Piston is not moving	Make the piston move.
	Deposited contact point	Replace the switch
	Excessive load (relay) than rated capacity	Replace the relay with a recommended one or replace the switch.
	The ambient temperature is out of the specification range	Adjust the ambient temperature within the range of -10 to 60°C
	Existence of a foreign magnetic field	Shield the magnetic field.
	Inadequate incoming signal	Review the external signal circuit and remove the causes.

6. HOW TO ORDER


6.1 Product Number Coding

(1) Double acting · Coolant proof type

● Without switch



● With switch

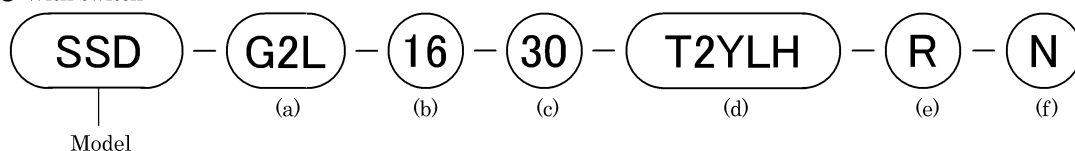

(a) Degree of protection level		(b) Bore size (mm)	
G2	Coolant proof scraper + Packing: NBR	16	φ 16
G3	Coolant proof scraper + Packing: FKM	20	φ 20
G2L	Coolant proof scraper + Packing: NBR, with switch	25	φ 25
G3L	Coolant proof scraper + Packing: FKM, with switch	32	φ 32
		40	φ 40
		50	φ 50
		63	φ 63
		80	φ 80
		100	φ 100


(c) Stroke (mm)			(d) Switch model No.			
φ 16, φ 20	φ 25～φ 50	φ 63～φ 100	Lead wire Straight type	Lead wire L-shaped type	Indicator light	Lead wire
5	5	5				
10	10	10	T2YLH※	T2YLV※	Solid state 2 color indicator	2-wire
15	15	20	T3YLH※	T3YLV※		3-wire
20	20	30	※ mark indicates the length of lead wire.			
25	25	40				
30	30	50				
	40					
	50					

(e) Qty. of switch		(f) Option	
R	Rod side, 1 ea.	N	Rod end male thread
H	Head side, 1 ea.		
D	2 ea.		


※ Lead wire length	
No code	1m (Standard)
3	3m (Optional)
5	5m (Optional)

(2) Double acting · High load · Coolant proof type

● Without switch



● With switch

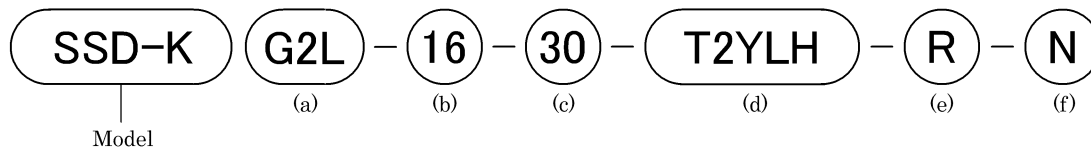

(a) Degree of protection level		(b) Bore size (mm)	
G2	Coolant proof scraper + Packing: NBR	16	φ 16
G3	Coolant proof scraper + Packing: FKM	20	φ 20
G2L	Coolant proof scraper + Packing: NBR, with switch	25	φ 25
G3L	Coolant proof scraper + Packing: FKM, with switch	32	φ 32
		40	φ 40
		50	φ 50
		63	φ 63
		80	φ 80
		100	φ 100


(c) Stroke (mm)			(d) Switch model No.			
φ 16, φ 20	φ 25 ~ φ 50	φ 63 ~ φ 100	Lead wire Straight type	Lead wire L-shaped type	Indicator light	Lead wire
5	10	10				
10	15	20	T2YLH※	T2YLV※	Solid state	2-wire
15	20	30	T3YLH※	T3YLV※	2 color indicator	3-wire
20	25	40	※ mark indicates the length of lead wire.			
25	30	50				
30	40	60				
40	50	70				
50	60	80				
	70	90				
	80	100				
	90					
	100					


(e) Qty. of switch		(f) Option	
R	Rod side, 1 ea.	N	Rod end male thread
H	Head side, 1 ea.		
D	2 ea.		

※ Lead wire length	
No code	1m (Standard)
3	3m (Optional)
5	5m (Optional)

6.2 Component parts Model coding

● Switch main body only

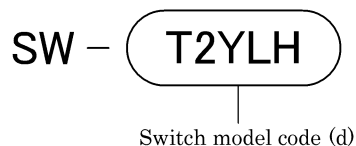

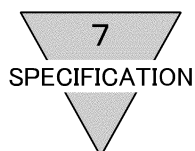

7. SPECIFICATION

7.1 Product Specifications

Model	SSD-G2·G3									
Item	SSD-G2L·G3L (With switch)									
Bore size	mm	φ 16	φ 20	φ 25	φ 32	φ 40	φ 50	φ 63	φ 80	φ 100
Actuation		Double acting·Coolant proof type								
Working fluid		Compressed Air								
Max. working pressure	MPa	1.0								
Min. working pressure	MPa	0.15						0.1		
Proof pressure	MPa	1.6								
Ambient temperature	℃	-10 to 60 (No freezing)								
Port size		M5×0.8			Rc1/8		Rc1/4		Rc3/8	
Stroke tolerance	mm	+1.0 0								
Working piston speed	mm/s	50 to 500						50 to 300		
Cushion		Without Cushion								
Lubrication		Not required (Use Grade 1 ISO VG 32 Turbine oil, if lubrication is preferred)								
Allowable energy absorption	J	0.01	0.016	0.021	0.025	0.092	0.1	0.12	0.27	0.56

Model	SSD-KG2·KG3									
Item	SSD-KG2L·KG3L (With switch)									
Bore size	mm	φ 16	φ 20	φ 25	φ 32	φ 40	φ 50	φ 63	φ 80	φ 100
Actuation		Double acting·High load·Coolant proof type								
Working fluid		Compressed Air								
Max. working pressure	MPa	1.0								
Min. working pressure	MPa	0.15						0.1		
Proof pressure	MPa	1.6								
Ambient temperature	℃	-10 to 60 (No freezing)								
Port size		M5×0.8			Rc1/8		Rc1/4		Rc3/8	
Stroke tolerance	mm	+2.0 0								
Working piston speed	mm/s	50 to 500						50 to 300		
Cushion		Rubber cushion								
Lubrication		Not required (Use Grade 1 ISO VG 32 Turbine oil, if lubrication is preferred)								
Allowable energy absorption	J	0.09	0.157	0.157	0.402	0.628	0.98	1.56	2.51	7.92

7.2 Switch Specification

Type・Model	Solid state 2 wire	Solid state 3 wire
Item	T2YLH, T2YLV	T3YLH, T3YLV
Applications	Programmable controller	Programmable controller, relay,
Power supply voltage	—	DC10 to 28V
Load voltage	DC10 to 30V	DC30V or less
Load circuit	5 to 20mA	50mA or less
Internal voltage drop	4V or less	0.5V or less
Indicator light	Red / Green LED (ON lighting)	
Leakage current	1mA or less	10 μ A or less
Read wire length (Note1)	Standard 1m (Oil resistant vinyl cabtire cord 2 conductor 0.3mm)	Standard 1m (Oil resistant vinyl cabtire cord 3 conductor 0.2mm)
Shock resistance	980m/s ²	
Insulation resistance	100M Ω over at DC500V megger	
Withstand voltage	No failure at AC1000V for one minute	
Operating range	3 to 8mm(ϕ 12 to ϕ 32)、5 to 10mm(ϕ 40 to ϕ 100)	
Hysteresis	1.5mm or less	
Ambient temperature	-10 to 60°C	
Storage temperature	-20 to 80°C	
Degree of protection	IEC Standards IP67, JIS C0920 (water tight type), oil resistance	

Note1 : 3m or 5m long lead wire is optionally available.